


# Instruction of ZJD-6

**1, Prepare the electricity supply line**

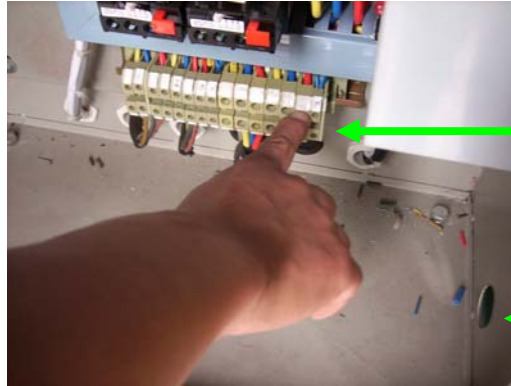


**2, close all the valves**

**3, collect the oil-in pipe**



**4, collect the oil-out pipe**

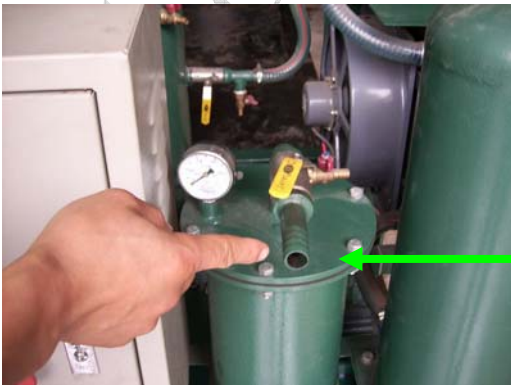


**5, Open this two valves**




**6, Open the vacuum pump, press the button**



**7, Checking the liquid meter, when the oil level reach the red line, open the oil out valve**

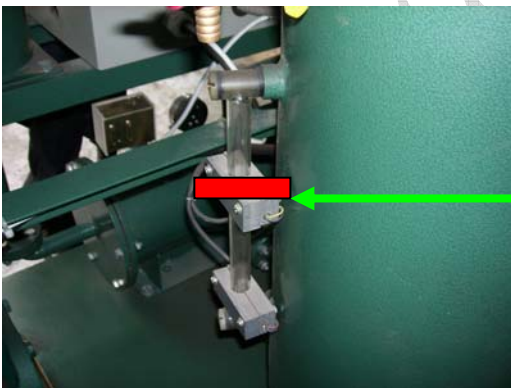

8, If much foam in the liquid meter, please open the valve slowly

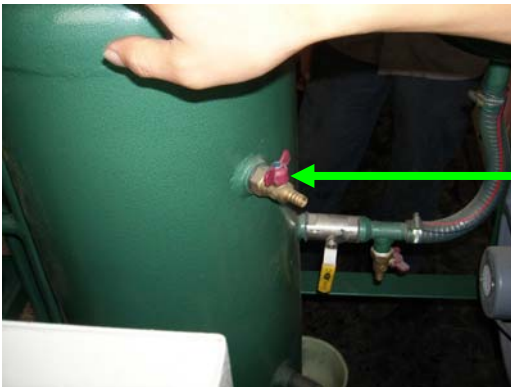


8, Adjust the heating temperature by control cabinet



9, If you want to checking the oil sample, you can use the oil sample valve to get it



**10, If here are oil in the pipe C, you can close the valve B and open the valve A let the oil back to vacuum separation tank**

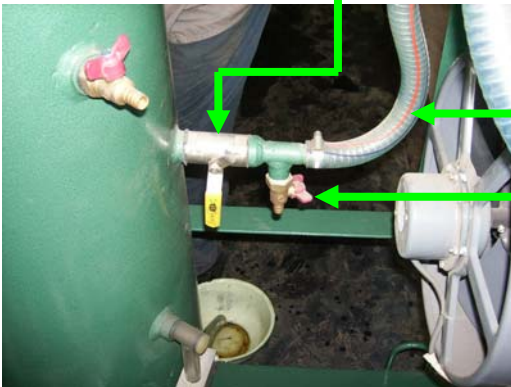

**11, checking the liquid meter is the water is full close valve B and open the valve A, let the water out**



**12, Another water tank, close valve A, open B,C let water out**



13, Checking the two pressure meter, if the pressure too high, please clean the first filter



14, If you want to stop the machine, firstly close the oil-in pump and the heating



15, Close the oil-in valve







**16, Press the oil out pump button**



**17, Open the valve, let the vacuum down**

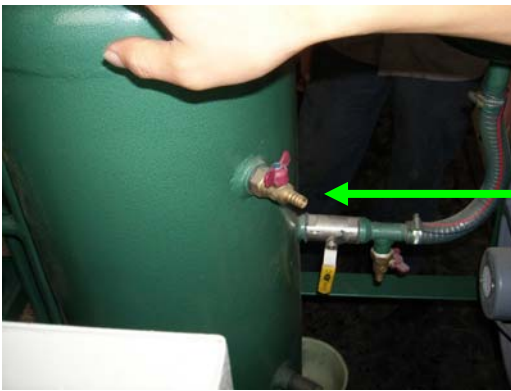

**18, Open the valve, let the oil in the other tanks out**

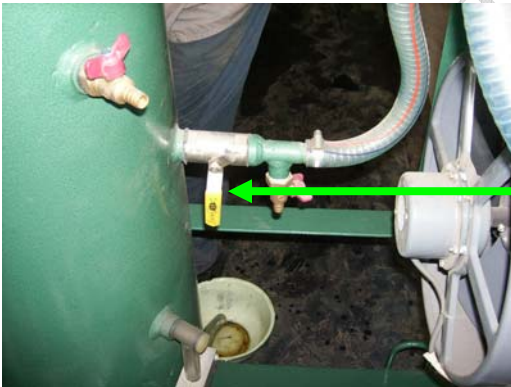

19, When here is not the oil out, you can press the button stop the oil out pump

