

InteliLite<sup>NT</sup>

# InteliLite NT<sup>®</sup> AMF

## Modular Gen-set Controller

Compact Controller for Stand-by Operating Gen-sets

(IL-NT AMF20/25 unit)

SW version 1.3, July 2008



## Reference Guide



# Table of Contents

|   |    |
|---|----|
| Table of Contents .....   | 2  |
| General Guidelines .....  | 4  |
| What describes this manual? .....   | 4  |
| !! Warnings !! .....  | 4  |
| Text .....  | 4  |
| General Description .....   | 6  |
| Description of the controller system (with all options) .....             | 6  |
| What is in the package? .....   | 6  |
| IL-NT RS232 communication module .....                                    | 6  |
| IL-NT S-USB Service USB communication module .....                        | 10 |
| IL-NT AOUT8 gauge driver module .....                                     | 10 |
| IL-NT RD (SW) Remote display software .....                               | 11 |
| Remote annunciator IGL - RA15 .....                                       | 11 |
| IG IOM/PTM module .....   | 12 |
| IG-IB Internet bridge .....   | 13 |
| User Interface .....  | 14 |
| IL-NT Terminals .....   | 15 |
| IL-NT terminals and face .....  | 15 |
| Recommended Wiring .....  | 16 |
| AMF – Wiring Diagram .....  | 16 |
| Stand-by Applications .....   | 17 |
| Contactors (set point MCB Logic = “CLOSE-OFF”) .....                      | 17 |
| ATS with two stable positions (set point MCB Logic = “CLOSE-ON”) .....    | 17 |
| ATS with three stable positions (set point MCB Logic = “CLOSE-OFF”) ..... | 18 |
| Getting Started .....   | 19 |
| How to install .....  | 19 |
| Current measurement .....   | 22 |
| Voltage measurement .....   | 23 |
| Single phase applications .....   | 23 |
| Analog inputs .....   | 24 |
| Extension modules (CAN bus) connection .....                              | 28 |
| Inputs and Outputs .....  | 29 |
| Binary inputs IL-NT - default .....                                       | 29 |
| Binary inputs – list .....  | 29 |
| Binary outputs IL-NT - default .....                                      | 32 |
| Binary outputs - list .....   | 32 |
| Analog inputs .....   | 39 |
| Analog outputs .....  | 40 |
| Setpoints .....   | 41 |
| Password .....  | 41 |
| Basic Settings .....  | 41 |
| Engine Params .....   | 43 |
| Engine Protect .....  | 46 |
| Gener Protect .....   | 48 |
| AutoMains Fail .....  | 50 |
| Date/Time .....   | 53 |
| Sensors Spec .....  | 54 |
| *Extension I/O .....  | 54 |
| SMS/E-Mail .....  | 55 |
| *ECU-controlled engine support .....                                      | 56 |
| Values read from ECU .....  | 57 |
| Diagnostic messages read from ECU .....                                   | 57 |
| Analog inputs .....   | 58 |
| Connection description .....  | 58 |
| Sensor Specification .....  | 61 |

|   |    |
|---|----|
| Background of the sensor calibration.....   | 61 |
| Default sensor curves .....                 | 61 |
| Function Description.....                   | 62 |
| OFF Mode .....                              | 62 |
| MAN Mode .....                              | 62 |
| AUT Mode .....                              | 64 |
| TEST mode .....                             | 64 |
| Circuit breakers timing .....               | 65 |
| Alarm Management .....                      | 67 |
| Sensor fail (FLS) .....                     | 67 |
| Warning (WRN).....                          | 67 |
| Shut down (SD).....                         | 67 |
| Mains failure (MF) .....                    | 67 |
| Gen-set Operation States.....               | 70 |
| List of possible events.....                | 70 |
| History file.....                           | 72 |
| User Interface .....                        | 73 |
| Remote Control and Data Logging.....        | 74 |
| Direct connection to the PC .....           | 74 |
| PC software – LiteEdit.....                 | 74 |
| Modbus protocol.....                        | 74 |
| Remote Communication.....                   | 81 |
| Internet connection.....                    | 81 |
| Recommended ISDN modem .....                | 81 |
| Recommended GSM modem.....                  | 81 |
| Mobile SIM card setting.....                | 81 |
| Maintenance .....                           | 82 |
| Backup battery replacement .....            | 82 |
| Technical Data.....                         | 84 |
| Power supply.....                           | 84 |
| Operating conditions .....                  | 84 |
| #Low Temperature modification .....         | 84 |
| Dimensions and weight .....                 | 85 |
| Mains and generator .....                   | 85 |
| Binary inputs and outputs.....              | 85 |
| Analog inputs.....                          | 85 |
| Speed pick-up input .....                   | 86 |
| D+ Function.....                            | 86 |
| *CAN bus interface.....                     | 86 |
| IL-NT RS232 interface (optional card) ..... | 87 |
| IL-NT S-USB interface (optional card) ..... | 87 |
| IL-NT AOUT8 interface (optional card) ..... | 87 |
| IGS-PTM .....                               | 87 |
| IGL-RA15 .....                              | 88 |
| IG-IB.....                                  | 88 |

# General Guidelines

## *What describes this manual?*

---

This manual describes „AMF 20/25“ software, which is designed for single set, stand-by applications. What is the purpose of the manual?  
 This manual provides general information how to install and operate IntelliLite NT AMF20/25 controller.  
*This manual is dedicated for*  
 Operators of gen-sets  
 Gen-set control panel builders  
 For everybody who is concerned with installation, operation and maintenance of the gen-set

## **!! Warnings !!**

---

### Remote control

IntelliLite controller can be remotely controlled. In case of the work on the gen-set check, that nobody can remotely start the engine.

To be sure:

- Disconnect remote control via RS232 line
- Disconnect input REM START/STOP

or

Disconnect output STARTER and outputs GCB CLOSE/OPEN and MCB CLOSE/OPEN

Because of large variety of IntelliLite<sup>NT</sup> parameters settings, it is not possible to describe any combination. Some of IntelliLite functions are subject of changes depend on SW version. The data in this manual only describes the product and are not warranty of performance or characteristic.

### IntelliLite controller SW and HW versions compatibility

Be aware that IL-NT SW version 1.2.1 and older is not possible to use with IL-NT HW version 1.3 and newer!!! Software IL-NT 1.3 is compatible with IL-NT hardware version 1.3 and older.

## **Text**

---

|                              |   |
|------------------------------|---|
| <b>PAGE</b>                  | (Capital letters in the frame) buttons on the front panel |
| <i>Break Return</i>          | (Italic) set points                                       |
| <b>Generator protections</b> | (Bold) Set point group                                    |
| REMOTE START/STOP            | (Capital letters) binary inputs and outputs               |
| *Something                   | (Symbol * before text) valid only for IL AMF 25           |

#### **Note:**

ComAp believes that all information provided herein is correct and reliable and reserves the right to update at any time. ComAp does not assume any responsibility for its use unless otherwise expressly undertaken.

#### **Note:**

SW and HW must be compatible (e.g. IL-NT-AMF25 firmware and IL-NT AMF25 HW) otherwise the function will be disabled. If wrong software is downloaded, message HARDWARE INCOMPATIBLE appears on controller screen. In this case use Boot load (jumper) programming – close Boot jumper and follow instructions in LiteEdit, download correct software.

**WARNING – VERY IMPORTANT !!!**

Every time you want disconnect following IntelliLite<sup>NT</sup> controller terminals:

- Mains voltage measuring and / or
- Binary output for MCB control and / or
- MCB Feedback

Switch IntelliLite to MAN or OFF Mode or disconnect the Binary outputs Starter and Fuel to avoid unexpected automatic start of gen-set and GCB closing.

**!!! CAUTION !!!**

***Dangerous voltage***

In no case touch the terminals for voltage and current measurement!

Always connect grounding terminals!

In any case do not disconnect IntelliLite<sup>NT</sup> CT terminals !

***Adjust set points***

All parameters are preadjusted to their typical values. But the set points in the “**Basic settings**” settings group **!!must!!** be adjusted before the first startup of the gen-set.

**!!! WRONG ADJUSTMENT OF BASIC PARAMETERS  
CAN DESTROY THE GEN-SET !!!**

**The following instructions are for qualified personnel only. To avoid personal injury do not perform any action not specified in this User guide !!!**

# General Description

## ***Description of the controller system (with all options)***

---

InteliLite<sup>NT</sup> AMF20/25 is a comprehensive AMF-controller for single generating sets operating in stand-by mode. IL-NT AMF25 features extended support of electronic engines and extension modules. InteliLite<sup>NT</sup> controllers are equipped with a powerful graphic display showing icons, symbols and bar-graphs for intuitive operation, which sets, together with high functionality, new standards in Gen-set controls.

InteliLite<sup>NT</sup> automatically starts the Gen-set, closes the Gen-set C.B. when all conditions are met, then stops the engine on external signal or by pressing push buttons.

InteliLite<sup>NT</sup> provides gas engine support without ventilation.

The key feature of InteliLite<sup>NT</sup> is its easy-to-use operation and installation. Predefined configurations for typical applications are available as well as user-defined configurations for special applications.

## ***What is in the package?***

---

| Accessories    | Description                           | Optional / Obligatory |
|----------------|---------------------------------------|-----------------------|
| IL-NT AMF      | InteliLite <sup>NT</sup> central unit | Obligatory            |
| IL-NT-RS232    | RS232 communication card              | Optional for AMF20/25 |
| IL-NT-S-USB    | Service USB communication card        | Optional for AMF20/25 |
| IL-NT-AOUT8    | Gauge driver card                     | Optional for AMF20/25 |
| *IL-NT RD (SW) | Remote display software               | Optional for AMF20/25 |
| IGL-RA15       | Remote annunciator                    | Optional for AMF20/25 |
| IG-IOM/PTM     | I/O extension module                  | Optional for AMF25    |
| IG-IB          | Internet communication bridge         | Optional for AMF20/25 |
| AT -LINK-CONV  | Service programming RS232 interface   | Optional for AMF20/25 |

\*Remote display for IL-NT controllers uses standard IL-NT controller with Remote display software

### ***Hint:***

For detailed information about extension modules used with IL-NT controllers, please see the IL-NT-Accessory Modules manual.

## ***IL-NT RS232 communication module***

---

IL-NT RS232 is optional plug-in card to enable InteliLite<sup>NT</sup> for RS232 communication. This is required for computer or Modbus connecting. Card inserts into expansion slot back on the controller.

To insert the module, you must open the cover first (use screwdriver to open) and then insert the module into slot. Once you have insert it, the module will snap under plastic teeth. It is supposed to be installed permanently. Should you need to remove it, the safest way is to remove whole back cover and than remove module manually.

### **How to install RS 232 communication module:**


### ***Hint:***

The following procedure is analogic also for other communication modules.

1. Insert a screwdriver into the slot of the cover.





2. Move the screwdriver to set apart the small cover. **Be careful!**

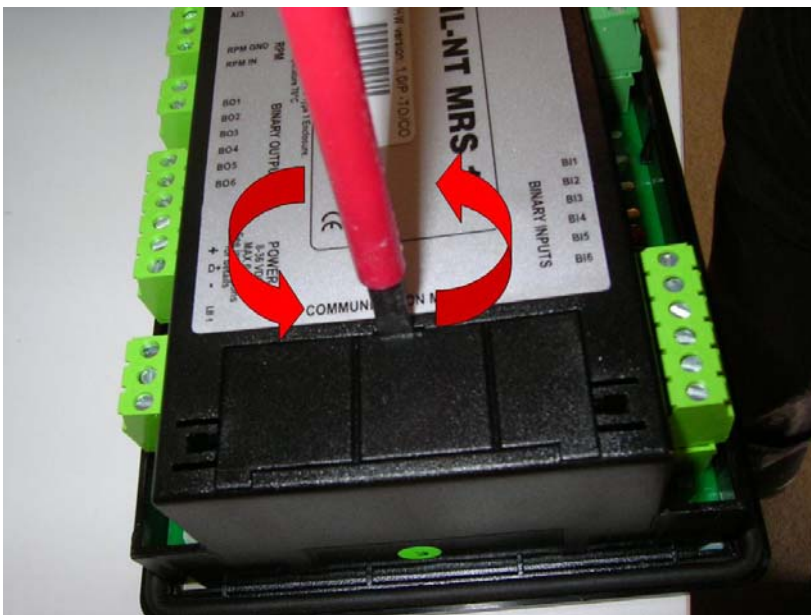

3. Remove the small cover.

4. Break apart the small cover into two pieces. **Do not throw away the smaller part!**

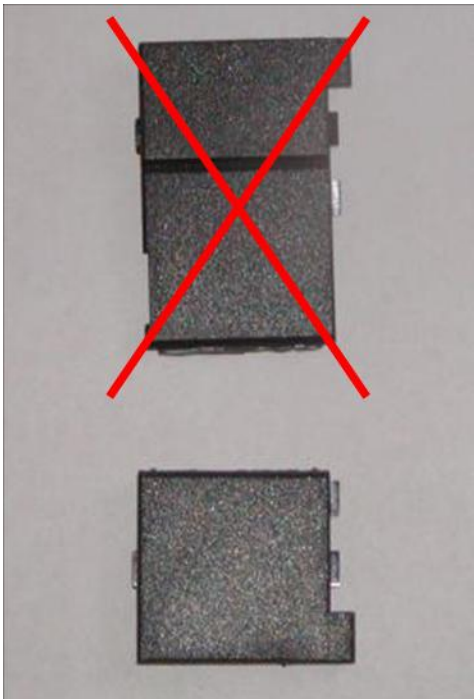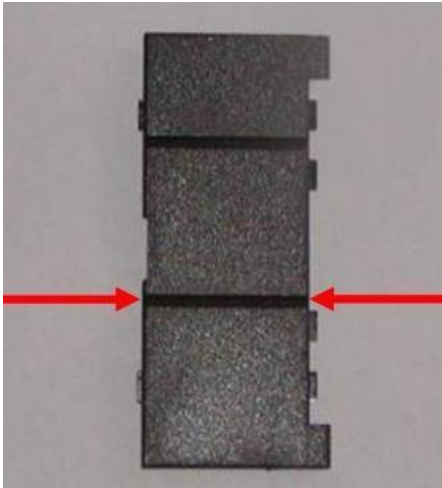

5. Take RS 232 communication module.







6. Plug RS 232 communication module into the slot of the controller.
7. Put back the small cover.



Hint:


When you insert RS 232 communication module, the boot jumper is hidden. For that reason we recommend to use RS 232 communication module with the boot jumper placed on it. See pictures below:

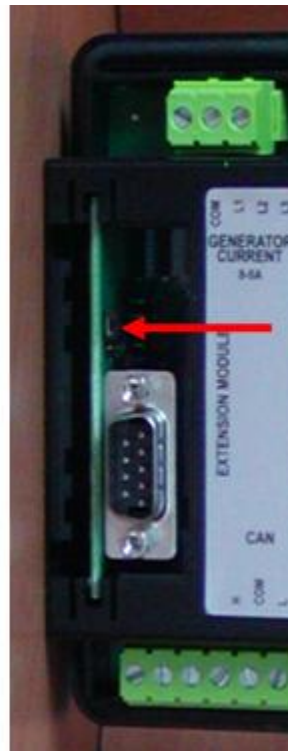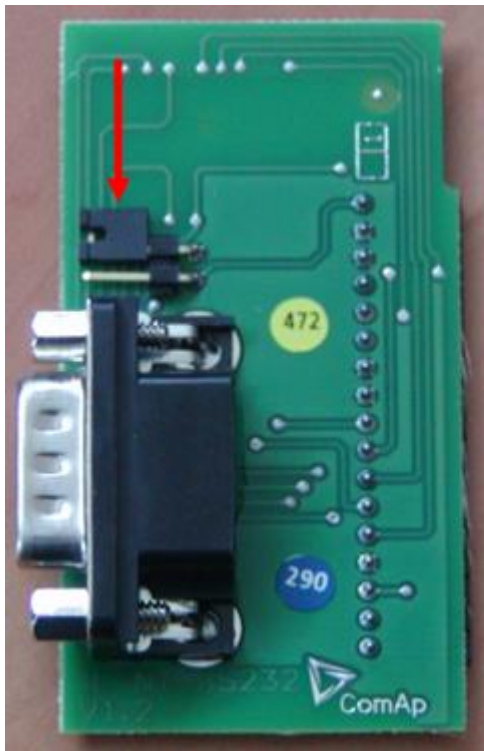

RS 232 communication module with the boot jumper.

## ***IL-NT S-USB Service USB communication module***

IL-NT S-USB is optional plug-in card to enable IntelliLite<sup>NT</sup> communication via USB port. This is required for computer or Modbus connecting. Card inserts into expansion slot back on the controller. To insert the module, please follow the instructions for IL-NT RS232 module, procedure is analogous. You must open the cover first (use screwdriver to open) and then insert the module into slot. Once you have inserted it, part of the module will remain over plastic box. It is supposed to be used as a service tool. When you need to remove it, grab module in cutouts and pull it up manually.

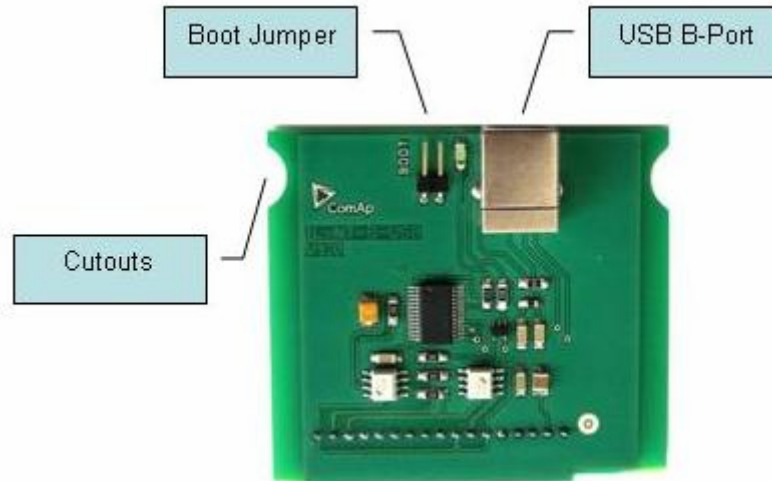

***Hint:***

Use the shielded USB A-B cable with this module! Recommended is ComAp cable – Order code: “USBCABLE”.


## ***IL-NT AOUT8 gauge driver module***

IL-NT AOUT8 is optional plug-in card. Through this card controller can drive up to 8 VDO style industrial/automotive gauges. Gauge type and value are configured in LiteEdit software. Any analog value from controller may be shown in that way.

To insert the module, you must open the cover first (use screwdriver to open) and then insert the module into slot. Once you have insert it, the module will snap under plastic teeth. It is supposed to be installed permanently. Should you need to remove it, the safest way is to remove whole back cover and than remove module manually.

Installing IL-NT AOUT8 module is similar to installing RS 232 module. The difference is that after installing IL-NT AOUT8 you do not put back the small cover.

IL-NT AOUT8 module:

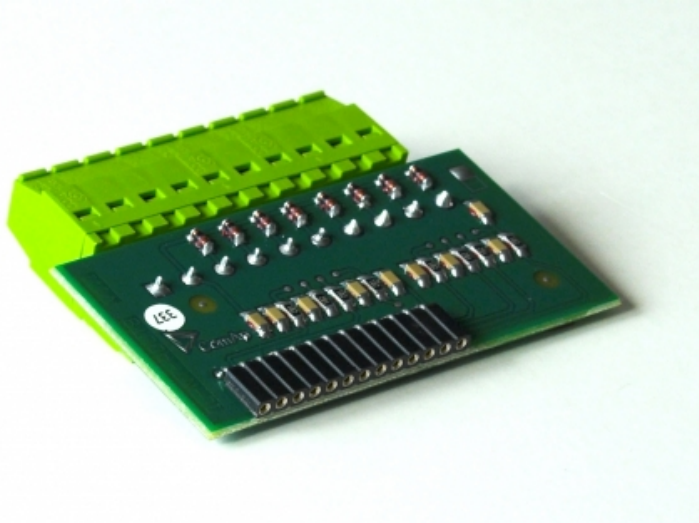

## ***IL-NT RD (SW) Remote display software***

---

IL-NT RD (SW) is remote display software for a controller. Remote display provides the same control and monitoring functions as controller itself. Remote display for IL-NT controllers uses standard IL-NT controller with Remote display software. No further programming of the display is required – unit is self configurable from the main controller. It is connected with the controller via RS232 line. Longer distances (up to 1200m) are possible when RS232/RS485 converters are used. In the future will be possible to use extension modules with RS485, specifically IL-NT-232-485 and IL-NT-ETH-485.

The IL-NT RD hardware version should fit to the master IL-NT, but it is also possible to use different HW version for remote display and master controller, of course losing some features, which are not present on the more simpler HW. For instance, if you use IL-NT AMF8 as a remote display for IL-NT AMF25, you will miss the Horn button on AMF8. You can use IL-NT MRS4 as a remote display for IL-NT MRS16, but in case you would use IL-NT MRS3, you would miss the GCB control on MRS3.

### Hint:

The remote display software is supposed to be available in the second half-year of 2008.


## ***Remote annunciator IGL - RA15***

---

The remote annunciator IGL-RA15 can be connected to the IL-NT unit via CAN bus. Any of the binary outputs can be configured (using LiteEdit software) to each LED diode on the RA15. The module can be also enabled or disabled using LiteEdit software.

If IGL-RA15 remote annunciator is not communicating with a controller via CAN bus, it activates a warning.

**See the documentation of RA15 for the technical and function description.**

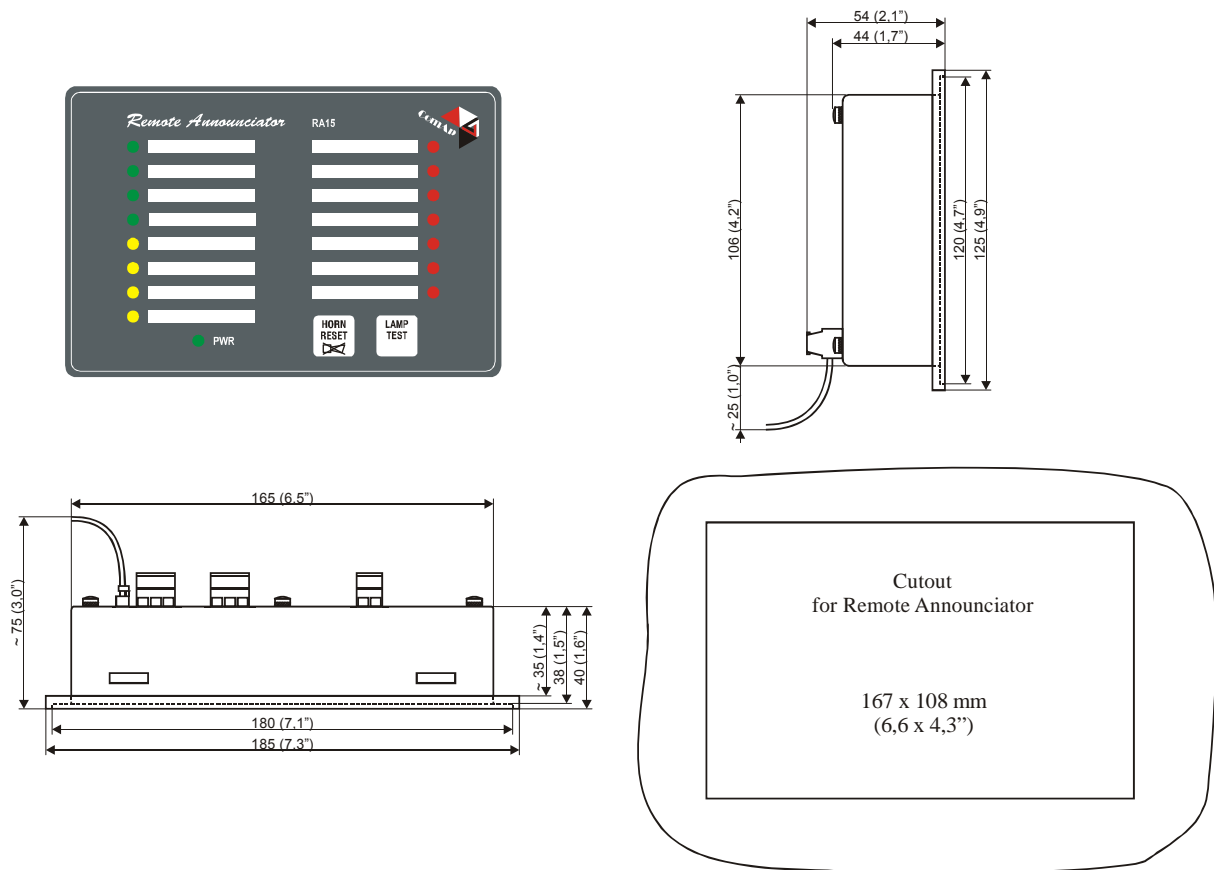

## IG IOM/PTM module

IG-IOM and IGS-PTM modules are I/O extension modules equipped with 8 binary inputs, 8 binary outputs, 4 analogue inputs and one analogue output. The module can be used for AMF25, MRS15, 16, 19 only.

- Binary inputs and outputs are configurable the same way like inputs and outputs on iL.
- Analogue inputs are configurable like iL with the limitation that the binary and tristate mode can not be used on PTM module.
- The protection of analogue IOM/PTM inputs is activated by overcrossing the limits, active only when the engine is running.
- IG-IOM analogue inputs are resistive (the same parameters like IL-NT) 0  $\Omega$ -2,4 k $\Omega$ . The module IOM is designed for especially VDO resistive sensors.
- IGS-PTM analogue inputs are configurable by jumpers to ranges 0-250 $\Omega$ , 0-100mV, 0-20mA. The module can be used especially for Pt100 sensors and current sensors. The module PTM is not suitable for VDO temperature sensor.

### Hint:

- For a description of setting IGS-PTM module with current/voltage sensors please see the Extension modules manual.
- When module is not configured by LiteEdit SW, controller does not show related values and setpoints

**Hint:**

If IGS-PTM is not communicating to a controller, ShutDown is activated.



See the documentation of IGS-PTM for the technical and function description.

## **IG-IB Internet bridge**

IG-IB Internet bridge enables IntelliLite<sup>NT</sup> for Ethernet/Internet communications. It is connected to controller via RS232 line.

See IntelliCommunication Guide for further details.



# User Interface

Since IL-NT 1.3 SW there is an interchangeable User Interface on controller. It allows two different modes of displaying controller menu.

The first mode called USER is dedicated for users who prefer easy function and need only monitor actual values of engine and generator, see alarms or change language settings.



Second mode is called ENGINEER and it is dedicated for advanced users, who desire to change the settings of controller, monitor all values and check the history of events.

Changing the mode of User Interface is possible from default measuring screen of controller by simultaneous pressing the ENTER and PAGE button and then press again PAGE. On screen will be displayed the choice of two different User Interfaces.

**Please see latest IL-NT Operator Guide for detailed description.**


# IL-NT Terminals

## IL-NT terminals and face

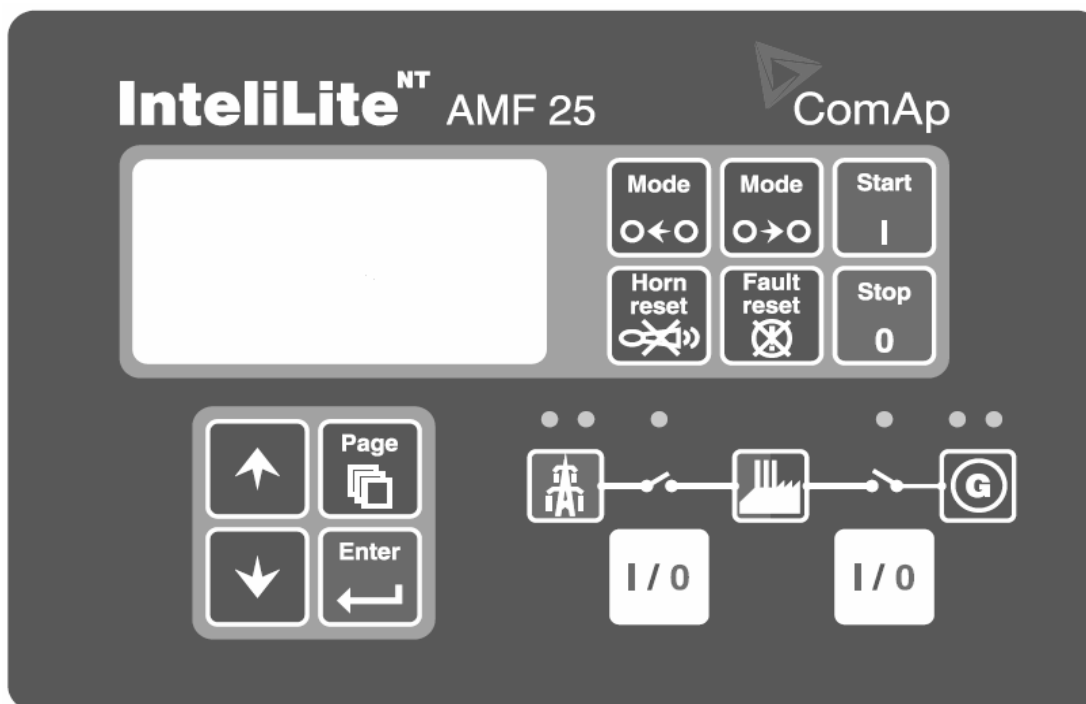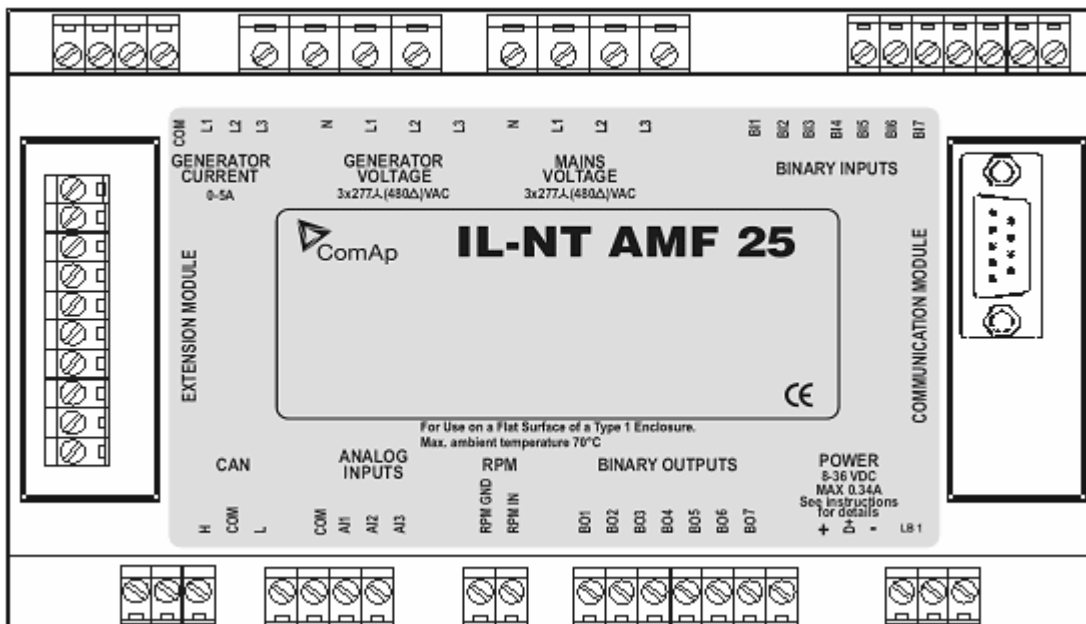

# Recommended Wiring

## AMF – Wiring Diagram

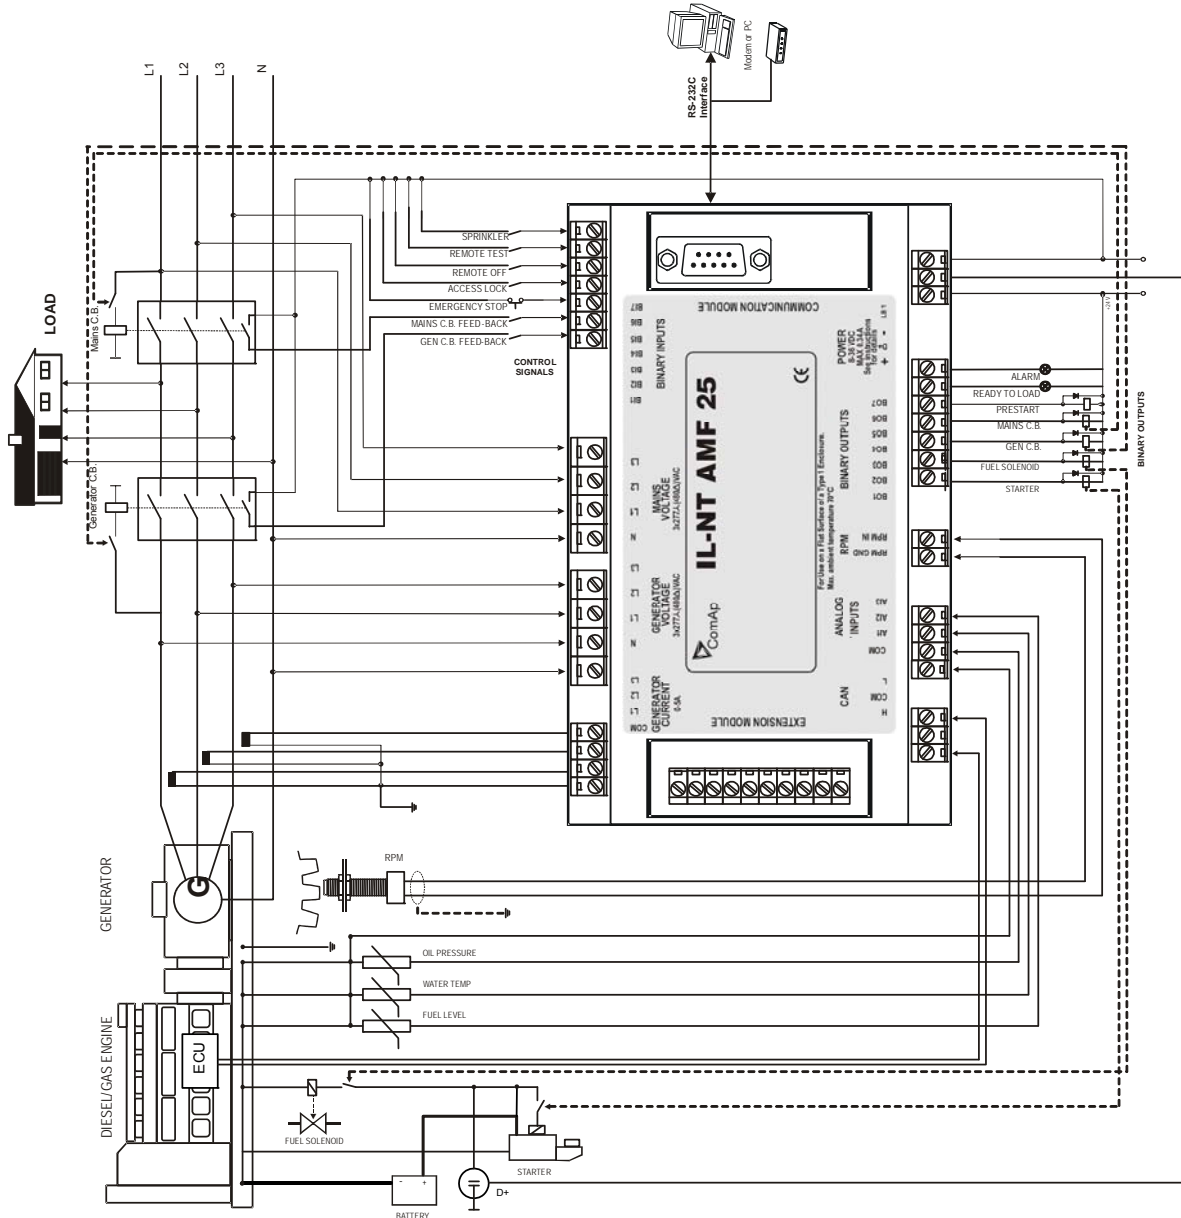


### Hint

MCB and GCB is recommended to be mechanically interlocked.  
 It is possible to start Volvo and Scania engines via CAN bus. See [Engines started via CAN bus.](#)




# Stand-by Applications


## Contactor (set point MCB Logic = "CLOSE-OFF")

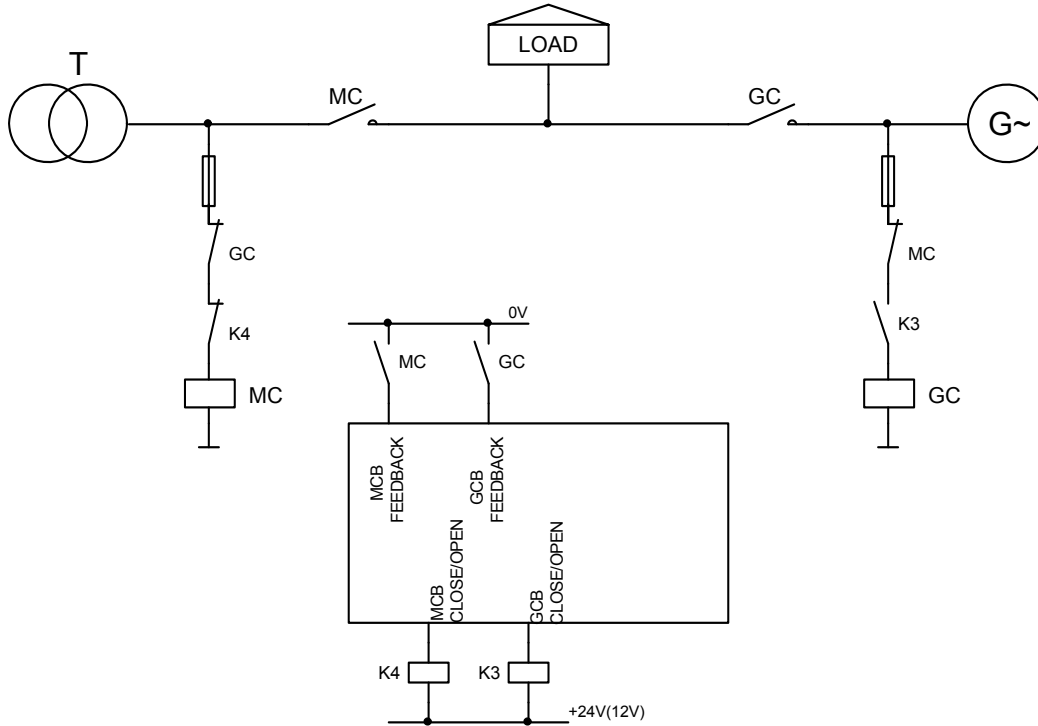

## ATS with two stable positions (set point MCB Logic = "CLOSE-ON")

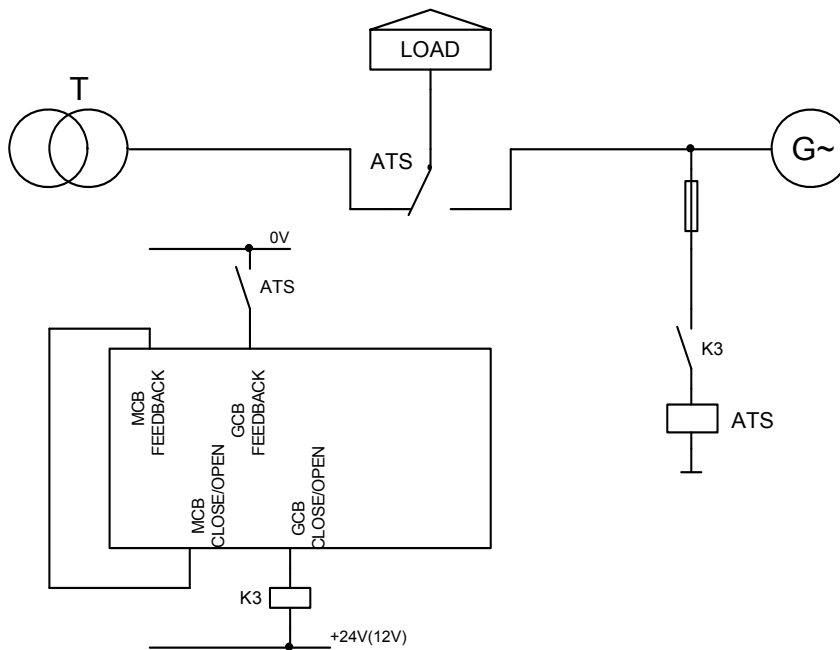

**ATS with three stable positions  
(set point MCB Logic = "CLOSE-OFF")**

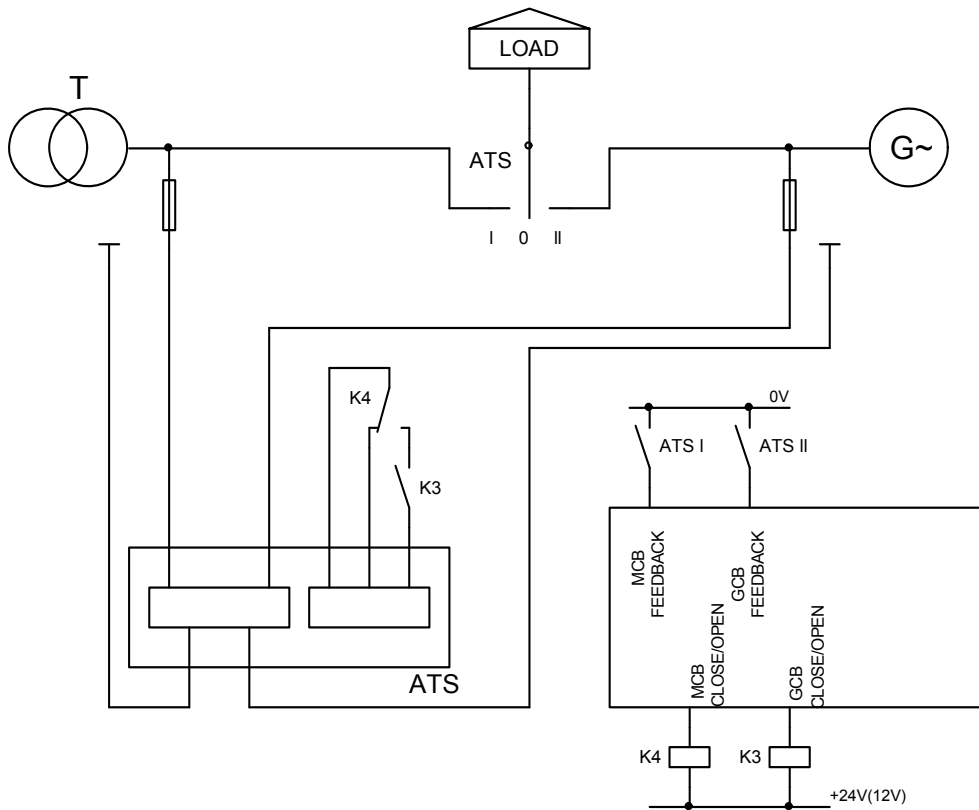

# Getting Started

## How to install

### General

To ensure proper function:

Wiring for binary inputs and analog inputs must not be run with power cables.  
Analog and binary inputs should use shielded cables, especially when length >3m.

### Power supply

To ensure proper function:


Use min. power supply cable of 1.5mm<sup>2</sup>

Maximum continuous DC power supply voltage is 36VDC. Maximum allowable power supply voltage is 39VDC. The IntelliLite's power supply terminals are protected against large pulse power disturbances. When there is a potential risk of the controller being subjected to conditions outside its capabilities, an outside protection device should be used.

#### Hint:

The IntelliLite controller should be grounded properly in order to protect against lightning strikes!!  
The maximum allowable current through the controller's negative terminal is 4A (this is dependent on binary output load).

For the connections with 12VDC power supply, the IntelliLite<sup>NT</sup> includes internal capacitors that allow the controller to continue operation during cranking if the battery voltage dip occurs. If the voltage before dip is 10V, after 100ms the voltage recovers to 7 V, the controller continues operating. During this voltage dip the controller screen backlight can turn off and on but the controller keeps operating. It is possible to further support the controller by connecting the external capacitor and separating diode:

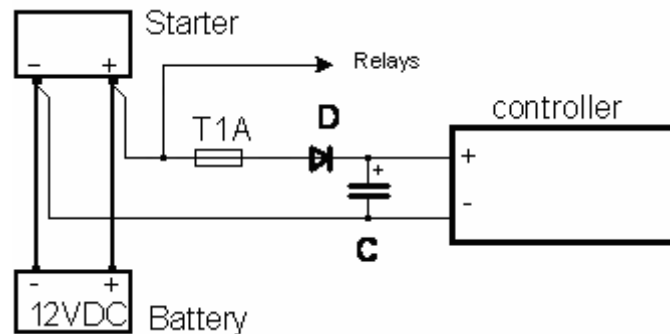

The capacitor size depends on required time. It shall be approximately thousands of microFarads.

The capacitor size should be


5 000 microFarad to withstand 150ms voltage dip under following conditions:

Voltage before dip is 12V, after 150ms the voltage recovers to min. allowed voltage, i.e. 8V.

#### Hint:

Before the battery is discharged the message "Low BackupBatt" appears.

Or by connecting special I-LBA module:

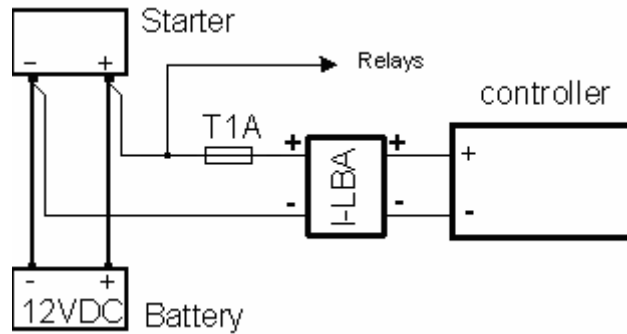


Hint:

I-LBA may not eliminate voltage drop when used with low temperature (-40°C) version of controller and display heating element is on (below 5°C). Current drain of heating element exhausts LBA capacitors very fast .

### Power supply fusing


A one-amp fuse should be connected in-line with the battery positive terminal to the controller and modules. These items should never be connected directly to the starting battery. Fuse value and type depends on number of connected devices and wire length. Recommended fuse (not fast) type - T1A. Not fast due to internal capacitors charging during power up.

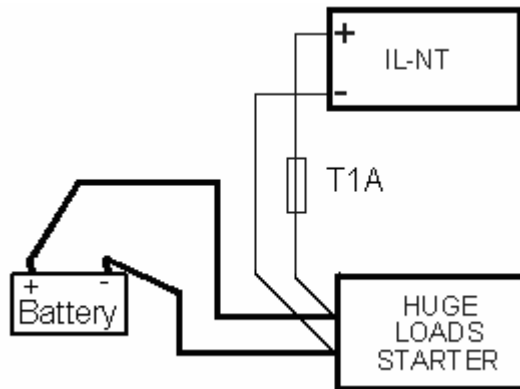

## Binary output protections

### Hint

Do not connect binary outputs directly to DC relays without protection diodes, even if they are not connected directly to controller outputs.

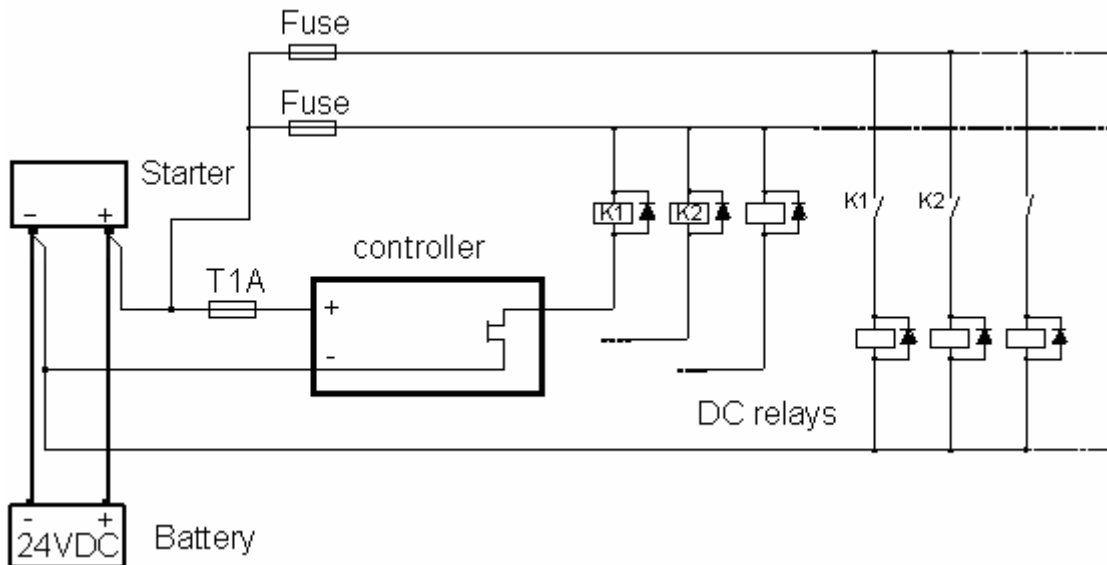

## Grounding

To ensure proper function:


Use as short as possible cable to the grounding point on the switchboard

Use cable min. 2,5mm<sup>2</sup>

The “-“ terminal of the battery has to be properly grounded

## Magnetic pick-up

To ensure proper function:  
Use a shielded cable

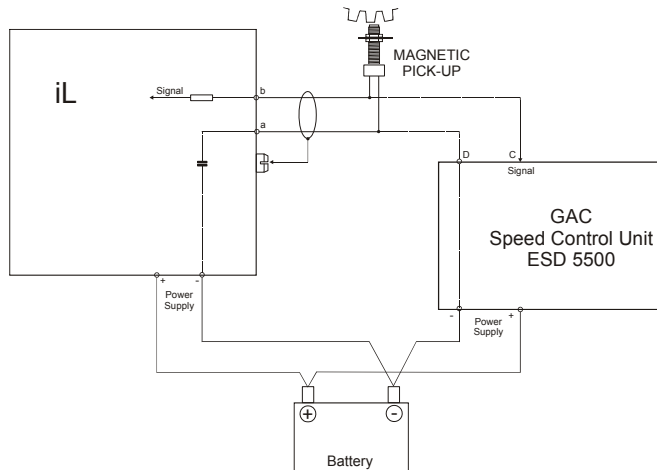

Be aware of interference signal from Speed governor when one speed pick-up is used.

If engine will not start:

- Check ground connection from pick-up to controllers, eventually disconnect ground connection to one of them
- Galvanically separate IntelliLite RPM input using ComAp separation transformer RPM-ISO (1:1)
- Use separate pick-up for Speed governor and IntelliLite<sup>NT</sup>

### Hint:

In some cases the controller will measure a RPM value even though the gen-set is not running: RPM is measured from the generator voltage (Gear Teeth = 0)

IL-NT is measuring some voltage value on input terminals due to open fusing.

If RPM > 0 the controller will be put into a Not ready state and the engine will not be allowed to start.


## Current measurement

To ensure proper function


Use cables of 2,5mm<sup>2</sup>

Use transformers to 5A

Connect CT according to following drawings

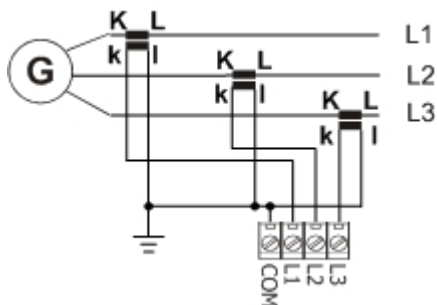

## Voltage measurement

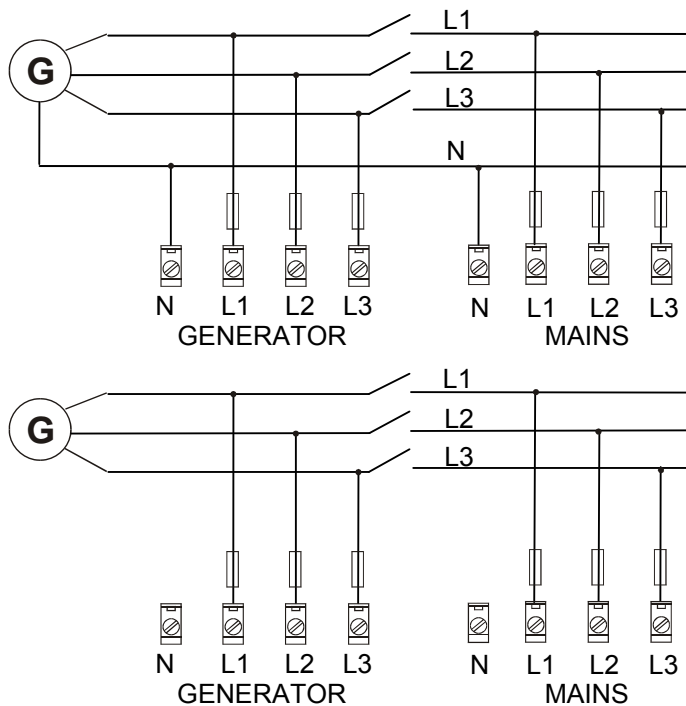

**Hint:**

No separation transformers for three wires voltage connection (without N) are needed. Switchboard lighting strikes protection according standard regulation is expected !!!


## Single phase applications

There is not a separate archive file for single-phase applications. Use standard ail archives.

### Recommended wirings

Generator (and mains) single-phase voltage has to be connected to all three-voltage terminals L1, L2 and L3. Generator current has to be connected to L1I and COM terminals only.

## Voltage measurement

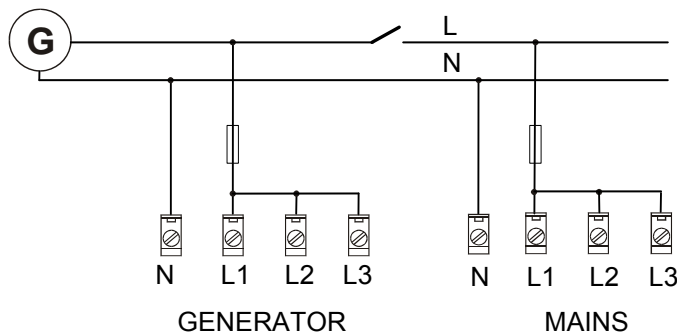

**Hint:**

Switchboard lighting strikes protection according standard regulation is expected !!!


## Current measurement

To ensure proper function

Use cables of 2,5mm<sup>2</sup>

Use transformers to 5A

Connect CT according to following drawings. Terminals L2I and L3I are opened.

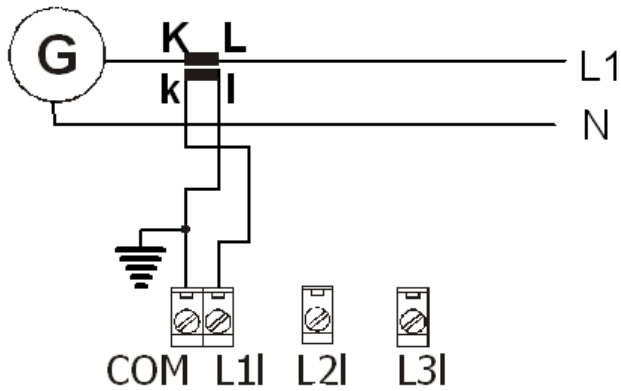

## Set points adjustment

To run a single-phase application, the following set points have to be set:

**Gener Protect:** *Amps Unbal Sd* to 200 %  
**Gener Protect:** *Amps Unbal Del* to 60,0 s

## Analog inputs

Three analog inputs are available on the IL-NT

## Configuration


Each analog input can be configured by LiteEdit software following way.

| Analog input item     | LiteEdit     |  | Possibility  |
|-----------------------|--------------|--|--|
| Type                  | Type         | Not used<br>Alarm  | Analog input isn't used  |
| Analog input name     | Name         |  | Up to 14 ASCII characters  |
| Config of input       | Config       | Analog<br><br>Binary (not supp. by PTM)<br>Tri-state (not supp. by PTM)<br><br>ECU | Analog measuring in specified range.<br>Binary: open/close - threshold 750 Ω.<br>Three-state: open/close - threshold 750 Ω,<br>Failure <10 Ω or > 2400 Ω<br>Value is read from ECU |
| Physical dimension    | Dim          | bar,%,°C, ...  | Up to 4 ASCII characters<br>(Valid only for analog inputs)   |
| Polarity              | Contact type | NC<br><br>NO   | Valid only for binary and three-state inputs<br>Valid only for binary and three-state inputs   |
| Protection direction  | Protection   | Over   | Overstep. Sensor fail does not activate protection.  |
|                       |              | Over+Fls   | Overstep and Sensor fail activates protection.   |
|                       |              | Under  | Under step. Sensor fail does not activate protection.  |
|                       |              | Under+Fls  | Under step and Sensor fail activates protection.   |
| Sensor characteristic | Sensor       | Predefined user curves   | User changeable and configurable   |
| Resolution            | Resolution   | 0 – 0,00001  | Sensor resolution<br>(Valid only for analog inputs)  |




Each Analog input has separate set points for two level alarm setting. Analog input alarm levels and delay adjust in **Extension I/O** and **Engine Protect** group.

## Connection of IL-NT analog inputs

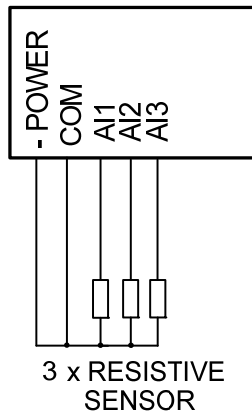

Standard connection of three resistive sensors to analog inputs.

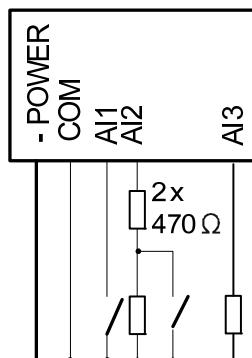

Mixed connection of IntelliLite analog inputs:

AI1 – binary input  
AI2 – three state input  
AI3 – analog resistive input

Analog inputs are designed for resistive sensors with resistance in range of 0Ω to 2,4kΩ. To ensure a proper function use shielded cables, especially for length over >3m.

### As binary input

Open, close state are detected, threshold level is 750 Ω.

### As three state input

Open, close and failure state are detected. Threshold level is 750 Ω, failure is detected when circuit resistance is <10 Ω or > 2400 Ω.

#### *Hint:*

Protections on binary and three state inputs are following:

|               |     |          |                |     |          |
|---------------|-----|----------|----------------|-----|----------|
| <i>IL-NT:</i> | AI1 | Shutdown | <i>IG-IOM:</i> | AI1 | Shutdown |
|               | AI2 | Shutdown |                | AI2 | Shutdown |
|               | AI3 | Warning  |                | AI3 | Shutdown |
|               |     |          |                | AI4 | Shutdown |

### Unused analog inputs

Configure Type = Not used

### Example of analog input configuration

Configure Engine Temp input for measuring in °C, VDO 40-120°C sensor, range -16 to 120 °C. Alarm protection level set to 90 °C, shut down level 110 °C.

Start LiteEdit and select – Controller - Configuration – Modify – Engine Temp.

Set configuration for Engine temp analog input:

**Type:** Selection between Not used and Alarm

“Not used” – analog input isn’t used

”Alarm” – analog input is used

Set to: Alarm

**Name:** Name of the analog input. Maximally 14 letters.

Set to: Engine Temp

**Config:** Selection between Analog, Binary Tri-state input.

“Analog” – resistor sensor is connected to Analog input.

“Binary” – open/close contact is connected between Analog input and COM terminal of Analog inputs. Analog input detects only open/close state.

“Tri-state” – open/close contact is connected parallel to one of two serial resistors between Analog input and COM terminal of Analog inputs.

Set to: Analog

**Alarm Properties:** Selection between different direction of protection – Under limit, Over limit or combination with Fail sensor.

“Engine running only” – check this setting if you wish to active protection on analog input only while engine is running, not, when it stops.

Set to: Over limit

**Contact type:** selection of polarity only when analog input is configured as Binary or Tri-state. When is analog input configured as analog this setting has no sense.

„NC” – polarity of binary or tri-state input

„NO” – polarity of binary or tri-state input

**Sensor:** selection of sensor characteristic

„Unused input” - when Analog input is not used. On the IntelliLite screen is displayed „####” value, no alarm is detected.

Default user curves predefined on AI1 – AI3:

„VDO 10 Bar” – VDO pressure sensor

„VDO 40-120 °C” – VDO temperature sensor

„VDO level %” – VDO level sensor

Set to: VDO 40-120 °C

When you choose the predefined or user curve the Sensor Name, Dim and Resolution are setted automatically according to curve, user modification is possible.

**Sensor Name:** Name of used sensor, up to 14 letters can be used.

**Dim:** Name of measured unit (Bar, °C, %, ...), up to 4 letters can be used.

**Resolution:** setting of resolution of measured value.

„0” - e.g. 360 kPa, 100%, 50 °C

„1” – e.g. 360.0 kPa

„2”- e.g. 360.00 kPa

„3” - e.g. 360.000 kPa


Set to: 1

When Analog input configuration is finished set the setpoints *AI1 Wrn*, *AI1 Sd*, *AI1 Del* in **Engine Protect** group.


Each Analog input has separate triplet of setpoints: *Wrn level*, *Sd level*, *AI del*. Names of these setpoints are fix defined

Number of decimal points of *Wrn level* and *Sd level* is the same as the configured number of decimal points of measured value.


## Binary inputs

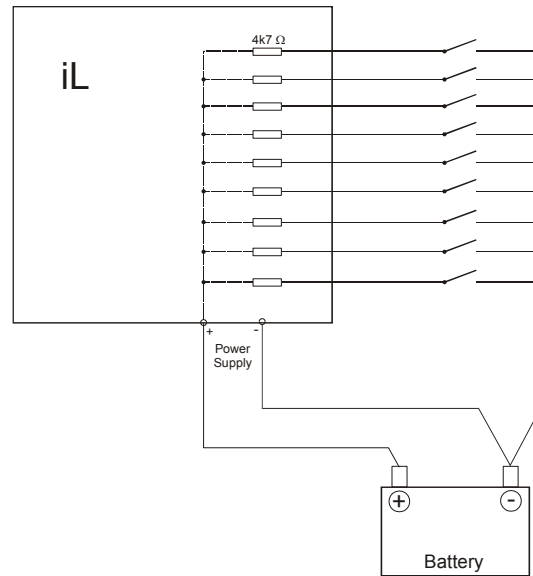

## Binary outputs

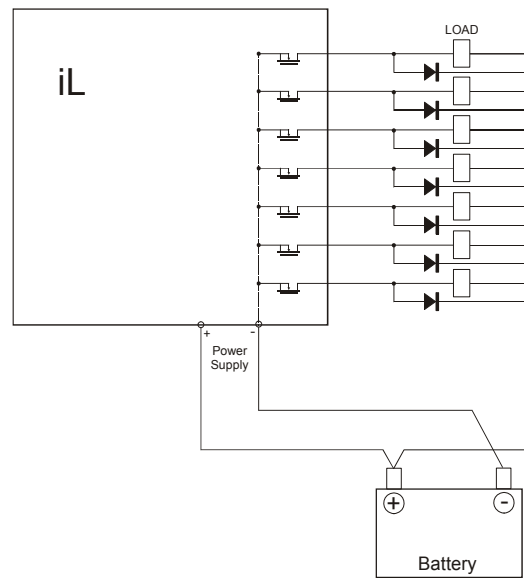

## Extension modules (CAN bus) connection

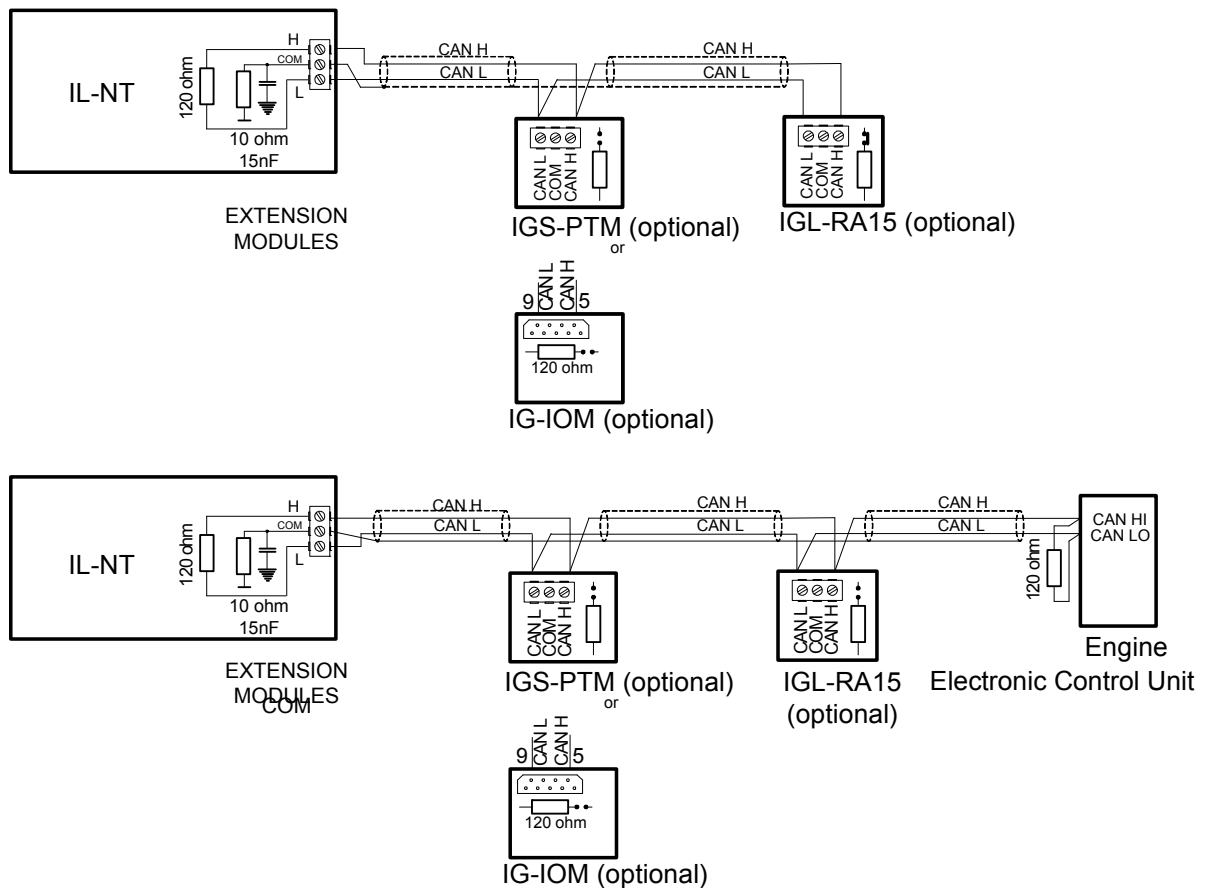

### Connection rules

CAN bus line must be connected in series, from one unit to the next (no star, no cable stubs, no branches) both ends must be by the 120-ohm (internal or external) resistor terminated. Maximal CAN bus length is up to 200 meters.

For CAN data cables details see chapter Technical data – Communication interface. CAN cable shielding connect to IL-NT COM terminal.

IL-NT contains internal fix 120-ohm resistor and must be located on the CAN bus end.


New IG-IOM and IGS-PTM units contain internal jumper removable 120-ohm resistor (in older IOM types are fix resistors). To be sure check resistor presence by ohmmeter. Unit with internal resistor connect to the end of CAN line.

Following connections are supported (IOM, PTM, ECU order is not important).

- IL- NT – IG-IOM
- IL- NT – IGS-PTM
- IL- NT – IGL-RA15
- IL- NT – IG-IOM – IGL-RA15
- IL- NT – IGS-PTM – IGL-RA15

It is possible to connect only one IG-IOM or IGS-PTM and one IGL-RA15 to IL-CU.



Use  button in LiteEdit configuration window to activate CAN (J1939) interface.

# Inputs and Outputs

*Hint:*

Any Binary input or output can be configured to any IL-NT controller terminal or changed to different function by LiteEdit software. There is fix 1 sec delay when any binary input is configured as protection.

## ***Binary inputs IL-NT - default***

---

- BI1 GCB Feedback**
- BI2 MCB Feedback**
- BI3 Emergency Stop**
- BI4 Access Lock**
- BI5 Remote OFF**
- BI6 Remote TEST**
- BI7 Sd Override**

## ***Binary inputs – list***

---

### **Not Used**

Binary input has no function. Use this configuration when Binary input is not connected.

### **Alarm**

If the input is closed (or opened) selected alarm is activated.

Binary Alarm configuration items

|              |                     |  |
|--------------|---------------------|--|
| Name         |                     | 14 characters ASCII string                             |
| Contact type | NC                  | Normally closed  |
|              | NO                  | Normally opened  |
| Alarm type   | Warning             |  |
|              | Shut down           |  |
| Alarm active | All the time        | Valid if checkbox “Engine running only” is not checked |
|              | Engine running only | Valid if checkbox “Engine running only” is checked     |

### **GCB Feedback**

Use this input for indication, whether the generator circuit breaker is open or closed.

If the feedback is not used, connect this input to the output GCB CLOSE/OPEN

### **MCB Feedback**

This input indicates whether MCB is closed or opened.

### **Rem Start/Stop**

External request for engine run. AUT mode only.

## Emergency Stop

If the input is opened, shut down is immediately activated. Input is inverted (normally closed) in default configuration.

### Hint:

In case of controller hardware or software fail, safe stop of the engine doesn't have to be ensured. To back-up the Emergency Stop function it is recommended to connect separate circuit for disconnection of Fuel Solenoid and Starter signals.

## Sd Override

If the input is closed all alarms are disabled except the binary input EMERGENCY STOP and "engine overspeed protection".

- all IL alarms are detected,
- IL front panel gen-set RED LED blinks or lights,
- alarm is recorded on the IL alarm list screen,
- BUT gen-set remains running.

### Hint:

Warning *Sd Override* is indicated in the AlarmList if Sd Override mode is active to inform the operator that the engine is not protected.

## Access Lock

If the input is closed, no setpoints can be adjusted from controller front panel and gen-set mode (OFF-MAN-AUT-TEST) cannot be changed.

### Hint:

Access Lock does not protect setpoints and mode changing from LiteEdit. To avoid unqualified changes the selected setpoints can be password protected. Also the buttons Fault reset, Horn reset are not blocked at all and buttons Start and Stop in MAN mode are not blocked.

## Remote OFF

If closed, iL is switched to OFF mode (there are four modes OFF-MAN-AUT-TEST). When opens controller is switched back to previous mode.

### Hint:

This binary input should be connected to schedule timer switch, to avoid start of engine.

## Remote MAN

If the input is active, MAN mode is forced to the controller independently on the position of the MODE selector.

## Remote AUT

If the input is active, AUTO mode is forced to the controller independently on the position of the MODE selector. If another of „remote“ inputs is active, then the REMOTE AUT input has the lowest priority.

## Remote TEST

If closed, IL-NT is switched to TEST mode (there are four modes OFF-MAN-AUT-TEST). When opens controller is switched back to previous mode.

## Rem TEST OnLd

Affects the behaviour in TEST mode. When input is closed, the controller automatically transfers load from the mains to the gen-set. Setpoint **AutoMains Fail: ReturnFromTEST** must be set to MANUAL. Load is automatically transferred back to the mains when any gen-set shut down protection activates.

### Hint:

Function Test Onload was changed to combination Remote Test + Rem TEST OnLd.

## RemControlLock

If the input is active, setpoints writing or command sending from the external terminal is disabled.

## Emergency MAN

If the input is activated the controller behaves like when switched to OFF Mode. Opens all binary outputs. There is one exception – STOP SOLENOID doesn't activate on this transition.

Detection of "running" engine and subsequent alarm message "Sd Stop Fail" is blocked.

The controller shows "EmergMan" state and the engine can not be started.

Generator current and power measurement is active in this mode, regardless of the actual state of the engine.

After the input is open again, the controller recovers to previous state and behaves according to the actual situation .

Function is active in any controller mode.

## Start Button

Binary input has the same function as **Start Button** on the IntelliLite front panel. It is active in MAN mode only.

## Stop Button

Binary input has the same function as **Stop Button** on the IntelliLite front panel. It is active in MAN Mode only.

### Hint:

Changed function of Stop Button. After the first pressing from running state, there is a standard delay and controller change state to cooling. After holding the button down for 2 seconds controller goes to stop state. The same holds true for BI "Stop Button".

## FaultResButton

Binary input has the same function as **Fault Reset** button on the IntelliLite front panel.

## HornResButton

Binary input has the same function as **Horn reset** button on the IntelliLite front panel.

## GCB Button

Binary input has the same function as **GCB** button on the IntelliLite front panel. It is active in MAN mode only.

## MCB Button

Binary input has the same function as **MCB** button on the IntelliLite front panel. It is active in MAN mode only.

## MainsFailBlock

If the input is closed, the automatic start of the gen-set at Mains failure is blocked. In case of running gen-set the GCB is opened, gen-set goes to Cooling procedure and stops.

The input simulates healthy Mains.

## ***Binary outputs IL-NT - default***

---

|            |                       |
|------------|-----------------------|
| <b>BO1</b> | <b>Starter</b>        |
| <b>BO2</b> | <b>Fuel Solenoid</b>  |
| <b>BO3</b> | <b>GCB Close/Open</b> |
| <b>BO4</b> | <b>MCB Close/Open</b> |
| <b>BO5</b> | <b>Prestart</b>       |
| <b>BO6</b> | <b>Ready To Load</b>  |
| <b>BO7</b> | <b>Alarm</b>          |

### Hint:

The description of binary outputs of a controller relates also to IOM/PTM modules.

## ***Binary outputs - list***

---

### **Not Used**

Output has no function.

### **Starter**

The closed relay energizes the starter motor.

The relay opens if:

- the “firing” speed is reached or
- maximum time of cranking is exceeded or
- request to stop comes up

### **Fuel Solenoid**

Closed output opens the fuel solenoid and enables the engine start.

The output opens if:

- EMERGENCY STOP comes or
- Cooled gen-set is stopped or
- in pause between repeated starts

### **Stop Solenoid**

The closed output energizes stop solenoid to stop the engine.

The output is active at least for *Stop Time*, if the stop lasts longer, it stays active until all symptoms say the engine is stopped.

The engine is stopped if:

- RPM < 2 and
- Generator voltage < 10V and
- Oil pressure < **Engine Params: Starting Oil P.**

### Hint:

The engine can be started anytime, if all symptoms say the engine is steady regardless of the fact the *Stop Solenoid* can still be active (in that case it is deactivated before cranking).

### **Stop Pulse**

Output is active for 1 second after *Stop Solenoid* output activation. This signal is sent to ECU in case of engine stop request.



## Ignition

The output closes after reaching value of crank RPM, fixed 30RPM. Opens after stopping of the engine or in pause during repeated start.

## Prestart

The output closes prior to the engine start (*Prestart*) and opens when *Starting RPM* speed is reached. During repeated *Crank Attempts* the output is closed too. The output could be used for pre-glow, pre-heat or prelubrication.

## Cooling Pump

The output closes when gen-set starts and opens after stop of the engine.

## Idle/Nominal

The output *Idle/Nominal* closes after the timer *Idle Time* elapses. The *Idle Time* counter starts to countdown when *Starting RPM* reached. The *Underspeed* protection is not evaluated during idle period. A *Start Fail* protection occurs if the RPM drop below 2RPM during idle.

### Hint:

Connect Binary output Idle/Nominal to speed governor to switch the speed: opened = IDLE, closed=NOMINAL. If the IDLE contact is not supported on the governor, set the *Idle Time* nevertheless to minimum 5s to avoid *Underspeed* possibly caused by instability of the engine short after start.

## Air Valves

Closes together with *Prestart*. Opens after the engine is stopped. Stopped engine conditions: RPM = 0, **Engine Params:** *Starting Oil P*, D+ (when enabled).

## Alarm

The output closes if :

- any alarm comes up or
- the gen-set malfunctions

The output opens if

- **FAULT RESET** is pressed

The output closes again if a new fault comes up.

## Horn

The output closes if:

- any alarm comes up or
- the gen-set malfunctions

The output opens if:

- **FAULT RESET** is pressed or
- **HORN RESET** is pressed or
- Max time of HORN is exceeded (*Horn Timeout*)

The output closes again if a new fault comes up.

## GCB Close/Open

The output controls the generator circuit breaker.

### Hint:

Supposed time to close (reaction time) of GCB is 0,1 sec.

## GCB ON Coil

The output activates Generator Circuit Breaker coil.

## GCB Off Coil

The output deactivates Generator Circuit Breaker coil.

## GCB UV Coil

The output controls Generator Circuit Breaker coil after voltage drop-out.

## MCB Close/Open

The output controls the mains circuit breaker.

## MCB On Coil

The output activates Mains Circuit Breaker coil.

## MCB Off Coil

The output deactivates Mains Circuit Breaker coil.

## MCB UV Coil

The output controls Mains Circuit Breaker coil after voltage drop-out.

## Ready To AMF

The output is active, if the controller is able to start the engine (the output *Ready* is active) or engine is already running and simultaneously the controller is in AUT Mode.

## Ready

The output is closed if following conditions are fulfilled:

- Gen-set is not running and
- No Shutdown protection is active
- Controller is not in OFF Mode

## Ready To Load

The output is closed if gen-set is running and all electric values are in limits and no alarm is active - it is possible to close GCB or it is already closed. The output opens during cooling state.

## Running

Output closes if the engine is in Running state.

## Cooling

The output closes when gen-set is in Cooling state.

## Supplying Load

Closed when the generator current is  $> 0,5\%$  of the CT ratio.

Exact formulas:

Output is closed when the current at least in one phase is for 1 sec over  $CT\ ratio/200+2$

Output is opened when the current in all three phases is for 1 sec below  $CT\ ratio/200+2$

### Hint:

Values are truncated after division, not rounded.

## Fault Reset

The output is a copy of Fault Reset button on controller and binary input *FaultResButton*.

## Gen Healthy

The output is a copy of generator status LED on IL-NT front panel. The output is closed if gen-set is running and all gen-set electric values are in limits.

## Mains Healthy

The output is copy of mains status LED on IL-NT front panel. The output is closed if mains voltage and frequency are within limits.

## AL Gen >V

The output closes if the generator overvoltage shutdown alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Gen <V

The output closes if the generator undervoltage shutdown alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Gen Volts

The output closes if the generator over/under voltage alarm or voltage asymmetry alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Gen Freq

Output closes if the generator over/under frequency alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Gen >Freq

Output closes if the generator over frequency alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Gen <Freq

Output closes if the generator under frequency alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Mains Volts

The output closes if the mains over/under voltage alarm or voltage asymmetry alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Mains Freq

Output closes if the mains over/under frequency alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## AL Mains Fail

Output closes if the mains over/under voltage alarm, voltage asymmetry alarm or mains over/under frequency alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL Overload Sd**

Output closes if the generator overload alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL Stop Fail**

Output closes when the engine have to be stopped, but speed or frequency or voltage or oil pressure is detected. This protection goes active 60s after stop command. With start goes this protection inactive.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL Overspeed**

Output closes if the gen-set overspeed alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL Underspeed**

Output closes if the gen-set underspeed alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL Start Fail**

Output closes after the gen-set start-up fails.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL Overcurrent**

Output closes if the generator

\*IDMT over current or  
current unbalance or  
short current alarm activates.

The output opens, if

Alarm is not active and  
**FAULT RESET** is pressed

### **AL BatteryFail**

Output closes when IL-NT performs reset during start procedure (probably due to weak battery) or when battery under/over voltage warning appears.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL AI1 Sd**

Output closes if the oil pressure (configured to the first analog input) shutdown alarm activates.

The output opens, if

- alarm is not active and

- **FAULT RESET** is pressed

### **AL AI1 Wrn**

Output closes if the oil pressure (configured to the first analog input) warning alarm activates.  
The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL AI2 Sd**

Output closes if the water temperature (configured to the second analog input) shutdown alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL AI2 Wrn**

Output closes if the water temperature (configured to the second analog input) warning alarm activates.

The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### **AL AI3 Sd**

Output closes if the Fuel level (configured to the third analog input) shutdown alarm activates.

### **AL AI3 Wrn**

Output closes if the Fuel level (configured to the third analog input) warning alarm activates.

### **AL Common Wrn**

Output closes when any warning alarm appears.

The output opens, if

- No warning alarm is active and
- **FAULT RESET** is pressed

### **AL Common Sd**

Output closes when any shut-down alarm appears.

The output opens, if

- No sd alarm is active and
- **FAULT RESET** is pressed

### **AL Common FIs**

Output closes when any sensor fail alarm appears.

The output opens, if

- No warning alarm is active and
- **FAULT RESET** is pressed

### **Mode OFF**

The output is closed, if OFF Mode is selected.

### **Mode MAN**

The output is closed, if MAN Mode is selected.

### **Mode AUT**

The output is closed, if AUT Mode is selected.

## Mode TEST

The output is closed, if TEST mode is selected.  
The output opens, if  
Alarm is not active and  
**FAULT RESET** is pressed

## AL D+ Fail

Output closes if gen-set is running and D+ input not energized.  
The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### *Hint:*

Threshold level for D+ input is 80% supply voltage.

## Maintenance

Output closes if the Maintenance alarm activates, i.e. the gen-set has been running for more than  
**Engine Protect: Maintenance.**  
The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## Ctrl HeartBeat

Output signalizes Watchdog Reset. In a healthy state it blinks at 500ms : 500ms rate. When Watchdog Reset occurs, it stops blinking.

## Stop Pulse

Output is active for 1 second after *Stop Solenoid* output activation. This signal is sent to ECU in case of engine stop request.

## ECU Comm Error

The output is an inversion of binary output *ECU Comm Ok*, i.e. the output is closed when ECU is not communicating and all values from ECU show #####. Communication error causes stop of the engine.

## BI1..7 Status

### \* IOM BI1..7 Status

The outputs give an information about the assigned binary input.  
In case the assigned binary input is configured to alarm type, then the output closes when the alarm activates. It opens if

- alarm is not active and
- **FAULT RESET** is pressed

In case the assigned binary input is configured to any control function, the output propagates the state of the input.

### \* AL IOM AI1..4 Wrn

Output closes if warning alarm on the appropriate IOM/PTM analog input activates.  
The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

### \* AL IOM AI1..4 Sd

Output closes if shutdown alarm on the appropriate IOM/PTM analog input activates.  
The output opens, if

- alarm is not active and
- **FAULT RESET** is pressed

## ECU Comm OK

If the ECU is not communicating and all values from ECU show ##### the output is not active. If the ECU communicates the output is active.

## ECU YellowLamp

The output copies warning information from ECU.

## ECU Red Lamp


The output copies shutdown information from ECU.

## ECU PowerRelay

The output closes at the beginning of prestart and opens if the engine shall be stopped.

This output can be used to indicate when the ECU should be powered up i.e. only while the engine is running.

This output also influences evaluation of communication failure with ECU and related FLS alarms from analog inputs read from the ECU. If the output is configured (which means configured on physical binary output or VPIO output), the issuing of communication error is blocked during Prestart and Stopping procedure as shown in the picture.

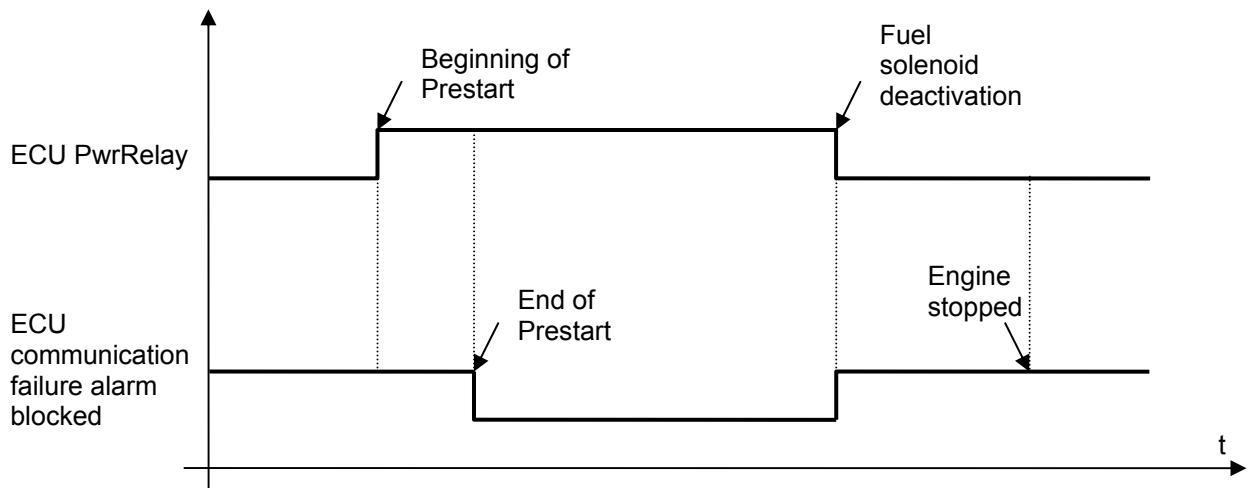

## Exerc Timer 1

Output activates when Timer 1 is active. Simultaneously, gen-set is started when it is in AUT mode.

## Exerc Timer 2

Output activates when Timer 2 is active

## Glow Plugs

The output closes prior to the engine start (*Prestart*) and opens when *Starting RPM* speed is reached. During repeated crank attempts the output is opened.

## Fuel Pump

Output closes when the value of fuel level lies under the value of Fuel Pump ON setpoint and opens when value of Fuel Pump OFF is reached.

## Analog inputs

Three analog inputs are jumper configurable for resistive(default), voltage or current sensor.

It is possible to configure on each Analog input:

- Reading from IL Analog inputs or from Engine Control Unit via CAN bus (J1939)
- Sensor characteristics – from the list, or custom sensor curve
- Value dimension (e.g. psi - bars, °F - °C, % - l)
- Sensor resolution

Warning and shut-down limits are adjusted in **Engine Protect** group.

The analog inputs are configurable. Use LiteEdit software to modify configuration. Default configuration is:

## Oil Pressure

Oil pressure analog input. Default range 0 to 10.0 bars.

## Water Temp

Water temperature analog input. Default range 0 to 120 °C.

## Fuel Level

Fuel level analog input. Default VDO sensor 0-180R = 0-100%

### *Hint:*

For further information about analog inputs' configuration see [Analog inputs](#).

## CAN J1939 interface

Following values can be received from Engine Control Unit via CAN bus instead of measuring on IL-NT terminals when J1939 interface is enabled.

| Value             | Value is received from |                       |
|-------------------|------------------------|-----------------------|
|                   | J1939 enabled          | J1939 disabled        |
| RPM               | ECU                    | IL-NT – RPM terminals |
| Oil pressure      | ECU or IL-NT AI1       | IL-NT AI1 terminals   |
| Water temperature | ECU or IL-NT AI2       | IL-NT AI2 terminals   |
| Fuel level        | ECU or IL-NT AI3       | IL-NT AI3 terminals   |

Use LiteEdit 3.0 to enable/disable J1939 interface and to configure IL-NT analog inputs.

### *Hint:*

RPM reading is automatically switched to pickup or generator voltage measuring (depends on **Basic Settings**: *Gear Teeth* value) if J1939 fails.

## Analog outputs

Optional plug in card IL-NT AOU8 provides eighth Pulse-With-Modulation (PWM) outputs. These are intended to drive VDO style analog gauges. This is to provide visual indication of typically ECU values without installing additional sensors on the engine. PWM signal emulates sensor which would be typically mounted on the engine.

Any value from controller may be configured to the outputs. Use LiteEdit PC SW to configure corresponding sensor/gauge curve and value selection.



# Setpoints

## Password

---

### EnterPassword

Password is a four-digit number. Password enables change of relevant protected setpoints. Use  $\uparrow$  or  $\downarrow$  keys to set and  $\boxed{\text{ENTER}}$  key to enter the password.

*Hint:*

There is only 1 level of a password.

### ChangePassword

Use  $\uparrow$  or  $\downarrow$  keys to set and  $\boxed{\text{ENTER}}$  key to change the password.

*Hint:*

At first the password has to be entered before the new password can be changed.

## Basic Settings

---

### Gen-set Name

User defined name, used for IntelliLite identification at remote phone or mobile connection. *Gen-set Name* is max 14 characters long and have to be entered using LiteEdit software.

### Nominal Power [kW]

Nominal power of the generator

Step: 1kW

Range: 1 – 32000 kW

### Nomin Current [ A ]

It is current limit for generator \*IDMT over current and short current protection and means maximal continuous generator current. See **Gener Protect**: \*Amps IDMT Del, Short Crct Sd setpoints.

*Nominal Current* can be different from generator rated current value.

Step: 1 A

Range: 1 - 10000 A

### CT Ratio [/5A]

Gen-set phases current transformers ratio.

Step: 1 A

Range: 1 – 5000 A / 5A

*Hint:*

For CT Ratio  $\leq 250$  the values of power and current are displayed in a controller with one decimal. For CT Ratio  $> 250$  the values of power and current are displayed in a controller with integral numbers. If you change CT Ratio in LiteEdit or directly in the controller, decimal numbers will not be changed immediately. The change will be executed only by reconfiguring in LiteEdit. The statistics of power will be recounted at this time with regards to decimal numbers of power.

**WARNING!** When you change the firmware, statistics can be invalid!

### PT Ratio [/1]

Gen-set potential transformers ratio.

Step: 0,1 V / V

Range: 0,1 – 500,0 V / V

## **Vm PT Ratio** [1]

Mains potential transformers ratio.

Step: 0,1 V / V

Range: 0,1 – 500,0 V / V

## **Nomin Voltage** [V]

Nominal generator voltage (phase to neutral)

Step: 1V

Range: 80 – 20000 V

## **Nominal Freq** [Hz]

Nominal generator frequency (usually 50 or 60 Hz )

Step: 1Hz

Range: 45 – 65 Hz

## **Gear Teeth** [-]

Number of teeth on the engine gear for the pick-up.

Set to zero, if no pick-up is used. Engine speed is counted from the generator frequency.

Step: 1

Range: 0 – 500

### *Hint:*

Generator frequency can be used only when generator voltage (min 5V) is present before reaching of the firing speed (*Starting RPM*) after start.

## **Nominal RPM** [RPM]

Nominal engine speed.

Step: 1RPM

Range: 100 – 4000 RPM

## **ControllerMode** [ OFF, MAN, AUT,\*TEST ]

Equivalent to Controller mode changes by  or  buttons.

### *Hint:*

Controller Mode change can be separately password protected.

## **FltResGoToMAN** [ENABLED/DISABLED]

DISABLED: Controller stays in AUT Mode after Fault Reset .

ENABLED: Automatic switch from AUT (or TEST) to MAN Mode after Fault Reset to avoid automatic engine start. This function is active for Shut down protection only.

## **ControllerAddr (1 .. 32)** [-]

Controller identification number. It is possible to set controller address different from the default value (1) so that more IL controllers can be interconnected (via RS485) and accessed e.g. from Modbus terminal.

### *Hint:*

When opening connection to the controller it's address has to correspond with the setting in PC tool. From LiteEdit it is only possible to connect to controllers with address 1.

## **COM1 Mode** [DIRECT/MODEM/MODBUS/ECU LINK]

Communication protocol switch for the COM1 channel.

DIRECT: LiteEdit communication protocol via direct cable.

MODEM: LiteEdit communication protocol via modem.

MODBUS: Modbus protocol. See detailed description in IntelliCommunication guide.

ECU LINK: Protocol for communication with Cummins engines via Modbus.

*Hint:*

For detail description see chapter Modbus protocol. Since IL-NT 1.3 controller support register oriented modbus.

## COM2 Mode [DIRECT/MODBUS/ECU LINK]

Communication protocol switch for the COM2 channel, if dual communication module is plugged in.

DIRECT: LiteEdit communication protocol via direct cable.  
MODBUS: Modbus protocol. See detailed description in IntelliCommunication guide.  
ECU LINK: Protocol for communication with Cummins engines via Modbus.

*Hint:*

For detail description see chapter Modbus protocol. Since IL-NT 1.3 controller support register oriented modbus.

## ModemIniString

If your modem needs some additional initialization AT commands (i.e. because of national telephony network differences), it can be entered here. Otherwise leave this setpoint blank.

## ModbusComSpeed [9600,19200, 38400, 57600]

If the Modbus mode is selected on COM1 or COM2 channels, the Modbus communication speed in *bps* can be adjusted here.

## Engine Params

---

### Starting RPM [%]

“Firing” speed when IL controller stops cranking (starter goes OFF).

Step: 1% of nominal RPM  
Range: 5 – 50 %

### Starting Oil P [Bar]

When reached controller stops cranking (starter goes OFF).

Step: 0,1 bar  
Range: 0,0 – 10,0

*Hint:*

There are three conditions for stop cranking: *Starting RPM*, *Starting Oil P* and D+ (when enabled). Starter goes off when any of these conditions is void.

### Prestart Time [s]

Time of closing of the *Prestart* output prior to the engine start.

Set to zero if you want to leave the output *Prestart* open.

Step: 1s  
Range: 0 – 600 s

### MaxCrank Time [s]

Maximum time limit of cranking.

Step: 1s  
Range: 1 – 60 s

### CrnkFail Pause [s]

Pause between Crank Attempts.

Step: 1s  
Range: 5 – 60 s

## Crank Attempts [-]

Max number of Crank Attempts.


Step: 1  
Range: 1 – 10

## Idle Time [s]

Idle time delay starts when RPM exceeds *Starting RPM*. Start fail is detected when during Idle state RPM decreases below 2.

During the *Idle time* timer running the binary output *Idle/Nominal* is opened when it elapses the *Idle/Nominal* output closes. Binary output *Idle/Nominal* opens during Cooling period again.

Step: 1 s  
Range: 0 – 600 s

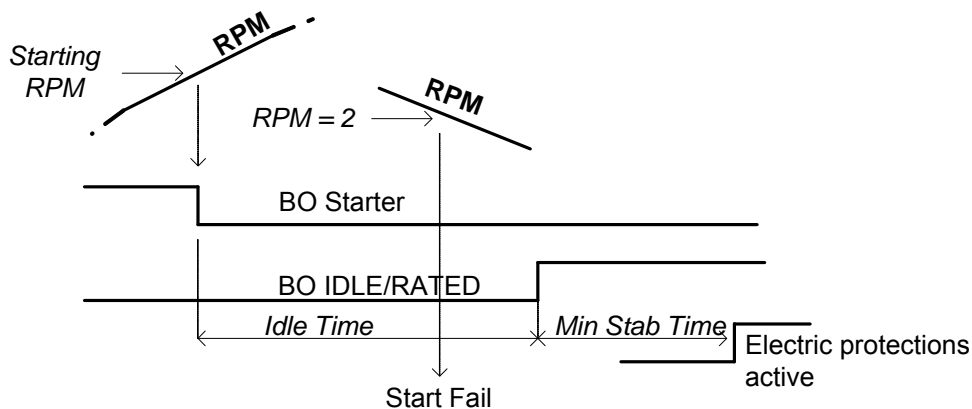

### Hint:

If the IDLE function not supported on the governor, set the *Idle Time* nevertheless to minimum 5s to avoid *Underspeed* possibly caused by instability of the engine short after start.

## Min Stab Time [s]

Minimum time after reaching of defined level of RPM to the closing GCB.

Step: 1s  
Range: 1 – 300 (Max Stab Time) s

## Max Stab Time [s]

Maximum time after start to get proper voltage level of the generator.

Step: 1s  
Range: 1 (Min Stab Time) – 300 s

### Hint:

When generator voltage within *Max Stab Time* does not reach defined limits (Generator protection group), an alarm occurs and the gen-set will shut down

## Cooling Speed [IDLE/NOMINAL]

Selects the function of the Binary output IDLE/NOMINAL during engine Cooling state.

NOMINAL : Cooling is executed at Nominal speed and generator protections are active.

IDLE: Cooling is executed at Idle speed and generator protections are switched off.

### Hint:

Binary output IDLE/NOMINAL must be configured and connected to speed governor. Engine Idle speed must be adjusted on speed governor

## Cooling Time [s]

Runtime of the unloaded gen-set to cool the engine before stop.

Step: 1s  
Range: 0 – 3600 s

*Hint:*

Cooling is executed at nominal speed and generator protections are active.

## Stop Time [s]

Under normal conditions the engine must certainly stop within this period. The period starts by issuing stop command.

Step: 1s  
Range: 0 – 240 s

*Hint:*

Stop of engine is detected when all following conditions are met: RPM < 2, Oil pressure < *Starting Oil P* Generator voltage < 10 VAC and D+ input isn't active.

Stop fail is detected when there is difference between those conditions, e.g RPM < 2 and Generator voltage > 10V.

## Fuel Solenoid [ DIESEL / GAS ]

Determines behavior of the Binary output FUEL SOLENOID.

DIESEL: Output closes 1 sec before Binary output STARTER.

The output opens if Emergency Stop comes or Cooled gen-set is stopped and in pause between repeated starts.

GAS: Output closes together with Binary output IGNITION if RPM is over the 30 RPM (*fix value*). Output opens after stop command or in pause between repeated start.

## D+ Function [ENABLED/CHRGFAIL/DISABLED]

ENABLED: The D+ terminal is used for both functions – “running engine” detection and charge fail detection.

CHRGFAIL: The D+ terminal is used for charge fail detection only

DISABLED: The D+ terminal is not used.

*Hint:*

The magnetization current is provided independently on this setpoint value.

The D+ charge fail protection becomes active after **Engine Params: Idle Time** reaches zero.

## ECU FreqSelect [PRIMARY/SECONDARY/DEFAULT]

This setpoint should be used only for Volvo and Scania engines.

### Volvo – “Volvo Aux” is selected in ECU configuration:

Primary or secondary engine speed is set by *Frequency select* bits in **VP Status** frame.

### Scania – “Scania S6 Singlespeed” is selected in ECU configuration:

Nominal engine speed is chosen by *Nominal speed switch 1* and *2* from **DLN1** frame when the engine is running on nominal speed, i.e. binary output *Idle/Nominal* is active. When the output is not active (engine is running on Idle speed), the setpoint *ECU FreqSelect* is not taken into account.

## Frequency change for Volvo Penta engines with EMS2

This description refers to the Volvo Penta Application bulletin 30-0-003.

The procedure for changing engine speed on the D9 and D16 engines is different from the D12 engine.

There is no system reset on the EMS2 unit; therefore the procedure is changed.

### Procedure if ECU not energized:

1. Switch the IL controller to MAN Mode.
2. Power up the ECU.
3. Change the setpoint *ECU FreqSelect* and confirm it by pressing Enter
4. Press the Stop button on the IL controller.

The whole procedure (step 2 to 4) must not exceed **10 seconds**.

**Procedure with ECU powered on:**

1. Switch the IL controller to MAN Mode.
2. Press the Stop button on the IL controller.
3. Change the setpoint *ECU FreqSelect* and confirm it by pressing Enter
4. Press the Stop button on the IL controller.

The whole procedure (step 2 to 4) must not exceed **10 seconds**.

**ECU SpeedAdj [ % ]**

Enables to adjust engine speed in ECU via CAN bus. Nominal speed corresponds to 50%.

Step: 1%  
Range: 0 – 100%

*Hint:*

The minimum value 0% is equal to 90% of nominal speed. Maximum value 100% is equal to 110% of nominal speed.

**Fuel Pump ON [%]**

When the actual value of fuel level is lower or equals to this value then the binary output Fuel Pump is activated.

Step: 1  
Range: 0 – 100 %

**Fuel Pump OFF [%]**

When the actual value of fuel level is higher or equals to this value then the binary output Fuel Pump is deactivated.

Step: 1  
Range: 0 – 100 %

***Engine Protect***

---

**ProtectHoldoff [s]**

During the start of the gen-set, some engine protections have to be blocked (e.g. Oil pressure). The protections are unblocked after the *ProtectHoldoff* time. The time starts after reaching *Starting RPM*.

Step: 1s  
Range: 0 – 300 s

**Horn Timeout [s]**

Max time limit of horn sounding. Set to zero if you want to leave the output HORN open. Horn timeout starts again from the beginning if a new alarm appears before previous Horn timeout has elapsed.

Step: 1s  
Range: 0 – 600 s

**Overspeed [%]**

Threshold for over speed protection

Step: 1% of nominal RPM  
Range: 100 – 150%

*Hint:*

The Overspeed protection value is increasing from 115 % to 125% of nominal RPM for the duration of 5sec (Engine Protection delay). Engine Protection delay takes place during the start of the gen-set when some engine protections have to be blocked. This delay starts after reaching 25% of nominal RPM. It holds true if the value *GeerTeeth* = 0.

**AI1 Wrn [ Bar]**

Warning threshold level for ANALOG INPUT 1

Step: 0,1 bar

Range: -10 – 1000

**AI1 Sd [ Bar]**

Shutdown threshold level for ANALOG INPUT 1

Step: 0,1 bar

Range: -10 – 1000

**AI1 Del [s]**

Delay for ANALOG INPUT 1

Step: 1 s

Range: 0 – 900 s

**AI2 Wrn [ ]**

Warning threshold level for ANALOG INPUT 2

Step: 1 °C

Range: -100 – 10000

**AI2 Sd [ ]**

Shutdown threshold level for ANALOG INPUT 2

Step: 1 °C

Range: -100 – 10000

**AI2 Del [s]**

Delay for ANALOG INPUT 2 alarm.

Step: 1 s

Range: 0 – 900 s

**AI3 Wrn [ ]**

Warning threshold level for ANALOG INPUT 3

Step: 1 %

Range: -100 – 10000

**AI3 Sd [ ]**

Shutdown threshold level for ANALOG INPUT 3

Step: 1 %

Range: -100 – 10000

**AI3 Del [s]**

Delay for ANALOG INPUT 3

Step: 1 s

Range: 0 – 900 s

**Batt Undervolt [V]**

Warning threshold for low battery voltage.

Step: 0,1 V

Range: 8V – 40 (Battery >Volts)

**Batt Overvolt [V]**

Warning threshold for hi battery voltage.

Step: 0,1 V

Range: 8V – 40 (Battery <Volts)

## **Batt Volt Del** [s]

Delay for low battery voltage alarm.

Step: 1s  
Range: 0 – 600 s

## **Maintenance** [h]

Counts down when engine running. If reaches zero, an alarm appears. When the value 9999 is set, than the Maintenance function is disabled and counter does not count. Counter value disappear in controllers statistics.

Step: 1h  
Range: 0 – 9999 h

## **Gener Protect**

---

### Hint:

All electric protections when activated result in shutdown.

## **Overload** [%]

Threshold for generator overload (in % of Nominal power)

Step: 1% of Nominal power  
Range: 0 – 200%

## **Overload Del** [s]

Delay for generator overload alarm.

Step: 0.1s  
Range: 0 – 600.0 s

## **Short Crct Sd** [%]

Shutdown occurs when generator current reaches *Short Crct Sd* limit.

Step: 1 % of Nominal current  
Range: 100 - 500 %

## **Short Crct Del** [s]

Delay for generator shortcurrent alarm.

Step: 0.01s  
Range: 0.00 – 10.00 s

## **\*Amps IDMT Del** [s]

IDMT curve shape selection. *Amps IDMT Del* is Reaction time of IDMT protection for 200% overcurrent  $I_{gen} = 2 * Nomin Current$ .

Step: 0,1 s  
Range: 0,1 - 60,0 s

IDMT is “very inverse” generator over current protection. Reaction time is not constant but depends on generator over current level according following formula.

$$\text{Reaction time} = \frac{\text{Amps IDMT Del} * \text{Nomin Current}}{I_{gen} - \text{Nomin Current}}$$

### Hint:


Reaction time is limited up to 900 sec = 15 minutes. IDMT protection is not active for Reaction time values longer than 15 minutes.

$I_{gen}$  is maximal value of all measured phases of generator current.

EXAMPLE of Reaction time for different over current levels. Values in column 200% are *IDMT Curr Del*.



|               | Overcurrent                 |           |                             |       |
|---------------|-----------------------------|-----------|-----------------------------|-------|
|               | 200 % =<br>IDMT Curr<br>Del | ≤ 100 %   | 101 %                       | 110 % |
| Reaction time | 0,2 s                       | No action | 20 s                        | 2 s   |
|               | 2 s                         | No action | 200 s                       | 20 s  |
|               | 20 s                        | No action | No action<br>(time > 900 s) | 200 s |

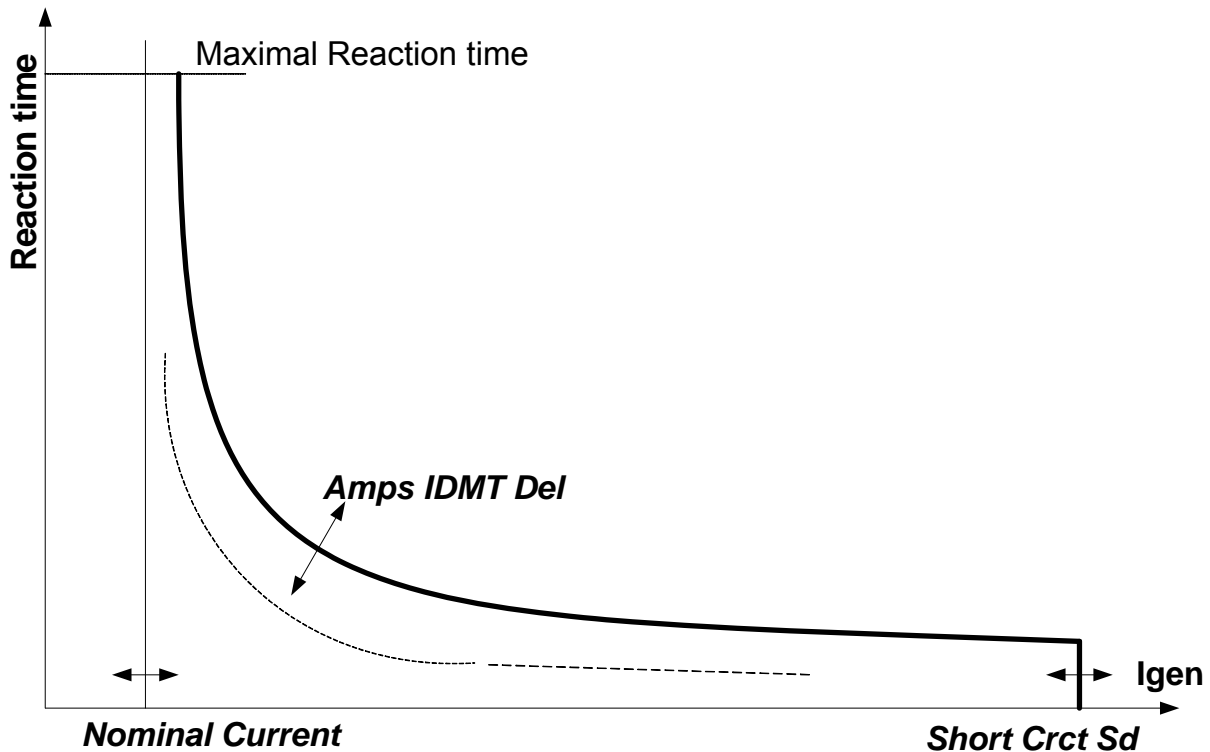

### Amps Unbal Sd [%]

Threshold for generator current asymmetry (unbalance).

Step: 1% of Nominal current

Range: 1 – 200% of Nominal current

### Amps Unbal Del [s]

Delay for generator current unbalance

Step: 0.1 s

Range: 0.0 – 600.0 s

### Gen >V Sd [%]

Threshold for generator overvoltage. All three phases are checked. Maximum out of three is used.

Step: 1% of Nominal voltage

Range: 0(Gen <V Sd) – 200%

### Gen <V Sd [%]

Threshold for generator undervoltage. All three phases are checked. Minimum out of three is used.

Step: 1% of Nominal voltage

Range: 0% – 200 (Gen >V Sd)%

### **Gen V Del [s]**

Delay for generator undervoltage and overvoltage alarm

Step: 0.1s

Range: 0.0 – 600.0 s

### **Volt Unbal Sd [%]**

Threshold for generator voltage unbalance alarm.

Step: 1% of Nominal voltage

Range: 0 – 200% of Nominal voltage

### **Volt Unbal Del [s]**

Delay for generator voltage unbalance alarm.

Step: 0.1s

Range: 0.0 – 600.0 s

### **Gen >Freq Sd [%]**

Threshold for generator phase L3 overfrequency.

Step: 0.1% of Nominal frequency

Range: 0 (Gen <Freq Sd) – 200.0% of Nominal frequency

### **Gen <Freq Sd [%]**

Threshold for generator phase L3 underfrequency.

Step: 0.1% of Nominal frequency

Range: 0.0 – 200 (Gen >Freq Sd) % of Nominal frequency

### **Gen Freq Del [s]**

Delay for generator underfrequency and overfrequency alarm.

Step: 0.1s

Range: 0.0 – 600.0 s

## ***AutoMains Fail***

---

### **RetFromIsland [ MANUAL, AUTO ]**

MANUAL: After closing GCB, IL goes to MAN Mode automatically.

AUTO: No automatic switching to MAN Mode.

### **EmergStart Del [s]**

Delay after the mains failure to the start of the gen-set

Step: 1s

Range: 0 – 6000 s

### **MainsReturnDel [s]**

Delay after the mains return to the GCB opening.

Step: 1s

Range: 1 – 3600 s

### **Fwd Return Del [s]**

Delay after GCB opening to MCB closing during the return procedure.

Delay after MCB opening to GCB closing if the setpoint *MCB Opens On* set to GENRUN

Step: 0.1s


Range: 0 – 600.0 s

The time charts bellow show recommended setting of **AutoMains fail:Fwd Return Del** setpoint.

If the *Fwd Return Del* setpoint is set shorter      If some delay between *MCB feedback*

than the time required for opening of the circuit breaker, the controller closes *GCB Close/Open* output straight away (100 ms) after the *MCB feedback* input deactivates.

deactivation and closing of *GCB Close/Open* output is required, then the *Fwd Return Del* must be set to sum of "MCB opening" + "del" time.

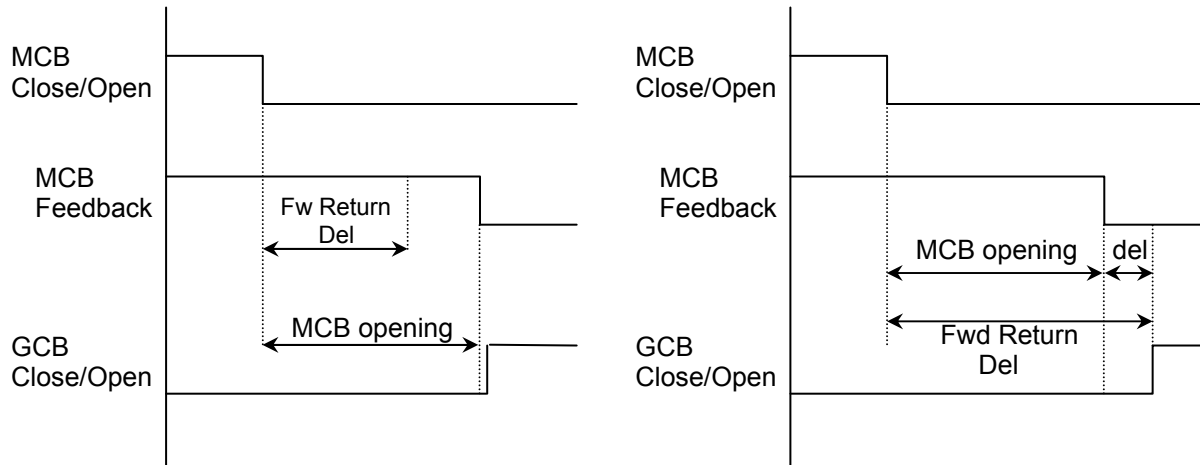

### MCB Close Del [s]

Delay after mains returns to MCB closing, if gen-set is not running (e.g. is in start-up procedure)

Step: 0.1s  
Range: 0 – 60.0 s

### Mains >V [%]

Threshold for mains overvoltage. All three phases are checked. Maximum out of three is used.

Step: 1% of Nominal voltage  
Range: 50 (Mains <V) – 150%

### Mains <V [%]

Threshold for mains undervoltage. All three phases are checked. Maximum out of three is used.

Step: 1% of nominal voltage  
Range: 50% – 150 (Mains >V)%

### Mains V Del [s]

Delay for mains undervoltage and overvoltage

Step: 0.1 s  
Range: 0 – 600.0 s

### Mains V Unbal [%]

Threshold for mains voltage unbalance

Step: 1% of Nominal voltage  
Range: 1 – 150%

### Mains VUnb Del [s]

Delay for mains voltage unbalance

Step: 0.1 s  
Range: 0- 60.0

### Mains >Freq [%]

Threshold for mains overfrequency. All three phases are checked. Maximum out of three is used.

Step: 0.1% of Nominal frequency  
Range: 50 (Mains <Freq) – 150.0%

## Mains <Freq [%]

Threshold for mains underfrequency. All three phases are checked. Maximum out of three is used.

Step: 0.1% of Nominal frequency  
 Range: 50% – 150.0(Mains >Freq)%

## Mains Freq Del [s]

Delay for mains underfrequency and overfrequency



Step: 0.1s  
 Range: 0 – 60.0 s

## MCB Logic [CLOSE-ON / CLOSE-OFF]

The set point influences the behavior of the output MCB CLOSE/OPEN

CLOSE-ON: When the output MCB CLOSE/OPEN is closed – MCB should be closed.

CLOSE-OFF: When the output MCB CLOSE/OPEN is closed – MCB should be opened.

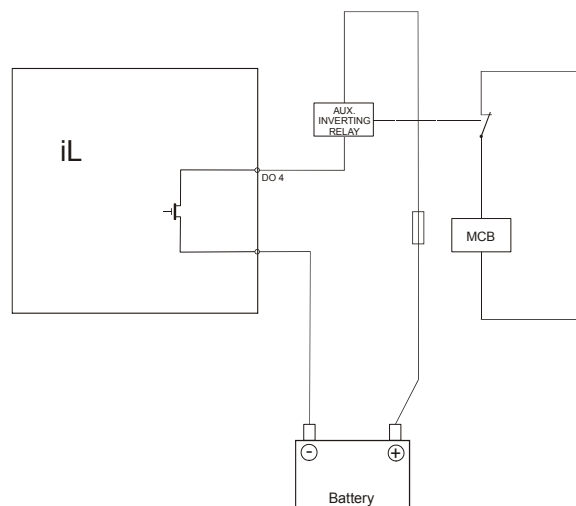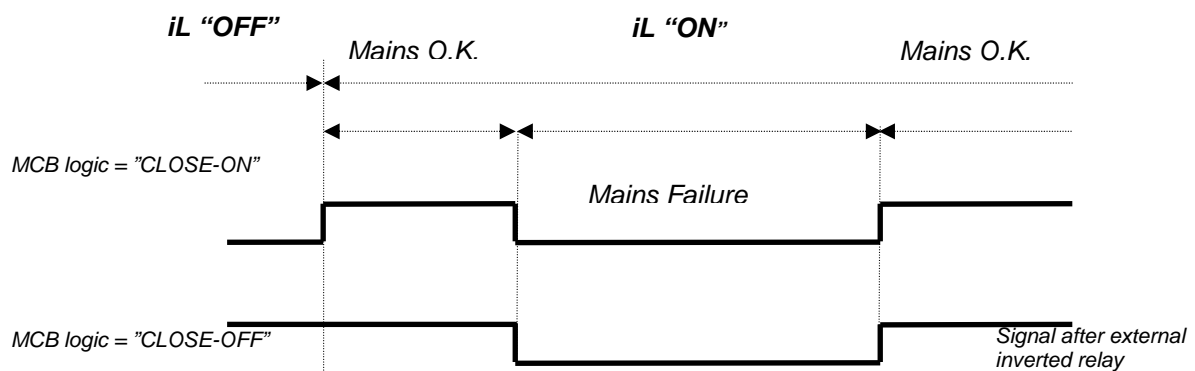

### Hint:

In the case **MCB Logic** = "CLOSE-OFF" it is necessary to change externally the polarity of the output signal.

## ReturnFromTEST [MANUAL / AUTO]

The set point influences the behavior of the TEST mode.

### MANUAL:

- 1) Select TEST, gen-sets starts and running unloaded
- 2) To transfer load from mains to the gen-set press **MCB ON/OFF** or wait for power-cut.

- 3) When mains recovers, the gen-set remains running loaded.
- 4) To stop the gen-set select AUTO Mode
- 5) In AUT Mode:
  - a) After the *MainsReturnDel* IntelliLite opens the GCB
  - b) After the *Fwd Return Del* delay IntelliLite closes the MCB.
  - c) The gen-set is cooled and stopped

AUT:

- 1) Select TEST, gen-sets starts and running unloaded
- 2) To transfer load from mains to the gen-set wait for the power-cut. the controller does not response for **MCB ON/OFF** button.
- 3) When the mains recovers:
  - a) After the *MainsReturnDel* the controller opens the GCB
  - b) After the *Fwd Return Del* delay the controller closes the MCB.
- 4) The gen-set remains running.
- 5) To stop the gen-set select a different mode than TEST.

**MCB Opens On [MAINSFAIL / GENRUN]**

MAINSFAIL

The command to open the MCB is given immediately after mains fail condition evaluated.

GENRUN

The command to open the MCB is not given till the Gen-set starts (with respecting the setpoint *EmergStart Del*), reaches *Running* state, reaches proper voltage and frequency and *Min Stab Time* elapses. After that, the MCB is opened, *Fwd Return Del* timer is started and the GCB is closed after the timer elapses.

Hint:

This option should be used for MCBs using 230V control and not equipped with the undervoltage coil.

**Date/Time**

---

**Time Stamp Per [min]**

Time interval for periodic history records.

Step: 1 min  
Range: 0 – 200min

**#SummerTimeMod [ DISABLED / WINTER / SUMMER,WINTER-S, SUMMER-S ]**

DISABLED: Automatic switching between summer and wintertime is disabled.

WINTER (SUMMER) : Automatic switching between summer and wintertime is enabled and it is set to winter (summer) season.

WINTER-S (SUMMER-S) : Modification for southern hemisphere.

**#Time [HHMMSS]**

Real time clock adjustment.

**#Date [DDMMYYYY]**

Actual date adjustment.

**Timer 1..2 Repeat**

**[NONE/MONDAY/TUESDAY/WEDNESDAY/THURSDAY/WEDNESDAY/FRI DAY/SATURDAY/SUNDAY/MON-FRI/MON-SAT/MON-SUN/SAT-SUN]**

Defines TIMER 1 activation. Binary output TIMER 1 is internally linked with Rem Start/Stop binary input. Refer to binary inputs for details.

NONE: Timer function is disabled  
 MONDAY, TUESDAY, WEDNESDAY, THURSDAY, WEDNESDAY, FRIDAY, SATURDAY, SUNDAY:  
 Timer is activated on daily basis.  
 MON-FRI, MON-SAT, SAT-SUN:  
 Timer is activated on selected day interval.

### Timer1..2 ON Time

Day time when Timer output activates.

### Timer1..2Duration

Duration of Timer output is active.  
 Step: 1 min  
 Range: 1 – 1440 s

## Sensors Spec

---

### AI1,AI2,AI3Calibration [...]

Calibrating constant to adjust the measured value of IL analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.

Step: 1  
 Range: -1000 – +1000

*Hint:*

Calibration constants have to be adjusted when measured value is near the alarm level.  
 User curves can be defined by LiteEdit software.

### \*Extension I/O

---

### IOM AI1..4 Wrn []

The warning level for IOM ANALOG INPUT 1..4 alarm detection.

Step: 1  
 Range: -100 - +10000

### IOM AI1..4 Sd []

The shutdown level for IOM ANALOG INPUT 1..4 alarm detection.

Step: 1  
 Range: -100 - +10000

### IOM AI1..4 Del [s]

Delay for IOM ANALOG INPUT 1..4 alarm.

Step: 1 s  
 Range: 0 - 900 s

*Hint:*

IG-IOM/IGS-PTM analog inputs protection alarms can be configured following way

| Configuration | Protection  |
|---------------|---|
| Under         | Protection is activated only when measured value is under measured level. |
| Over          | Protection is activated only when measured value is over measured level.  |
| Under+fls     | Level 2 protection is activated by sensor fail as well.                   |
| Over+fls      | Level 2 protection is activated by sensor fail as well.                   |

### IOM AI1..4 Calibr [...]

Calibrating constant to adjust the measured value of IOM/PTM analog inputs. Physical dimension of calibrating constant is corresponding to Analog input.

Step: 1  
Range: -1000 – +1000

## SMS/E-Mail

---

### Remote alarm messaging

If a GSM modem and/or Internet bridge is connected to the controller, the controller can send SMS messages and/or emails in the moment when a new alarm appears in the Alarm list. The message will contain a copy of the Alarm list.

To enable this function, you should select with setpoints Yel Alarm Msg and Red Alarm Msg, which levels of alarms shall be announced (red/yellow/both) and also enter valid GSM phone number and/or e-mail address to the setpoints TelNo/Addr Ch1 and TelNo/Addr Ch2. It is possible to put either a GSM number or e-mail to both setpoints.

#### **NOTE:**

An internet module must be available for sending of e-mails. Similarly, a GSM modem is necessary for sending of SMS.

#### *Hint:*

There are 5 attempts for any active call (SMS/E-Mail). Timeout for connection is 90 sec and after 120 sec controller starts the next attempt. During the time the IL-NT is trying to send an active call type, incoming calls are blocked.

### Yel Alarm Msg [ DISABLED, ENABLED ]

Set this setpoint to YES if you want to get messages when a **yellow** (warning) alarm occurs.

#### *Hint:*

The target address (GSM phone number or e-mail address) must be set correctly to the setpoint(s) TelNo/Addr Ch1 resp. TelNo/Addr Ch2.

### Red Alarm Msg [ DISABLED, ENABLED ]

Set this setpoint to YES if you want to get messages when a **red** (shutdown) alarm occurs.

#### *Hint:*

The target address (GSM phone number or e-mail address) must be set correctly to the setpoint(s) TelNo/Addr Ch1 resp. TelNo/Addr Ch2.

### TeNo/Addr Ch1, 2

Enter either a valid GSM phone number or e-mail address to this setpoint, where the alarm messages shall be sent. Type of active call is considered from the value of this parameter. If it consist „@“ it is supposed to be e-mail address and active e-mail is sent. If the value is number, without „@“, it is supposed to be the telephone number and active SMS is sent.

#### *Hint:*

For GSM numbers use either national format (i.e. like number you will dial if you want to make a local call) or full international format with "+" character followed by international prefix in the begin.


**This setpoint can be modified from PC only!**

# \*ECU-controlled engine support


There exists only one firmware branch for both standard and electronic controlled (monitored) engines.

Presence of the ECU on the CAN bus/RS232 is configured via LiteEdit like other peripherals (IG-IOM,



IGL-RA15). Pressing the  button in Configuration window of LiteEdit opens ECU dialog window where the appropriate engine/ECU type should be selected. The actual list of ECU types is available on ComAp website in "ECU list - x.y.iwe" package. Download this package and import it into LiteEdit in the same way as standard firmware IWE package.

More information about ECU list packages, configuration and wiring recommendations can be found in *Comap Electroni Engines Support manual*.

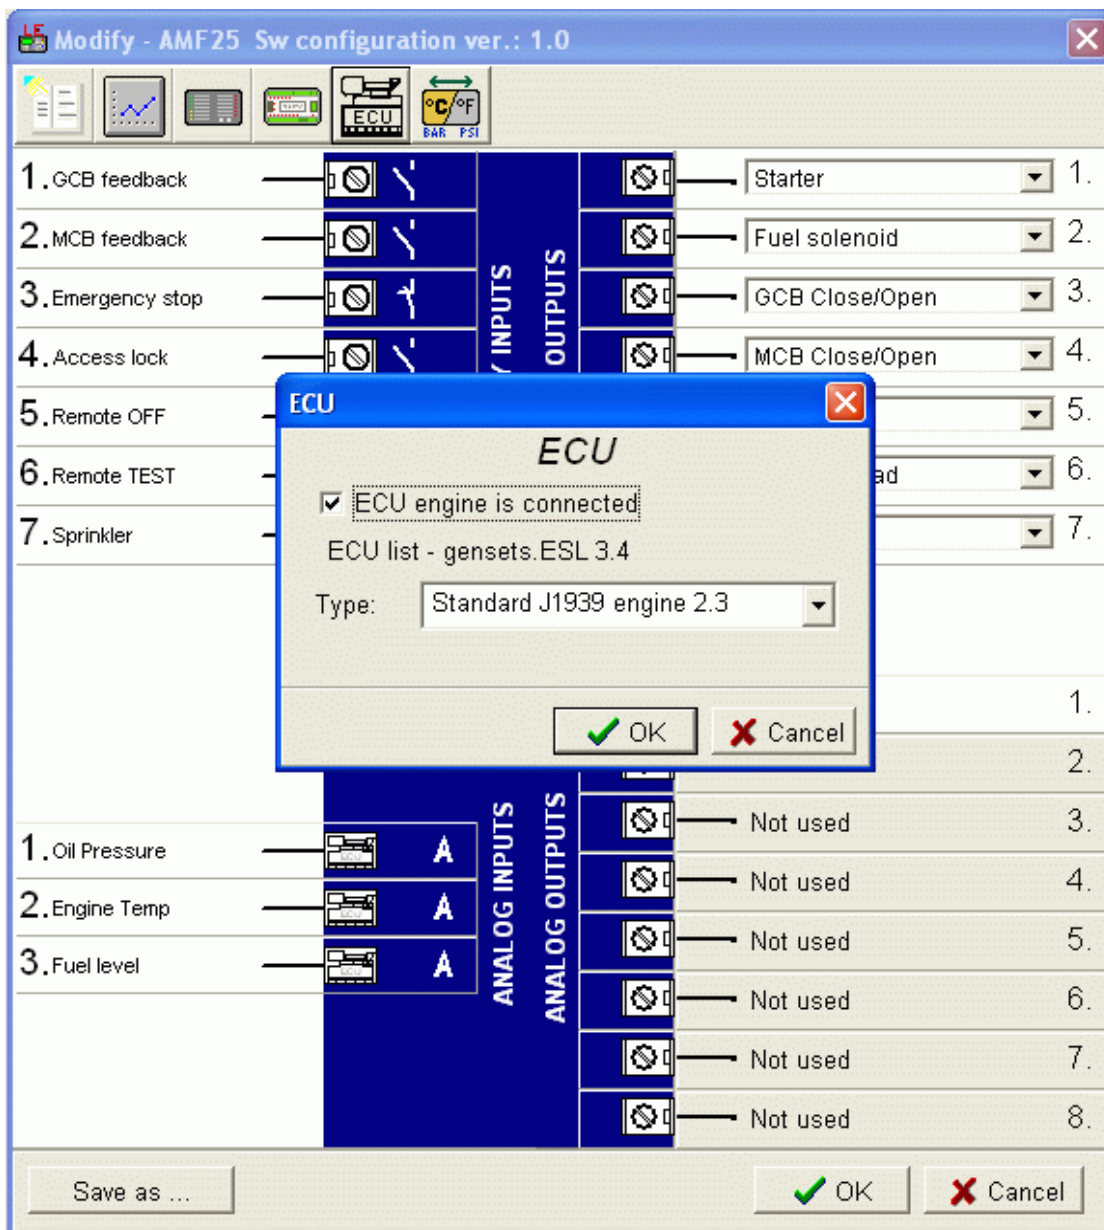

If the connected engine is Cummins with GCS engine control unit communicating via Modbus it is



necessary to set the setpoint **Basic settings**: *COM1 Mode* = ECU LINK or *COM2 Mode* = ECU LINK.

Loss of communication causes a warning alarm. On the contrary the ECU can be switched off at quiescent engine that means not-communicating ECU is in that moment normal situation. All values from ECU shall show ####, but no alarm is displayed. The output *ECU Comm OK* follows the real situation which means it is not active anytime when the ECU does not communicate.

The output *ECU PowerRelay* closes at the beginning of prestart and opens if the engine shall be stopped. It can be used to switch the ECU on and off. If the putput is configured but not active the ECU communication alarm is blocked.

The engine is started via standard contact output or via CAN bus depending on ECU capabilities.

## Values read from ECU

There is fixed set of values read from J1939 ECU by IL-NT controller:

- Engine speed (frame EEC1)
- Engine oil pressure (frame Engine Fluid Level/Pressure)
- Engine coolant temperature (frame Engine Temperature)
- Total engine hours (frame Engine Hours, Revolutions)
- Fuel rate (frame Fuel Economy)
- Boost pressure (frame Inlet/Exhaust Conditions)
- Intake manifold 1 temperature (frame Inlet/Exhaust Conditions)
- Engine oil temperature 1 (frame Engine Temperature 1)

When "ECU LINK"-Modbus option is selected, following values are read from Modbus Register Data (for QSX15, QSK45, QSK60):

- Engine Speed (Register Address:30001)
- Oil Pressure (Register Address:30003)
- Coolant Temperature (Register Address:30002)
- Engine Running Time (Register Address:30008-30009)
- Fuel Consumption Rate (Register Address:30018)
- Intake Manifold Absolute Pressure (Register Address:30530 (QSK45, QSK60 only))
- Intake Manifold Temperature (Register Address:30531 (QSK45, QSK60 only))

### *Hint:*

Values read from ECU are not written to history besides the fault codes.

## Diagnostic messages read from ECU

Diagnostic messages are read and displayed in extra ECU Alarm list. For Standard J1939 SPN (Suspect Parameter Number), FMI (Failure Mode Identifier) and OC (Occurrence Counter) are shown together with text description if available.

One SPN (Suspect Parameter Number) / FMI (Failure Mode Identify) couple describes one fail information. If FMI is equal to 0 or 1, WRN is displayed in the ECU Alarm list. For any other FMI values, FLS is displayed.

Detail SPN/FMI code specification see in:

- SAE Truck and Bus Control and Communications Network Standards Manual, SAE HS-1939 Publication
- Or refer to corresponding engine manufacturer's ECU error codes list.

Complete list of text diagnostic messages for each ECU can be found in *Comap Electronic Engines Support* manual.

### *Hint:*

InteliLite controller doesn't support J1587 diagnostic line on Volvo engines. This can cause in some cases a J1939 alarm message FC:000608 due to missing J1587 bus. Contact your Volvo distributor to update ECU firmware.

For Scania engines the fault codes are displayed in hexadecimal format.

## Analog inputs


Reading of mentioned values from ECU enables to use analog inputs of the unit for other purposes, e.g. measuring, displaying and alarm activation related to various quantities. The configuration thus allows to use three analog inputs on the central unit and four analog inputs on IG-IOM/IGS-PTM module if connected.

## Connection description


The following diagrams show how to connect the engine control unit to the IntelliLite controller:

### Engines with J1939 support started via CAN bus

VOLVO PENTA engines (EMS II, EDC III units)

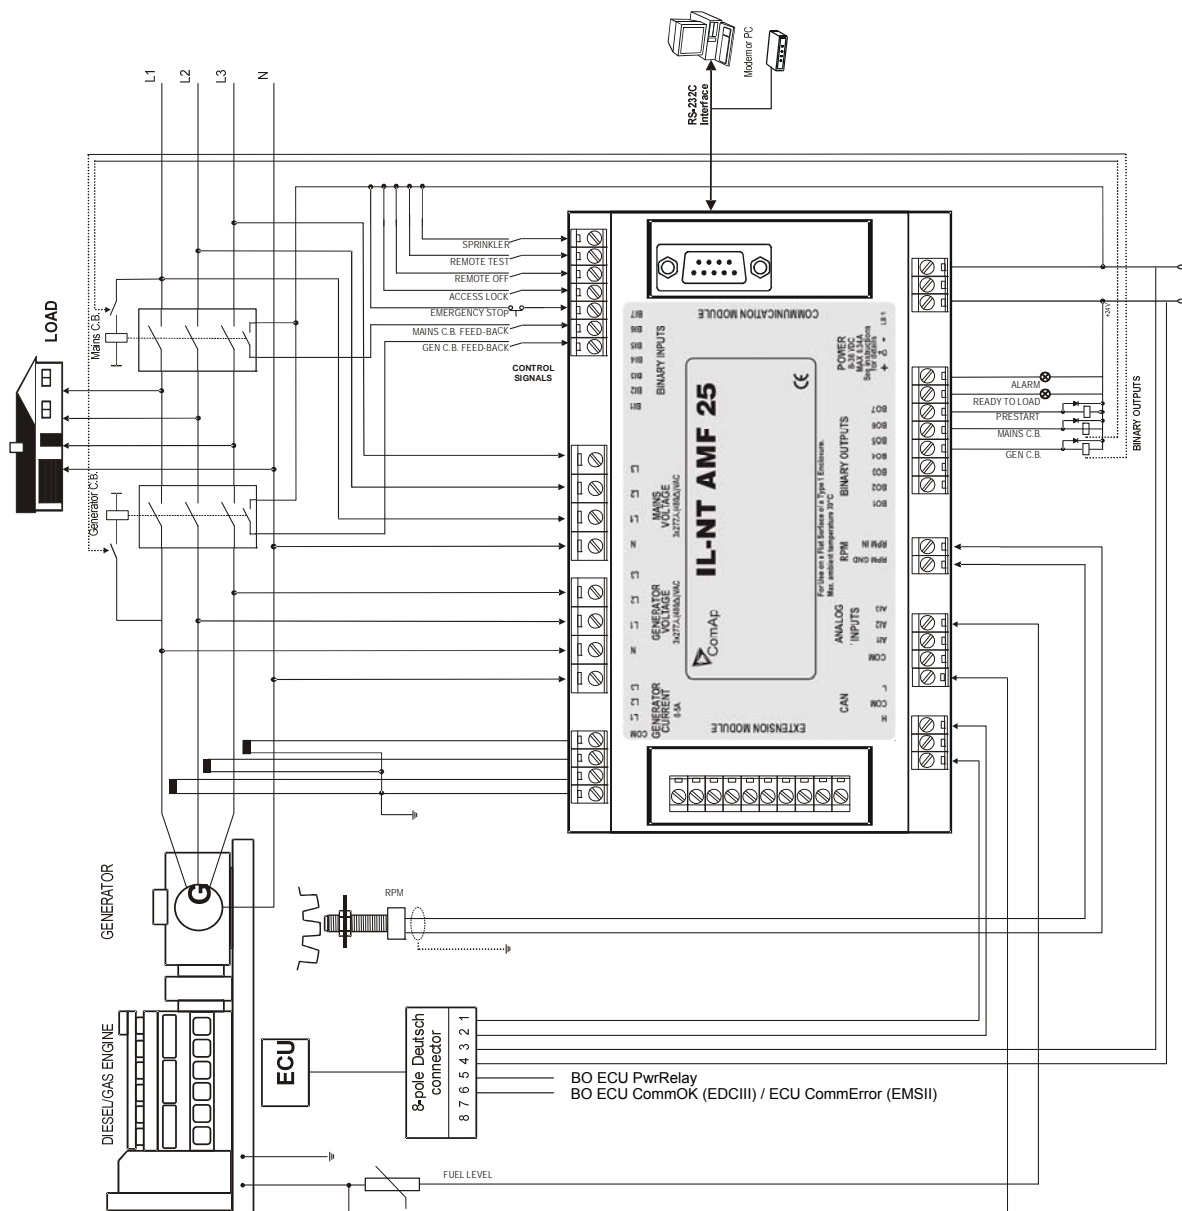

# SCANIA S6

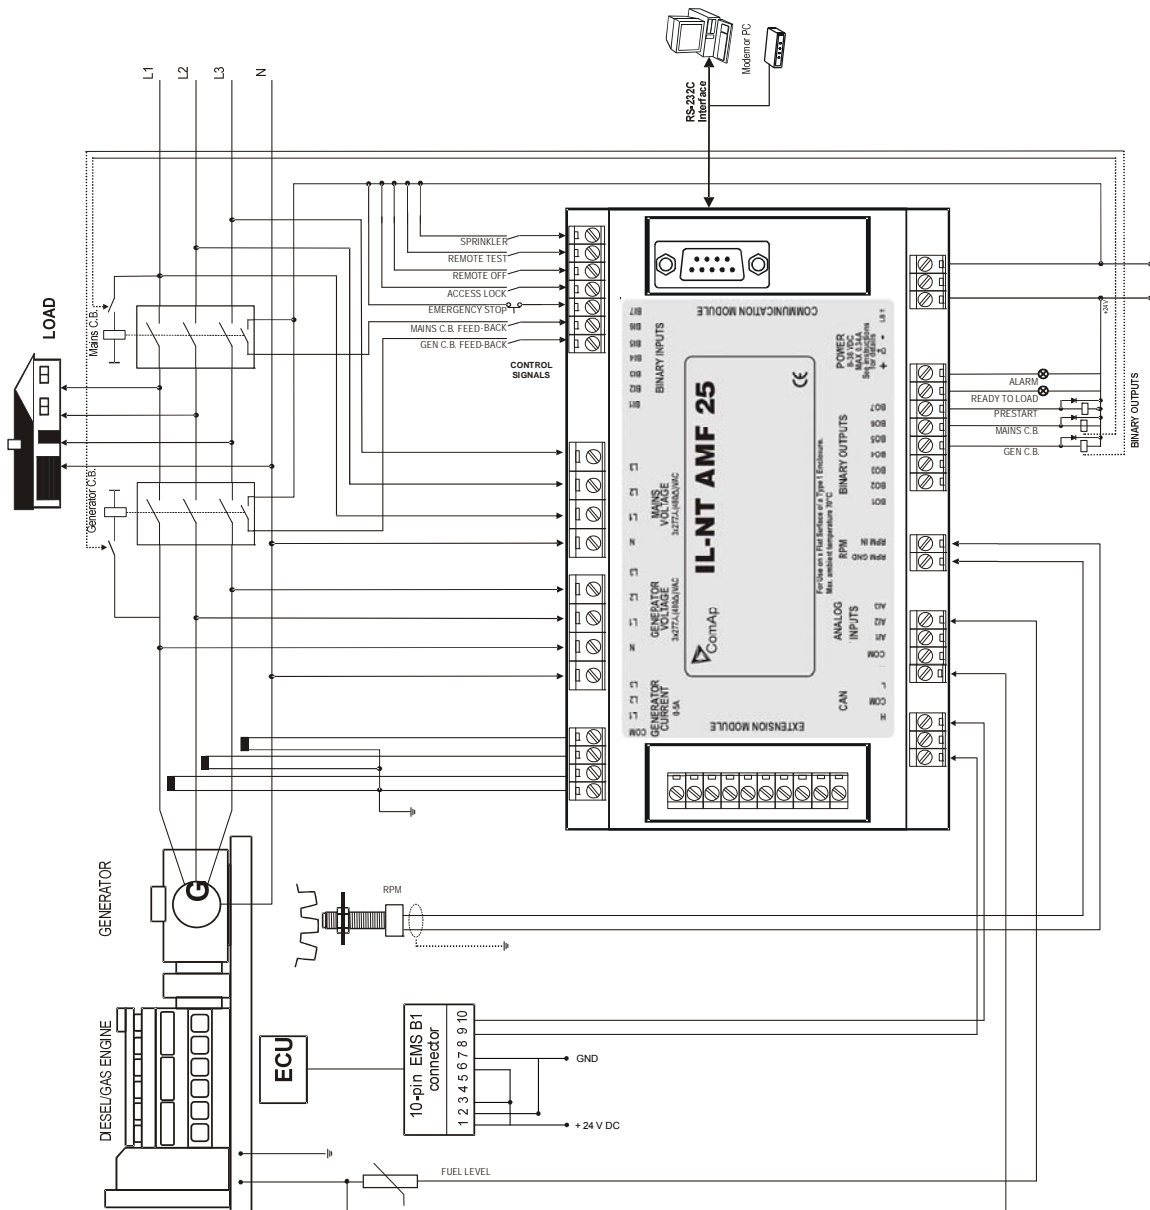

## Cummins engines with MODBUS communication

InteliLite set up:

**Basic settings:** COM1 Mode = ECU LINK or COM2 Mode = ECU LINK


Software configuration: ECU → ECU engine is connected → Type: Cummins MODBUS

RS232/RS485 converter (see following diagram) set up:

Data format settings (SW1) 11 bits (1 start bit, 8 data bits, 2 stop bits)

Baud rate settings (SW2) 9600 bps

(more info available on [http://www.advantech.com/products/Model\\_Detail.asp?model\\_id=1-D6FLH](http://www.advantech.com/products/Model_Detail.asp?model_id=1-D6FLH))

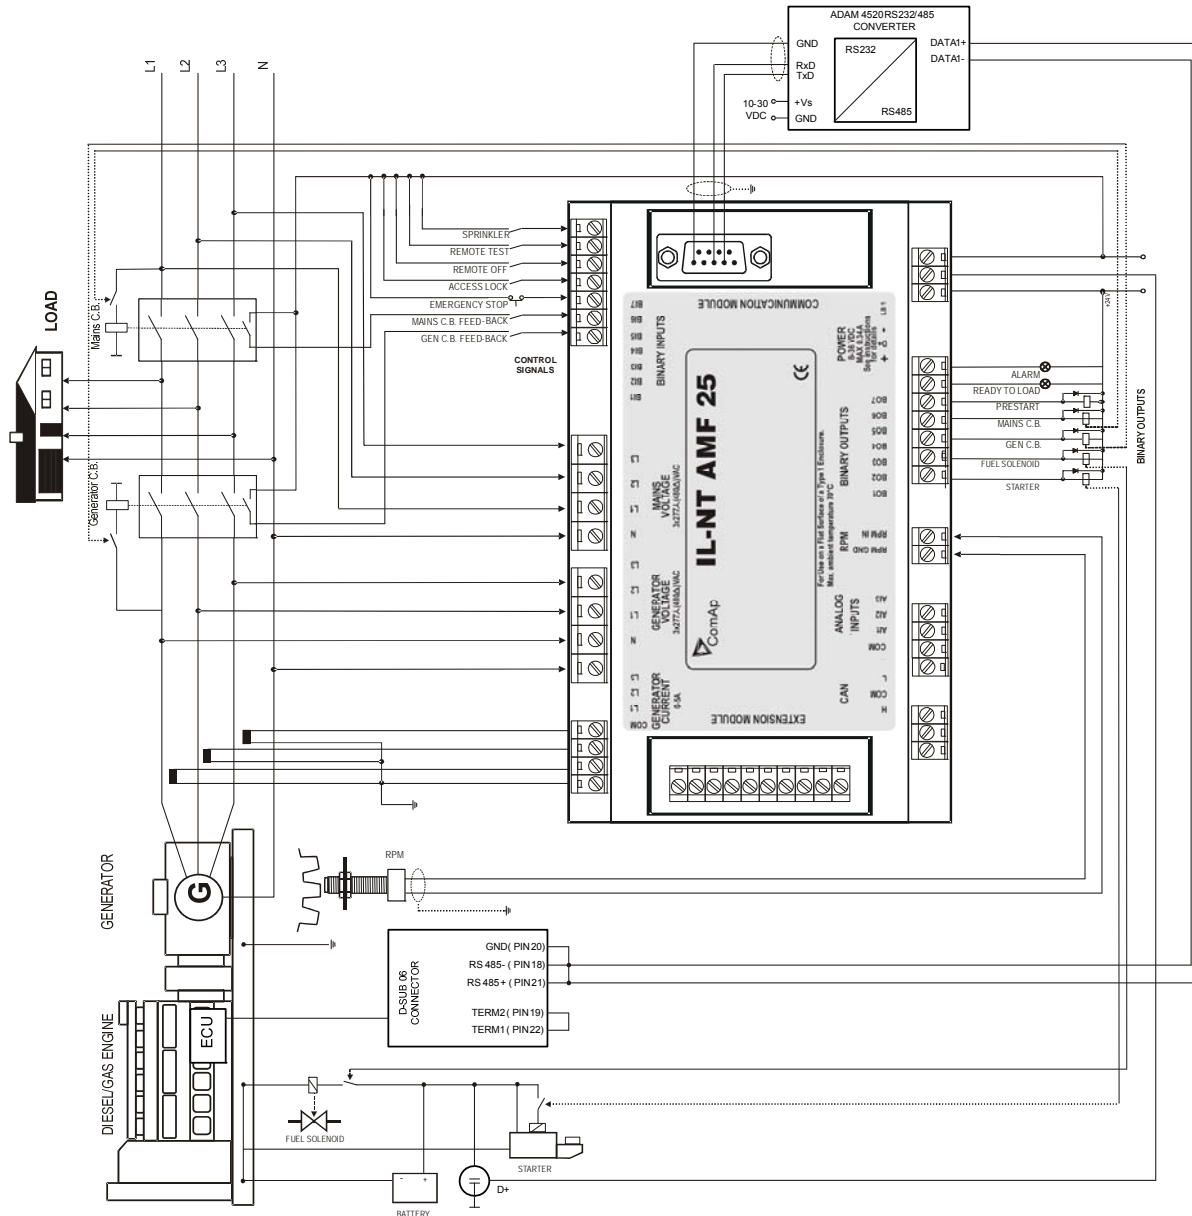

# Sensor Specification

## ***Background of the sensor calibration***

---

To correct measuring error of each analog input (pressure, temperature, level) calibrating constants within 10 % of measure range should be set. Two calibrating constants are set in physical units - bar, °C, % .Calibration is made by adding the value of setpoint *AlxCalibration* directly to the calculated value at analog input.

***Hint:***

The calibration must be done at the operational point of the analog input (e.g. 80°C, 4.0Bar etc..)

## ***Default sensor curves***

---

There are 20 resistive curves available. The following table provides information on minimum/maximum values of respective sensors. Actual values especially of temperature curves may differ. Meaning is to prolong curve to the lower temperature values, so the cold engine will not raise alarm fail sensor.

| <b>Curve</b>   | <b>Min Value</b> | <b>Max Value</b> | <b>Unit</b> |
|----------------|------------------|------------------|-------------|
| Datcon 5 Bar   | 0                | 5                | Bar         |
| Datcon 7 Bar   | 0                | 7                | Bar         |
| Datcon 10 Bar  | 0                | 10               | Bar         |
| Datcon 80 Psi  | 0                | 80               | Psi         |
| Datcon 100 Psi | 0                | 100              | Psi         |
| Datcon 150 Psi | 0                | 150              | Psi         |
| Datcon Low °C  | 25               | 150              | °C          |
| Datcon High °C | 25               | 160              | °C          |
| Datcon Low °F  | 80               | 300              | °F          |
| Datcon High °F | 80               | 320              | °F          |
| Datcon Fuel %  | 0                | 100              | %           |
| VDO 5 Bar      | 0                | 5                | Bar         |
| VDO 10 Bar     | 0                | 10               | Bar         |
| VDO 72 Psi     | 0                | 72               | Psi         |
| VDO 145 Psi    | 0                | 145              | Psi         |
| VDO 40-120 °C  | 40               | 120              | °C          |
| VDO 50-150 °C  | 50               | 150              | °C          |
| VDO 100-250 °F | 100              | 250              | °F          |
| VDO 120-300°F  | 120              | 300              | °F          |
| VDO Fuel %     | 0                | 100              | %           |

***Hint:***

When measured value is 6% out of range the Sensor fail FLS is detected. You can find detail information on sensores in LiteEditu Reference Guide.

# Function Description

## OFF Mode

No start of the gen-set is possible. Outputs STARTER, GCB CLOSE/OPEN and FUEL SOLENOID are not energized.

No reaction if buttons **START**, **STOP**, **GCB ON/OFF**, **MCB ON/OFF** are pressed.

When power-cut comes, MCB CLOSE/OPEN opens. After mains returns, MCB CLOSE/OPEN closes with *MCB close del.*

## MAN Mode

**START** - starts the gen-set.

**GCB ON/OFF**

- The controller closes GCB to dead bus.
- The controller opens GCB when closed.
- If the generator voltage is out of the limits, the controller does not respond to the **GCB ON/OFF**

**MCB ON/OFF**

- The controller closes MCB to dead bus.
- The controller opens MCB when closed.

**STOP** stops the gen-set.

### Hint:

The engine can run without load unlimited time.

The controller does not automatically stop the running gen-set in MAN Mode.

The controller does not start the gen-set when power cut comes.

**!! The controller provides interlock between GCB and MCB, it means it is never possible to close both CB together**

## Start-stop sequence (simplified)

MODE = MAN (Engine start/stop request is given by pressing buttons **START** and **STOP**)

MODE = AUT (Engine start/stop request is evaluated form Mains failure/return)

| State                 | Condition of the transition  | Action  | Next state              |
|-----------------------|--|---|-------------------------|
| Ready                 | Start request  | PRESTART on<br><i>Prestart Time</i> counter started                                 | <i>Prestart</i>         |
|                       | RPM > 2 or Oil pressure detected or Gen voltage > 10V or D+ active   |   | <i>Stop (Stop fail)</i> |
|                       | OFF Mode selected or Shut down alarm active  |   | <i>Not Ready</i>        |
| Not Ready             | RPM < 2, Oil pressure not detected, Vgen < 10V, D+ not Active no shutdown alarm active, other than OFF Mode selected |   | <i>Ready</i>            |
| Prestart <sup>3</sup> | <i>Prestart time elapsed</i>   | STARTER on<br>FUEL SOLENOID on <sup>4</sup><br><i>MaxCrank Time</i> counter started | <i>Cranking</i>         |

| State                    | Condition of the transition  | Action   | Next state                   |
|--------------------------|--|--|------------------------------|
| Cranking <sup>3</sup>    | <i>RPM &gt; Starting RPM</i>   | <i>STARTER off<br/>PRESTART off</i>  | <i>Starting</i>              |
|                          | <i>D+ input activated or oil pressure detected or Gen voltage &gt; 25% Vgnom or D+ active for 1s</i> | <i>STARTER off<br/>PRESTART off</i>  | <i>Cranking</i>              |
|                          | <i>MaxCrank Time elapsed, 1st attempt</i>  | <i>STARTER off<br/>FUEL SOLENOID off<br/>STOP SOLENOID on<br/>CrankFail Pause timer started</i>            | <i>Crank pause</i>           |
|                          | <i>MaxCrank Time elapsed, last attempt</i>   | <i>STARTER off<br/>PRESTART off</i>  | <i>Shutdown (Start fail)</i> |
| Crank pause <sup>3</sup> | <i>CrankFail Pause elapsed</i>   | <i>STARTER on<br/>FUEL SOLENOID on<sup>4</sup><br/>STOP SOLENOID off<br/>MaxCrank Time counter started</i> | <i>Cranking</i>              |
| Starting <sup>3</sup>    | <i>80% Nominal RPM reached</i>   | <i>READY TO LOAD on<sup>1</sup><br/>Min, Max Stab Time counter started</i>                                 | <i>Running</i>               |
|                          | <i>RPM = 0 or any other shutdown condition</i>   | <i>FUEL SOLENOID off<br/>STOP SOLENOID on</i>  | <i>Shutdown</i>              |
|                          | <i>60 sec. Elapsed</i>   | <i>FUEL SOLENOID off<br/>STOP SOLENOID on</i>  | <i>Shutdown (Start fail)</i> |
| Running                  | <i>Stop request</i>  | <i>READY TO LOAD off<br/>Cooling Time timer started</i>  | <i>Cooling</i>               |
|                          | <i>RPM = 0 or any other shutdown condition</i>   | <i>READY TO LOAD off<sup>2</sup><br/>FUEL SOLENOID off</i>   | <i>Shutdown</i>              |
|                          | <i>GCB CLOSE/OPEN closed</i>   |  | <i>Loaded</i>                |
| Loaded                   | <i>GCB CLOSE/OPEN opened</i>   |  | <i>Running</i>               |
|                          | <i>RPM = 0 or any other shutdown condition</i>   | <i>FUEL SOLENOID off<br/>STOP SOLENOID on<br/>READY TO LOAD off</i>  | <i>Shutdown</i>              |
| Cooling                  | <i>Cooling Time elapsed</i>  | <i>FUEL SOLENOID off<br/>STOP SOLENOID on</i>  | <i>Stop</i>                  |
|                          | <i>RPM = 0 or any other shutdown condition</i>   | <i>FUEL SOLENOID off<br/>STOP SOLENOID on</i>  | <i>Shutdown</i>              |
|                          | <i>Start request</i>   | <i>READY TO LOAD on<sup>1</sup></i>  | <i>Running</i>               |
| Stop                     | <i>RPM = 0, Oil pressure not detected, Vgen &lt; 10V, D+ not active</i>                              |  | <i>Ready</i>                 |
|                          | <i>60 sec. Elapsed</i>   |  | <i>Stop (Stop fail)</i>      |
|                          |  |  |                              |

<sup>1</sup> if all generator parameters OK and Min Stab Time elapsed, indicates that GCB is possible to close. In AUTO Mode closes in this moment GCB automatically.

<sup>2</sup> If GCB output used GCB opens automatically

<sup>3</sup> The start-up sequence can be interrupted in any time by comming stop request

<sup>4</sup> Fuel solenoid is switched on with time advance of 1s fixed before starter motor is switched on.

**Hint:**

Threshold level for D+ input is 80% supply voltage, activation delay is 1s (to override short firings during cranking – for example in cold conditions).

## AUT Mode

The controller does not respond to buttons **START**, **STOP**, **MCB ON/OFF**, **GCB ON/OFF**. Engine start/stop request is evaluated from Mains failure/return.

### AMF sequence (simplified)

| State            | Condition of the transition  | Action  | Next state       |
|------------------|--|---|------------------|
| Mains operation  | Mains failed <sup>1</sup> or MCB feedback dropout<br><i>MCB Opens On</i> = MAINSFAIL | MCB CLOSE/OPEN off<br><i>EmergStart Del</i> timer started   | Mains failure    |
|                  | Mains failed <sup>1</sup> or MCB feedback dropout<br><i>MCB Opens On</i> = GENRUN    | <i>EmergStart Del</i> timer started   | Mains failure    |
| Mains failure    | Mains voltage and frequency OK<br><i>MCB Opens On</i> = MAINSFAIL                    | After elapsing <i>MCB Close Del</i> MCB CLOSE/OPEN on   | Mains operation  |
|                  | Mains voltage and frequency OK<br><i>MCB Opens On</i> = GENRUN                       | None  | Mains operation  |
|                  | <i>EmergStart Del</i> elapsed<br><i>MCB Opens On</i> = MAINSFAIL                     | Engine start sequence performed, then GCB CLOSE/OPEN on <sup>2</sup>  | Island operation |
|                  | <i>EmergStart Del</i> elapsed<br><i>MCB Opens On</i> = GENRUN                        | Engine start sequence performed, then MCB CLOSE/OPEN off, time delay <i>Fwd Return Del</i> performed and GCB CLOSE/OPEN on <sup>2</sup> | Island operation |
| Island operation | Mains voltage and frequency OK   | <i>MainsReturnDel</i> timer started   | Mains return     |
| Mains return     | Mains failed   |   | Island operation |
|                  | <i>MainsReturnDel</i> elapsed  | GCB CLOSE/OPEN off, then after <i>Fwd Return Del</i> MCB CLOSE/OPEN on and then engine stop sequence performed <sup>3</sup>             | Mains operation  |

<sup>1</sup> **Mains failed** means mains over/under -voltage, over/under -frequency, voltage assymetry (preset delay must elapse)

<sup>2</sup> If during start-up sequence mains returns, then MCB is reclosed with delay *MCB Close Del* (if opened, depending on *MCB Opens On* setpoint) and start-up sequence is interrupted.

<sup>3</sup> If mains fails during stop procedure (cooling) again, stop sequence is interrupted, MCB opened and GCB reclosed with delay *Fwd Return Del*.

See also chapter **Circuit breakers timing**.

## TEST mode

The setpoint *ReturnFromTEST* influences the behavior of TEST mode.

**Caution:** The gen-set starts automatically and is always running in TEST mode!

### The setpoint *ReturnFromTEST* = MANUAL

While TEST mode is selected, gen-set starts and is running unloaded.



To load the gen-set

- a) Power cut comes or
- b) **MCB ON/OFF** is pressed

When power cut: MCB is opened, after *Fwd Return Del* elapses, GCB is closed.

When the mains recovers gen-set stays supplying island load. To transfer the load back to the healthy mains, switch the controller to AUT Mode.

Hint:

The controller does not respond to **GCB ON/OFF** , **STOP**, **START**  
 The load is automatically transferred back to the mains when any gen-set shut down protection activates.

## Test on load

When binary input Rem TEST OnLd is closed, the controller automatically (if TEST mode selected) transfers load from the mains to the gen-set. Setpoint AutoMainsFail: ReturnFromTEST must be set to MANUAL.

## The setpoint *ReturnFromTEST* = AUTO

While TEST mode is selected, gen-set is running unloaded.

When power cut comes the controller opens MCB.

After *Return break* elapses, GCB is closed.

When the mains recovers:

- a) After *MainsReturn Del* the controller opens the GCB
- b) After *Fwd Return Del* delay MCB is closed.
- c) The engine stays running

To stop the gen-set select other mode than TEST

Hint:

The controller does not respond to **GCB ON/OFF** , **MCB ON/OFF** , **STOP**, **START**

## Circuit breakers timing


### Relation between Mains fail and MCB and start of gen-set

*MCB Opens On* = MAINSFAIL:

Mains fail is detected as Mains <V, Mains >V, Mains V Unbal, Mains <Freq, Mains >Freq. After detection MCB is opened.


Hint:

When MCB feedback drop-out and measured mains electrical limits (voltage, frequency) are still in limits, the controller switches MCB ON again.

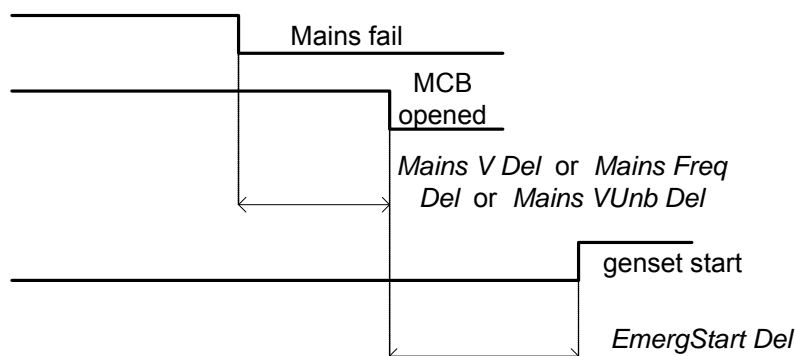


MCB Opens On = GENRUN:

The MCB is not opened till the engine starts and gets ready to take the load.

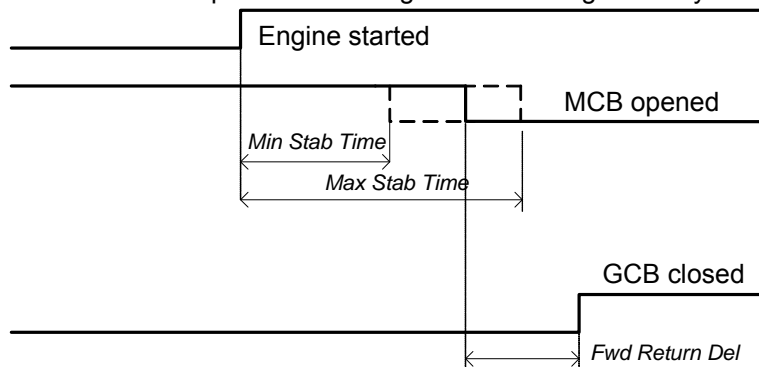

### Relation between Mains return and MCB


OFF Mode, GCB and MCB are opened

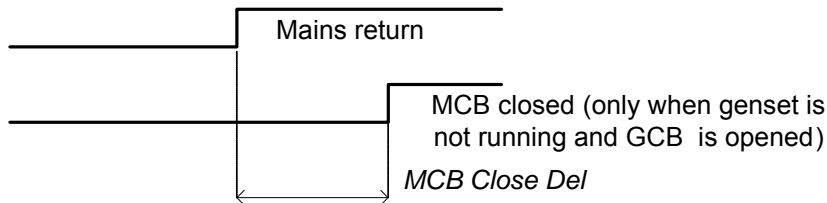

### Relation between GCB and MCB

Conditions: AUTO Mode, Mains =off, MCB = opened, GCB = closed, gen-set loaded.

Mains returns: GCB opens (according 3., *MainsReturnDel*), MCB closes (*Fwd Return Del*)

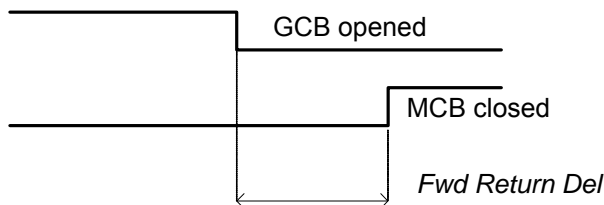

### Relation between GCB and MCB (Test mode)


**Situation 1:** Mains =OK, MCB = closed, GCB = opened, RPM=0.

Change mode to TEST: gen-set starts, GCB = opened.

Mains cut: MCB opens (according 1.), GCB closes (*Fwd Return Del*)

**Situation 2:** *ReturnFromTEST*=MANUAL, Mains =OK, MCB is closed, gen-set is running.

Press **MCB on/off** -> MCB opens, GCB closes (*Fwd Return Del*), gen-set is running loaded.

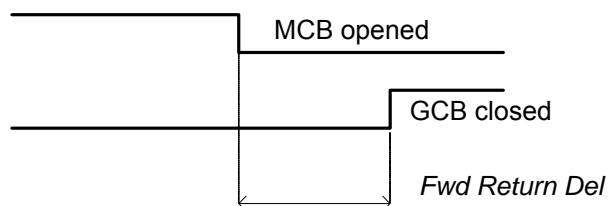

# Alarm Management

Following alarms are available:

- Sensor fail
- Warning
- Shut down
- Mains failure

## ***Sensor fail (FLS)***

---

Sensor fail is detected when measured value is 6% out of selected sensor characteristic, or data from ECU is missing. Sensor fail is indicated by ##### symbol instead measured value.

## ***Warning (WRN)***

---

When warning comes up, only alarm outputs and common warning output are closed.

### **Possible warnings:**

See [List of possible events](#)

## ***Shut down (SD)***

---

When the shut-down alarm comes up, IntelliLite opens outputs GCB CLOSE/OPEN, FUEL SOLENOID, STARTER and PRESTART to stop the engine immediately. Alarm outputs and common shutdown output are closed. Active or not reset protection disables start.

### **Possible shut-down alarms:**

See [List of possible events](#)

## ***Mains failure (MF)***

---

Mains failure detection depends on **Auto mains failure** setpoints (levels and delays) adjusting. When the mains failure comes up, mains circuit breaker is opened.


### **Possible mains failure reasons:**

See [List of possible events](#)

#### *Hint:*

Mains failure is not written to alarm list!

## Alarm time chart

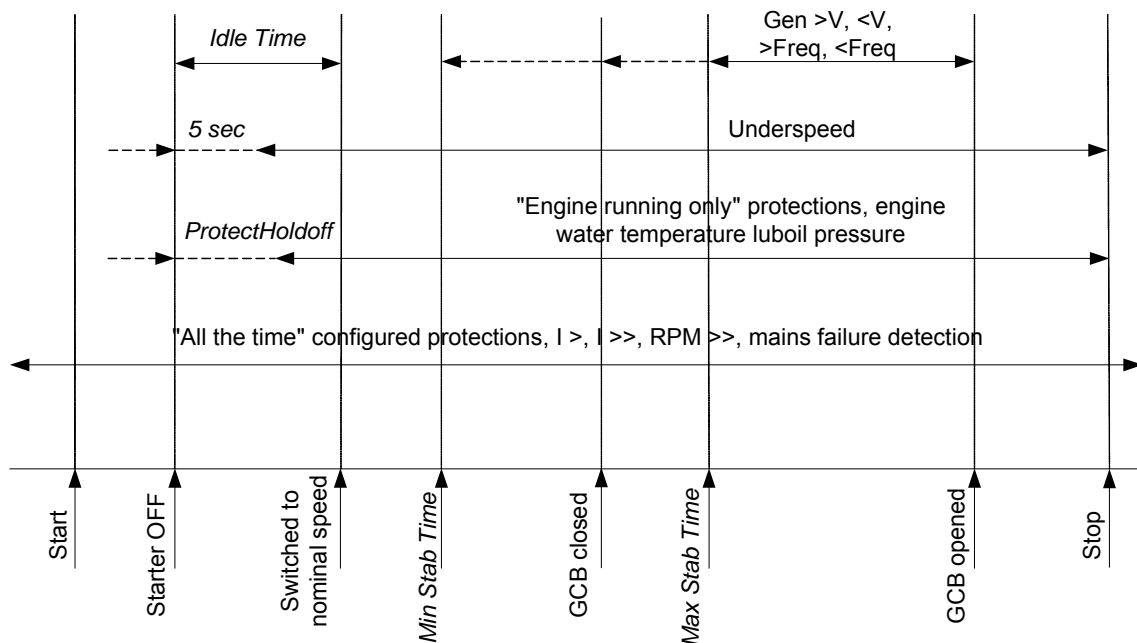

## Voltage phase sequence detection

InteliLite controller detects phase sequence on both generator and mains/bus voltage terminals. This protections are important after controller installation to avoid wrong voltage phases phase connection. Following alarms can be detected:


### Wrong phase sequence

There is fix defined phase sequence in InteliLite controller L1, L2, L3. When the phases are connected in different order (e.g. L1,L3,L2 or L2,L1,L3) following alarms are detected:

- Gen CCW Rot = wrong generator phase sequence
- Mains CCW Rot = wrong mains phase sequence

## Sensor fail detection

Sensor fail FI is detected when measured value is 6 percent out of range. Controller screen displays in this case string ##### instead measured value.

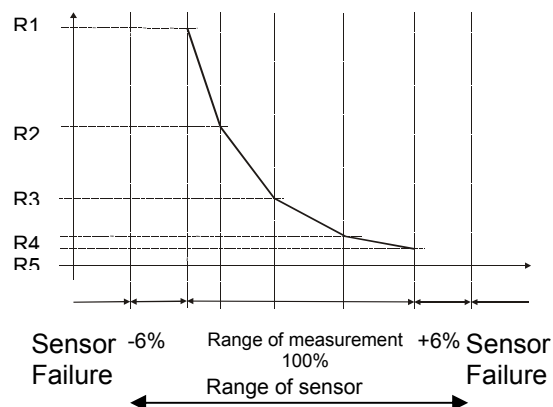


## GCB, MCB fail detection


MCB or GCB fail detection is based on binary output CB close/open comparing with binary input CB feedback.

There are three different time delays for CB fail detection – see following diagrams.


When is BO GCB close/open (MCB close/open) in steady state and GCB feedback (MCB feedback) is changed the GCB fail is detected immediatelly (no delay).

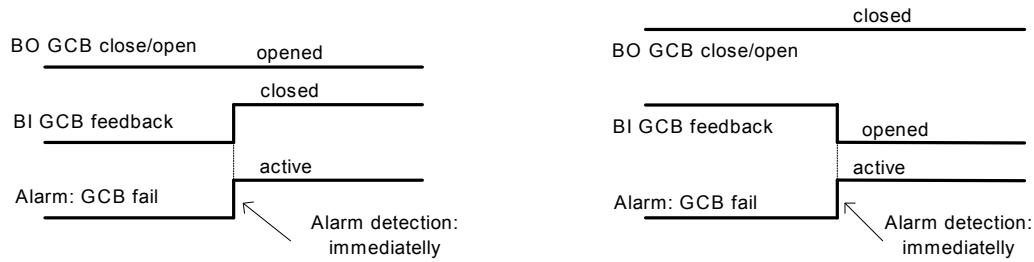

When BO GCB close/open (MCB close/open) opens there is 5 sec delay for GCB fail (MCB fail) detection.

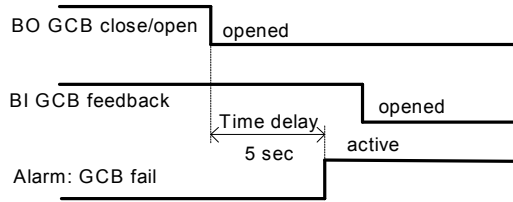

When BO GCB close/open (MCB close/open) closes, there is 5sec delay for GCB fail (MCB fail) detection:

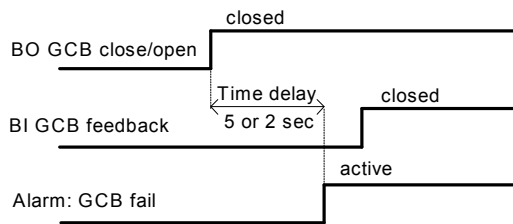

**Hint:**

You can solve state of MCB fail by pressing Fault Reset button.

# Gen-set Operation States

## Engine state machine

|           |  |
|-----------|--|
| Init      | Autotest during controller power on                              |
| Not ready | Gen-set is not ready to start                                    |
| Prestart  | Prestart sequence in process, Prestart output is closed          |
| Cranking  | Engine is cranking   |
| Pause     | Pause between start attempts                                     |
| Starting  | Starting speed is reached and the <i>Idle timer</i> is running   |
| Running   | Gen-set is running at nominal speed                              |
| Loaded    | Gen-set is running at nominal speed and GCB OPEN/CLOSE is closed |
| Stop      | Stop   |
| Shutdowns | Shut-down alarm activated  |
| Ready     | Gen-set is ready to run  |
| Cooling   | Gen-set is cooling before stop                                   |
| EmergMan  | Emergency Manual gen-set operation                               |

## Electric state machine

|           |   |
|-----------|---|
| MainsOper | Mains is present  |
| MainsFit  | Mains cut off – immediate state                                       |
| ValidFit  | Mains cut off – takes EmergStart del                                  |
| IslOper   | Island operation  |
| MainsRet  | Mains recover   |
| Brks Off  | GCB, MCB opened   |
| MinStabTO | Minimal Stabilization Timeout   |
| MaxStabTO | Maximal Stabilization Timeout   |
| FwRet Brk | Forward return break delay. Delay between GCB opening and MCB closing |

## List of possible events

| Events specification | Protection type | Information on binary output available (See list of <a href="#">Binary outputs</a> ) | Description  |
|----------------------|-----------------|--|--|
| A11 Wrn              | WRN             | YES  | Value measured on analog input 1 is lower than <i>A11 Wrn</i> setpoint.                  |
| A11 Sd               | SD              | YES  | Value measured on analog input 1 is lower than <i>A11 Sd</i> setpoint.                   |
| A12 Wrn              | WRN             | YES  | Value measured on analog input 2 is greater than <i>A12 Wrn</i> setpoint.                |
| A12 Sd               | SD              | YES  | Value measured on analog input 2 is greater than <i>A12 Sd</i> setpoint.                 |
| A13 Wrn              | WRN             | YES  | Value measured on analog input 3 is greater than <i>A13 Wrn</i> setpoint.                |
| A13 Sd               | SD              | YES  | Value measured on analog input 3 is greater than <i>A13 Sd</i> setpoint.                 |
| Wrn Batt Volt        | WRN             | YES  | Battery voltage is out of limits given by <i>Batt Undervolt/Batt OverVolt</i> setpoints. |
| IOM Alx Wrn          | WRN             | YES  | Warning alarm configurable on the input of IG-IOM/IGS-PTM.                               |
| IOM Alx Sd           | SD              | YES  | Shutdown alarm configurable on the input of IG-IOM/IGS-PTM.                              |
| Binary input         | Configurable    | YES  | Configurable Warning/Shutdown  |

| Events specification | Protection type | Information on binary output available (See list of <a href="#">Binary outputs</a> ) | Description  |
|----------------------|-----------------|--|--|
|                      |                 |  | alarms on the inputs of IL-NT.   |
| Sd BatteryFlat       | SD              | YES  | If the controller switches off during starting sequence due to bad battery condition it doesn't try to start again and activates this protection.  |
| Sd Start Fail        | SD              | YES  | Gen-set start failed.  |
| ParamFail            | NONE            | NO   | Wrong checksum of parameters. Happends typically after downloading new firmware or changing of the parameter. The controller stays in INIT mode. Check all parameters, write at least one new parameter.   |
| Sd Gen Lx >, <V      | SD              | YES  | The generator voltage is out of limits given by <i>Gen &lt;V Sd</i> and <i>Gen &gt;V Sd</i> setpoints.   |
| Sd Gen V Unbal       | SD              | YES  | The generator voltage is unbalanced more than the value of <i>Volt Unbal Sd</i> setpoint.  |
| Sd Gen >Freq         | SD              | YES  | The generator frequency is out of limits given by <i>Gen &gt;Freq Sd</i> and <i>Gen &lt;Freq Sd</i> setpoints.   |
| Wrn Amps Unbal       | SD              | NO   | The generator current is unbalanced.   |
| Sd Overload          | SD              | YES  | The load is greater than the value given by <i>Overload</i> setpoint.  |
| Sd Overspeed         | SD              | YES  | The protection comes active if the speed is greater than <i>Overspeed</i> setpoint.  |
| Sd Underspeed        | SD              | YES  | During starting of the engine when the RPM reach the value of <i>Starting RPM</i> setpoint the starter is switched off and the speed of the engine can drop under <i>Starting RPM</i> again. Then the Underspeed protection becomes active. Protection evaluation starts 5 seconds after reaching <i>StartingRPM</i> . |
| EmergencyStop        | SD              | NO   | If the input <i>Emergency Stop</i> is opened shutdown is immediately activated.  |
| GCB Fail             | SD              | NO   | Failure of generator circuit breaker.  |
| MCB Fail             | MF              | NO   | Failure of mains circuit breaker.  |
| SD RPMMeasFail       | SD              | NO   | Failure of magnetic pick-up sensor for speed measurement.  |
| Sd Stop Fail         | SD              | YES  | Gen-set stop failed.   |
| WrnMaintenance       | WRN             | NO   | The period for servicing is set by the <i>Maintenance</i> setpoint. The protection comes active if the running hours of the engine reach this value.   |
| ChargeAlt Fail       | WRN             | YES  | Failure of alternator for charging the battery.  |
| Sd Override          | WRN             | NO   | The protection is active if the output <i>Sd Override</i> is closed.   |
| *Wrn RA15 Fail       | WRN             | NO   | Warning alarm in case of lost connection to IGL-RA15 module.   |
| *Sd IOM Fail         | SD              | NO   | Shutdown alarm in case of lost connection to IG-IOM/IGS-PTM module.  |
| Wrn ECU Alarm        | WRN             | NO   | ECU alarm list is not empty  |

| Events specification | Protection type | Information on binary output available (See list of <a href="#">Binary outputs</a> ) | Description                |
|----------------------|-----------------|--|----------------------------|
| Low BackupBatt       | WRN             | NO   | RTC backup battery is flat |

## History file

InteliLite NT stores a record of each important event into the history file. The history file seats 117 records. When the history file is full, the oldest records are removed.

### Hint:

To force history download in LiteEdit (direct,,modem or Internet) open History window and select History | Read history command.

## Record structure

|              |  |
|--------------|--|
| Abbreviation | Historical value   |
| Num          | Number of historical event   |
| Reason       | Event specification  |
| Date         | Date of historical event in format DD/MM/YY                            |
| Time         | Time of historical event in format HH:MM:SS                            |
| Mode         | Controller's mode  |
| RPM          | Engine speed   |
| Pwr          | Generator active power   |
| PF           | Generator PF   |
| LChr         | Character of the load  |
| Gfrq         | Generator frequency  |
| Vg1          | Generator voltage L1   |
| Vg2          | Generator voltage L2   |
| Vg3          | Generator voltage L3   |
| Ig1          | Generator current L1   |
| Ig2          | Generator current L2   |
| Ig3          | Generator current L3   |
| Mfrq         | Mains frequency  |
| Vm1          | Mains voltage L1   |
| Vm2          | Mains voltage L2   |
| Vm3          | Mains voltage L3   |
| UBat         | Battery voltage  |
| OilP         | IL-NT Analog input 1 value ( default Oil pressure)                     |
| EngT         | IL-NT Analog input 2 value ( default Water temperature)                |
| FLvl         | IL-NT Analog input 3 value ( default Fuel level)                       |
| BIN          | Binary inputs IL-NT  |
| BOUT         | Binary outputs IL-NT   |
| FC           | ECU alarm FailureCode  |
| FMI          | ECUalarm Failure Mode Identifier                                       |
| AIM1         | IG-IOM, IGS-PTM Analog input 1 value (when configured IG-IOM, IGS-PTM) |
| AIM2         | IG-IOM, IGS-PTM Analog input 2 value (when configured IG-IOM, IGS-PTM) |
| AIM3         | IG-IOM, IGS-PTM Analog input 3 value (when configured IG-IOM, IGS-PTM) |
| AIM4         | IG-IOM, IGS-PTM Analog input 4 value (when configured IG-IOM, IGS-PTM) |
| BIM          | IG-IOM, IGS-PTM Binary inputs (when configured IG-IOM, IGS-PTM)        |
| BOM          | IG-IOM, IGS-PTM Binary outputs (when configured IG-IOM, IGS-PTM)       |



# User Interface

InteliLite NT controller enables to choose the user interface as customer prefers. There are two choices available: USER or ENGINEER interface.

USER interface is ment for customers, who prefer simple and easy menu and don't wish to list in complex menu or change the settings of controller. In USER interface controller displayes measuring, alarm and init screens.

ENGINEER interface is dedicated for engineers and allow changing the settings of controller, reviewing the history, measurement, alarms and grant the full access to all controllers screens with are available. This mode is default.

**For details how to change the User Interface, please see the IL-NT Operator Guide.**


# Remote Control and Data Logging

## ***Direct connection to the PC***

InteliLite can be connected directly with PC via optional IL-NT RS232 interface. Use the standard serial cable to connect PC with InteliLite.

### *Hint:*

Make sure the grounding system on controller and PC – COM port (negative of the PC DC supply) are identical – before the first direct connection. There must not be any voltage between these two points otherwise the internal reversible fuse in controller burns out. The simple solution is to assure, that the PC supply 240/20V is ground free (GND terminal is not connected).

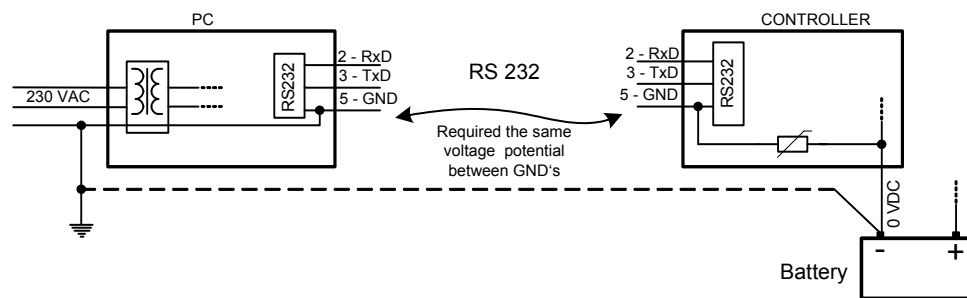

## ***PC software – LiteEdit***

On the PC (for direct or modem connection) has to be installed the ComAp's software package LiteEdit. (based on Windows 95 or newer platform)

LiteEdit enables:

- read the quantities
- adjust all set points
- control the engine
- configure the controller
- select software configuration
- modify alarm inputs and outputs
- modify password, commands protections
- direct, modem or Internet communication

## ***Modbus protocol***

The selection of the function of iL serial port is done via the setpoint *RS232 mode* in *Basic settings*

- 9600 bps, 8 data bits, 1 stop bit, no parity
- Transfer mode RTU
- Function 3 (Read Multiple Registers)
- Function 6 (Write Single Register)
- Function 16 (Write Multiple Registers)
- The response to an incoming message is sent with minimum 4.096 ms delay after message reception

The complete description of Modbus communication protocol can be found in *Modbus Protocol Reference Guide PI-MBUS-300* and *Open Modbus Specification Release 1.0*. Both documents are available from web site at <http://www.modicon.com/openmbus/>.

Communication object vs. Register

All the data intended for communication has its representation as communication objects in the controller. The communication object is represented by the n-byte array in the controller memory and identified by the unique 16-bit communication object number. The register, according to Modbus communication protocol, represents a two-byte data and in communication functions is referenced by 16-bit register address. Further in the description of communication functions **the communication object number will always be used as a register address** and length of the communication object will be expressed by number of registers. **Just one communication object can be read or written by one communication function.**

Hint:

To obtain communication object numbers it is possible to download the actual controller description on-line from controller or from (ail) archive and use “export data” function from LiteEdit software.

Communication object list (exported from default IL-NT-AMF25 archive)

**Setpoints of AMF25:**

| Name  | Firmware ver.             | Application | Date      | App. ver. | Ser. num. | Filename            |
|-------|---------------------------|-------------|-----------|-----------|-----------|---------------------|
| IL-NT | IL-NT-1.3<br>R:11.07.2008 | AMF25       | 11.7.2008 | 1,3       | 12345678  | IL-NT-AMF25-1.3.AIL |

| Group          | Name           | Value    | Dimension | Password | Com. obj. | Low limit | High limit | Data type    |
|----------------|----------------|----------|-----------|----------|-----------|-----------|------------|--------------|
| Basic Settings | Gen-set Name   | IL-NT    |           | No       | 8637      |           |            | Short string |
| Basic Settings | Nominal Power  | 200      | kW        | No       | 8276      | 1         | 32000      | Unsigned 16  |
| Basic Settings | Nomin Current  | 350      | A         | No       | 8275      | 1         | 10000      | Unsigned 16  |
| Basic Settings | CT Ratio       | 2000     | /5A       | No       | 8274      | 1         | 5000       | Unsigned 16  |
| Basic Settings | PT Ratio       | 1,0      | /1        | No       | 9579      | 0,1       | 500,0      | Unsigned 16  |
| Basic Settings | Vm PT Ratio    | 1,0      | V/V       | No       | 9580      | 0,1       | 500,0      | Unsigned 16  |
| Basic Settings | Nominal Volts  | 231      | V         | No       | 8277      | 80        | 20000      | Unsigned 16  |
| Basic Settings | Nominal Freq   | 50       | Hz        | No       | 8278      | 45        | 65         | Unsigned 16  |
| Basic Settings | Gear Teeth     | 120      |           | No       | 8252      | 0         | 500        | Unsigned 16  |
| Basic Settings | Nominal RPM    | 1500     | RPM       | No       | 8253      | 100       | 4000       | Unsigned 16  |
| Basic Settings | ControllerMode | OFF      |           | No       | 8315      |           |            | String list  |
| Basic Settings | FltResGoToMAN  | DISABLED |           | No       | 9983      |           |            | String list  |
| Basic Settings | ControllerAddr | 1        |           | Yes      | 24537     | 1         | 32         | Unsigned 8   |
| Basic Settings | COM1 Mode      | DIRECT   |           | Yes      | 24522     |           |            | String list  |
| Basic Settings | COM2 Mode      | DIRECT   |           | Yes      | 24451     |           |            | String list  |
| Basic Settings | ModemIniString |          |           | No       | 24436     |           |            | Long string  |
| Basic Settings | ModbusComSpeed | 9600     | bps       | No       | 24477     |           |            | String list  |
| Engine Params  | Starting RPM   | 25       | %         | No       | 8254      | 5         | 50         | Unsigned 8   |
| Engine Params  | Starting Oil P | 4,5      | Bar       | No       | 9681      | 0,0       | 10,0       | Integer 16   |
| Engine Params  | Prestart Time  | 2        | s         | No       | 8394      | 0         | 600        | Unsigned 16  |
| Engine Params  | MaxCrank Time  | 5        | s         | No       | 8256      | 1         | 60         | Unsigned 8   |
| Engine Params  | CrnkFail Pause | 8        | s         | No       | 8257      | 5         | 60         | Unsigned 8   |

|                |                |          |     |    |       |       |        |             |
|----------------|----------------|----------|-----|----|-------|-------|--------|-------------|
| Engine Params  | Crank Attempts | 3        |     | No | 8255  | 1     | 10     | Unsigned 8  |
| Engine Params  | Idle Time      | 12       | s   | No | 9097  | 0     | 600    | Unsigned 16 |
| Engine Params  | Min Stab Time  | 2        | s   | No | 8259  | 1     | 10     | Unsigned 16 |
| Engine Params  | Max Stab Time  | 10       | s   | No | 8313  | 2     | 300    | Unsigned 16 |
| Engine Params  | Cooling Speed  | NOMINAL  |     | No | 10046 |       |        | String list |
| Engine Params  | Cooling Time   | 30       | s   | No | 8258  | 0     | 3600   | Unsigned 16 |
| Engine Params  | Stop Time      | 60       | s   | No | 9815  | 0     | 240    | Unsigned 16 |
| Engine Params  | Fuel Solenoid  | DIESEL   |     | No | 9100  |       |        | String list |
| Engine Params  | D+ Function    | DISABLED |     | No | 9683  |       |        | String list |
| Engine Params  | ECU FreqSelect | DEFAULT  |     | No | 10266 |       |        | String list |
| Engine Params  | ECU SpeedAdj   | 50       | %   | No | 9948  | 0     | 100    | Unsigned 16 |
| Engine Params  | Fuel Pump ON   | 20       | %   | No | 10100 | -100  | 90     | Integer 16  |
| Engine Params  | Fuel Pump OFF  | 90       | %   | No | 10101 | 20    | 10000  | Integer 16  |
| Engine Protect | ProtectHoldoff | 5        | s   | No | 8262  | 0     | 300    | Unsigned 16 |
| Engine Protect | Horn Timeout   | 10       | s   | No | 8264  | 0     | 600    | Unsigned 16 |
| Engine Protect | Overspeed Sd   | 115      | %   | No | 8263  | 50    | 150    | Unsigned 16 |
| Engine Protect | AI1 Wrn        | 2,0      | Bar | No | 8369  | -10,0 | 1000,0 | Integer 16  |
| Engine Protect | AI1 Sd         | 1,0      | Bar | No | 8370  | -10,0 | 1000,0 | Integer 16  |
| Engine Protect | AI1 Del        | 3        | s   | No | 8365  | 0     | 900    | Unsigned 16 |
| Engine Protect | AI2 Wrn        | 80       | °C  | No | 8375  | -100  | 10000  | Integer 16  |
| Engine Protect | AI2 Sd         | 90       | °C  | No | 8376  | -100  | 10000  | Integer 16  |
| Engine Protect | AI2 Del        | 5        | s   | No | 8371  | 0     | 900    | Unsigned 16 |
| Engine Protect | AI3 Wrn        | 20       | %   | No | 8381  | -100  | 10000  | Integer 16  |
| Engine Protect | AI3 Sd         | 10       | %   | No | 8382  | -100  | 10000  | Integer 16  |
| Engine Protect | AI3 Del        | 10       | s   | No | 8377  | 0     | 900    | Unsigned 16 |
| Engine Protect | Batt Overvolt  | 36,0     | V   | No | 9587  | 18,0  | 40,0   | Integer 16  |
| Engine Protect | Batt Undervolt | 18,0     | V   | No | 8387  | 8,0   | 40,0   | Integer 16  |
| Engine Protect | Batt Volt Del  | 5        | s   | No | 8383  | 0     | 600    | Unsigned 16 |
| Engine Protect | Maintenance    | 9999     | h   | No | 9648  | 0     | 10000  | Unsigned 16 |
| Gener Protect  | Overload Sd    | 120      | %   | No | 8280  | 0     | 200    | Unsigned 16 |
| Gener Protect  | Overload Del   | 5,0      | s   | No | 8281  | 0,0   | 600,0  | Unsigned 16 |
| Gener Protect  | Short Crct Sd  | 250      | %   | No | 8282  | 100   | 500    | Unsigned 16 |
| Gener Protect  | Short Crct Del | 0,00     | s   | No | 9991  | 0,00  | 10,00  | Unsigned 16 |
| Gener Protect  | Amps IDMT Del  | 4,0      | s   | No | 8283  | 1,0   | 60,0   | Unsigned 16 |
| Gener Protect  | Amps Unbal Sd  | 50       | %   | No | 8284  | 1     | 200    | Unsigned 16 |
| Gener Protect  | Amps Unbal Del | 5,0      | s   | No | 8285  | 0,0   | 600,0  | Unsigned 16 |

|                |                |           |    |    |      |       |       |             |
|----------------|----------------|-----------|----|----|------|-------|-------|-------------|
| Gener Protect  | Gen >V Sd      | 110       | %  | No | 8291 | 70    | 200   | Unsigned 16 |
| Gener Protect  | Gen <V Sd      | 70        | %  | No | 8293 | 0     | 110   | Unsigned 16 |
| Gener Protect  | Gen V Del      | 3,0       | s  | No | 8292 | 0,0   | 600,0 | Unsigned 16 |
| Gener Protect  | Volt Unbal Sd  | 10        | %  | No | 8288 | 1     | 200   | Unsigned 16 |
| Gener Protect  | Volt Unbal Del | 3,0       | s  | No | 8289 | 0,0   | 600,0 | Unsigned 16 |
| Gener Protect  | Gen >Freq Sd   | 110,0     | %  | No | 8296 | 85,0  | 200,0 | Unsigned 16 |
| Gener Protect  | Gen <Freq Sd   | 85,0      | %  | No | 8298 | 0,0   | 110,0 | Unsigned 16 |
| Gener Protect  | Gen Freq Del   | 3,0       | s  | No | 8297 | 0,0   | 600,0 | Unsigned 16 |
| AutoMains Fail | RetFromIsland  | AUTO      |    | No | 9590 |       |       | String list |
| AutoMains Fail | EmergStart Del | 5         | s  | No | 8301 | 0     | 6000  | Unsigned 16 |
| AutoMains Fail | MainsReturnDel | 20        | s  | No | 8302 | 1     | 3600  | Unsigned 16 |
| AutoMains Fail | Fwd Return Del | 1,0       | s  | No | 8303 | 0,0   | 600,0 | Unsigned 16 |
| AutoMains Fail | MCB Close Del  | 1,0       | s  | No | 8389 | 0,0   | 60,0  | Unsigned 16 |
| AutoMains Fail | Mains >V       | 110       | %  | No | 8305 | 60    | 150   | Unsigned 16 |
| AutoMains Fail | Mains <V       | 60        | %  | No | 8307 | 50    | 110   | Unsigned 16 |
| AutoMains Fail | Mains V Del    | 2,0       | s  | No | 8306 | 0,0   | 600,0 | Unsigned 16 |
| AutoMains Fail | Mains V Unbal  | 10        | %  | No | 8446 | 1     | 150   | Unsigned 16 |
| AutoMains Fail | Mains VUnb Del | 2,0       | s  | No | 8447 | 0,0   | 60,0  | Unsigned 16 |
| AutoMains Fail | Mains >Freq    | 102,0     | %  | No | 8310 | 98,0  | 150,0 | Unsigned 16 |
| AutoMains Fail | Mains <Freq    | 98,0      | %  | No | 8312 | 50,0  | 102,0 | Unsigned 16 |
| AutoMains Fail | Mains Freq Del | 0,5       | s  | No | 8311 | 0,0   | 60,0  | Unsigned 16 |
| AutoMains Fail | MCB Logic      | CLOSE-OFF |    | No | 8444 |       |       | String list |
| AutoMains Fail | ReturnFromTEST | MANUAL    |    | No | 8618 |       |       | String list |
| AutoMains Fail | MCB Opens On   | GENRUN    |    | No | 9850 |       |       | String list |
| Extension I/O  | IOM AI1 Wrn    | 0         | U4 | No | 8762 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI1 Sd     | 0         | U4 | No | 8766 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI1 Del    | 5         | s  | No | 8770 | 0     | 900   | Unsigned 16 |
| Extension I/O  | IOM AI2 Wrn    | 0         | U5 | No | 8763 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI2 Sd     | 0         | U5 | No | 8767 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI2 Del    | 5         | s  | No | 8771 | 0     | 900   | Unsigned 16 |
| Extension I/O  | IOM AI3 Wrn    | 0         | U6 | No | 8764 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI3 Sd     | 0         | U6 | No | 8768 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI3 Del    | 5         | s  | No | 8772 | 0     | 900   | Unsigned 16 |
| Extension I/O  | IOM AI4 Wrn    | 0         | U7 | No | 8765 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI4 Sd     | 0         | U7 | No | 8769 | -100  | 10000 | Integer 16  |
| Extension I/O  | IOM AI4 Del    | 5         | s  | No | 8773 | 0     | 900   | Unsigned 16 |
| Extension I/O  | IOM AI1 Calibr | 0         | U4 | No | 8793 | -1000 | 1000  | Integer 16  |

|               |                |          |     |    |       |        |       |             |
|---------------|----------------|----------|-----|----|-------|--------|-------|-------------|
| Extension I/O | IOM AI2 Calibr | 0        | U5  | No | 8794  | -1000  | 1000  | Integer 16  |
| Extension I/O | IOM AI3 Calibr | 0        | U6  | No | 8795  | -1000  | 1000  | Integer 16  |
| Extension I/O | IOM AI4 Calibr | 0        | U7  | No | 8796  | -1000  | 1000  | Integer 16  |
| Date/Time     | Time Stamp Per | 60       | min | No | 8979  | 0      | 240   | Unsigned 8  |
| Date/Time     | SummerTimeMod  | DISABLED |     | No | 8727  |        |       | String list |
| Date/Time     | Time           | 0:00:00  |     | No | 24554 |        |       | Time        |
| Date/Time     | Date           | 1.1.2006 |     | No | 24553 |        |       | Date        |
| Date/Time     | Timer1 Repeat  | NONE     |     | No | 10045 |        |       | String list |
| Date/Time     | Timer1 ON Time | 5:00:00  |     | No | 10042 |        |       | Time        |
| Date/Time     | Timer1Duration | 5        | min | No | 10044 | 1      | 1440  | Unsigned 16 |
| Date/Time     | Timer2 Repeat  | NONE     |     | No | 10202 |        |       | String list |
| Date/Time     | Timer2 ON Time | 5:00:00  |     | No | 10199 |        |       | Time        |
| Date/Time     | Timer2Duration | 5        | min | No | 10201 | 1      | 1440  | Unsigned 16 |
| Sensors Spec  | AI1Calibration | 0,0      | Bar | No | 8431  | -100,0 | 100,0 | Integer 16  |
| Sensors Spec  | AI2Calibration | 0        | °C  | No | 8407  | -1000  | 1000  | Integer 16  |
| Sensors Spec  | AI3Calibration | 0        | %   | No | 8467  | -1000  | 1000  | Integer 16  |
| SMS/E-Mail    | Yel Alarm Msg  | OFF      |     | No | 8482  |        |       | String list |
| SMS/E-Mail    | Red Alarm Msg  | OFF      |     | No | 8484  |        |       | String list |
| SMS/E-Mail    | TelNo/Addr Ch1 |          |     | No | 9597  |        |       | Long string |
| SMS/E-Mail    | TelNo/Addr Ch2 |          |     | No | 9598  |        |       | Long string |

### Values of AMF25:

| Name  | Firmware ver.             | Application | Date      | App. ver. | Ser. num. | Filename            |
|-------|---------------------------|-------------|-----------|-----------|-----------|---------------------|
| IL-NT | IL-NT-1.3<br>R:11.07.2008 | AMF25       | 11.7.2008 | 1,3       | 12345678  | IL-NT-AMF25-1.3.AIL |

| Group     | Name           | Value | Dimension | Com. obj. | Data type   |
|-----------|----------------|-------|-----------|-----------|-------------|
| Engine    | RPM            | 1500  | RPM       | 8209      | Unsigned 16 |
| Engine    | Diagnostic ECU | [010] |           | 10034     | Binary 8    |
| Engine    | Fuel Rate ECU  | 0,0   | L/h       | 9860      | Unsigned 16 |
| Engine    | Cool Temp ECU  | 22    | °C        | 9855      | Integer 16  |
| Engine    | IntakeTemp ECU | 20    | °C        | 9878      | Integer 16  |
| Engine    | Oil Press ECU  | 0,0   | Bar       | 10354     | Integer 16  |
| Engine    | BoostPress ECU | 0,0   | Bar       | 9877      | Unsigned 8  |
| Engine    | Oil Temp ECU   | 22    | °C        | 9857      | Integer 16  |
| Generator | Gen kW         | 150   | kW        | 8202      | Integer 16  |
| Generator | Gen kW L1      | 50    | kW        | 8524      | Integer 16  |
| Generator | Gen kW L2      | 50    | kW        | 8525      | Integer 16  |
| Generator | Gen kW L3      | 50    | kW        | 8526      | Integer 16  |
| Generator | Gen kVAr       | 15    | kVAr      | 8203      | Integer 16  |

|                |                |           |      |       |             |
|----------------|----------------|-----------|------|-------|-------------|
| Generator      | Gen kVAr L1    | 5         | kVAr | 8527  | Integer 16  |
| Generator      | Gen kVAr L2    | 5         | kVAr | 8528  | Integer 16  |
| Generator      | Gen kVAr L3    | 5         | kVAr | 8529  | Integer 16  |
| Generator      | Gen kVA        | 153       | kVA  | 8565  | Integer 16  |
| Generator      | Gen kVA L1     | 51        | kVA  | 8530  | Integer 16  |
| Generator      | Gen kVA L2     | 51        | kVA  | 8531  | Integer 16  |
| Generator      | Gen kVA L3     | 51        | kVA  | 8532  | Integer 16  |
| Generator      | Gen PF         | 1,00      |      | 8204  | Integer 8   |
| Generator      | Gen Load char  | R         |      | 8395  | Char        |
| Generator      | Gen PF L1      | 1,00      |      | 8533  | Integer 8   |
| Generator      | Gen Ld Char L1 | R         |      | 8626  | Char        |
| Generator      | Gen PF L2      | 1,00      |      | 8534  | Integer 8   |
| Generator      | Gen Ld Char L2 | R         |      | 8627  | Char        |
| Generator      | Gen PF L3      | 1,00      |      | 8535  | Integer 8   |
| Generator      | Gen Ld Char L3 | R         |      | 8628  | Char        |
| Generator      | Gen freq       | 50,0      | Hz   | 8210  | Unsigned 16 |
| Generator      | Gen V L1-N     | 230       | V    | 8192  | Unsigned 16 |
| Generator      | Gen V L2-N     | 230       | V    | 8193  | Unsigned 16 |
| Generator      | Gen V L3-N     | 230       | V    | 8194  | Unsigned 16 |
| Generator      | Gen V L1-L2    | 398       | V    | 9628  | Unsigned 16 |
| Generator      | Gen V L2-L3    | 398       | V    | 9629  | Unsigned 16 |
| Generator      | Gen V L3-L1    | 398       | V    | 9630  | Unsigned 16 |
| Generator      | Gen A L1       | 41        | A    | 8198  | Unsigned 16 |
| Generator      | Gen A L2       | 41        | A    | 8199  | Unsigned 16 |
| Generator      | Gen A L3       | 41        | A    | 8200  | Unsigned 16 |
| Mains          | Mains V L1-N   | 231       | V    | 8195  | Unsigned 16 |
| Mains          | Mains V L2-N   | 230       | V    | 8196  | Unsigned 16 |
| Mains          | Mains V L3-N   | 230       | V    | 8197  | Unsigned 16 |
| Mains          | Mains V L1-L2  | 398       | V    | 9631  | Unsigned 16 |
| Mains          | Mains V L2-L3  | 398       | V    | 9632  | Unsigned 16 |
| Mains          | Mains V L3-L1  | 398       | V    | 9633  | Unsigned 16 |
| Mains          | Mains freq     | 50,0      | Hz   | 8211  | Unsigned 16 |
| Controller I/O | Battery Volts  | 24,3      | V    | 8213  | Integer 16  |
| Controller I/O | D+             | 5,7       | V    | 10603 | Integer 16  |
| Controller I/O | Oil Pressure   | 15,6      | Bar  | 8227  | Integer 16  |
| Controller I/O | Engine Temp    | 50        | °C   | 8228  | Integer 16  |
| Controller I/O | Fuel Level     | 99        | %    | 8229  | Integer 16  |
| Controller I/O | Bin Inputs     | [1111001] |      | 8235  | Binary 16   |
| Controller I/O | Bin Outputs    | [1111000] |      | 8239  | Binary 16   |
| Extension I/O  | IOM AI1        | 10        | U4   | 8978  | Integer 16  |

|               |                |                    |    |       |             |
|---------------|----------------|--------------------|----|-------|-------------|
| Extension I/O | IOM AI2        | 20                 | U5 | 8759  | Integer 16  |
| Extension I/O | IOM AI3        | 30                 | U6 | 8760  | Integer 16  |
| Extension I/O | IOM AI4        | 40                 | U7 | 8761  | Integer 16  |
| Extension I/O | IOM Bin Inp    | [01000110]         |    | 8602  | Binary 16   |
| Extension I/O | IOM Bin Out    | [11011001]         |    | 8604  | Binary 16   |
| Extension I/O | RA Bin Out     | [1000100100000000] |    | 9849  | Binary 16   |
| Statistics    | Energy kWh     | 0                  |    | 8205  | Integer 32  |
| Statistics    | Energy kVARh   | 0                  |    | 8539  | Integer 32  |
| Statistics    | Run Hours      | 0,0                | h  | 8206  | Integer 32  |
| Statistics    | Num Starts     | 0                  |    | 8207  | Unsigned 16 |
| Statistics    | Maintenance    | 9999               | h  | 9648  | Unsigned 16 |
| Statistics    | Num E-Stops    | 0                  |    | 11195 | Unsigned 32 |
| Statistics    | Shutdowns      | 0                  |    | 11196 | Unsigned 32 |
| IL Info       | Engine State   | #####              |    | 8330  | Unsigned 16 |
| IL Info       | Breaker State  | #####              |    | 8455  | Unsigned 16 |
| IL Info       | Timer Text     | #####              |    | 8954  | Unsigned 16 |
| IL Info       | Timer Value    | 0                  | s  | 8955  | Unsigned 16 |
| IL Info       | FW Version     | 0,0                |    | 8393  | Unsigned 8  |
| IL Info       | Application    | 6                  |    | 8480  | Unsigned 8  |
| IL Info       | FW Branch      | 1                  |    | 8707  | Unsigned 8  |
| IL Info       | PasswordDecode | #####              |    | 9090  | Unsigned 32 |
| Date/Time     | Time           | #####              |    | 24554 | Time        |
| Date/Time     | Date           | #####              |    | 24553 | Date        |

<sup>1</sup> In case of software malfunction DiagData shows the value that enables to locate possible bug in software. Include this number when reporting a software problem.



# Remote Communication

*Hint:*

Refer to IntelliCommunication guide for all additional information.

## Internet connection

---

IL-NT controllers can be monitored from LiteEdit 3.0 over the Internet using Internet Bridge (IG-IB) connected to the controller RS232 port.

## Recommended ISDN modem

---

- Askey TAS-200E
- ASUScom TA-220ST
- Develo Microlink ISDN i

## Recommended GSM modem

---

- Siemens M20, TC35, TC35i, ES75, MC39
- Wavecom M1200/WMOD2
- Wavecom - Maestro 20, dual 900/1800MHz.
- Wavecom – Fastrack M1306B, dual 900/1800 MHz (Fastrack M1206B is NOT recommended)
- FALCOM A2D, dual 900/1800MHz.

## GSM Modem setup

Prior to start work with GSM modem run following program for GSM proper setup.

Program writes all the necessary AT commands to configure the GSM modem properly for use with IL-NT.


This program runs independent on LiteEdit:

- Start MS Windows-Start-Program files - LiteEdit –Gm\_setup.exe.
- Select COM port
- Select iG-CU (=IS-CU) or iG-MU unit
- Press Setup button
- Follow commands in GSM Modem Setup window

Typical real baud rate for GSM data communication is 80 to 90 Bps.

*Hint:*

It is strongly recommended to use the same type of modem on the both sides (IL and PC) of connection.



## Mobile SIM card setting

---

- Adjust SIM card in GSM modem following way:
- enable data connection (when required)
- no PIN code

# Maintenance

## ***Backup battery replacement***

---

The internal backup battery should be replaced approx. every 5-7 years. Replace the battery, if the alarm *Low BackupBatt* occurs. Follow these instructions:

1. Disconnect all terminals from the controller and remove the controller from the switchboard.
2. Release the rear cover using a flat screwdriver or another suitable tool.



3. Remove all plug-in modules.
4. The battery is located in a holder on the circuit board. Remove the old battery with a small sharp screwdriver and push with a finger the new battery into the holder. Use only CR1225 lithium battery.



5. Put the rear cover back. Use slight pressure to lock the snaps into the housing. **Pay attention that the cover is in correct position and not upside down!**
6. Plug the modules back into the slots.
7. Power the controller on, adjust date and time and check all setpoints.

# Technical Data

## Power supply

|                                       |  |
|---------------------------------------|--|
| Voltage supply                        | 8-36V DC   |
| Consumption                           | 40-430mA depend on supply voltage and temperature  |
| Consumption depends on supply voltage | 0,104A at 8VDC<br>0,080A at 12VDC<br>0,051A at 24VDC<br>0,044A at 30VDC<br>0,040A at 36VDC |
| Allowed supply voltage drop-out:      | 100ms from min. 10V, return to min. 8V   |
| Battery voltage measurement tolerance | 2 % at 24V   |

*Hint:*

For the supply voltage less than 7V the backlight of the display is switched off.  
Short-term voltage drops (e.g. during the engine cranking) do not affect the operation at all.

## Operating conditions

|                                 |  |
|---------------------------------|--|
| Operating temperature IL-NT     | -20..+70°C   |
| Operating temperature IL-NT LT# | -40..+70°C   |
| Storage temperature             | -30..+80°C   |
| Protection front panel          | IP65   |
| Humidity                        | 95% without condensation                                     |
| Standard conformity             |  |
| Low Voltage Directive           | EN 61010-1:95 +A1:97   |
| Electromagnetic Compatibility   | EN 50081-1:94, EN 50081-2:96<br>EN 50082-1:99, EN 50082-2:97 |
| Vibration                       | 5 - 25 Hz, ±1,6mm<br>25 - 100 Hz, a = 4 g                    |
| Shocks                          | a = 200 m/s <sup>2</sup>                                     |

## #Low Temperature modification

LCD display limits controller operating temperature range to -20 °C - + 70 °C even if the other electronic components work in wider temperature range.

Internal preheating foil is mounted in IntelliLite<sup>NT</sup> LT to extend display operational temperature range. Preheating starts at temperature below 5 °C and preheating power depends on temperature and power supply voltage.

### Technical data

|                       | IL-NT Standard | Order code:IL-NT-xxxxx LT |
|-----------------------|----------------|---------------------------|
| Operating temperature | -20 °C..+70°C  | -40 °C..+70°C             |
| Storage temperature   | -30 °C..+80°C  | -30 °C..+80°C             |

Preheating foil increases controller current consumption

| Controller consumption at | No preheating | Preheating at ambient temperature |        |        |
|---------------------------|---------------|-----------------------------------|--------|--------|
|                           |               | 0 °C                              | -20 °C | -40 °C |
|                           |               |                                   |        |        |

|       |       |        |         |         |
|-------|-------|--------|---------|---------|
| 12VDC | 80 mA | +75 mA | +210 mA | +325 mA |
| 24VDC | 51 mA | +31 mA | +100 mA | +175 mA |

InteliLite LT works immediately after switch on at -30 °C and display becomes visible after a few minutes.

## ***Dimensions and weight***

---

|            |              |
|------------|--------------|
| Dimensions | 180x120x55mm |
| Weight     | 450g         |

## ***Mains and generator***

---

|                                 |         |
|---------------------------------|---------|
| Nominal frequency               | 50-60Hz |
| Frequency measurement tolerance | 0,2Hz   |

### **Current inputs**

|                                 |                             |
|---------------------------------|-----------------------------|
| Nominal input current (from CT) | 5 A                         |
| Load (CT output impedance)      | < 0,1 Ω                     |
| CT input burden                 | < 0,2 VA per phase (In=5A)  |
| Max. measured current from CT   | 10 A                        |
| Current measurement tolerance   | 2% from the Nominal current |
| Max. peak current from CT       | 150 A / 1s                  |
| Max. continuous current         | 12 A                        |

### **Voltage inputs**

|                               |  |
|-------------------------------|--|
| Measuring voltage range       | 0 – 277 VAC phase to neutral<br>0 – 480 VAC phase to phase |
| Maximal measured voltage      | 340 VAC phase to neutral<br>600 VAC phase to phase         |
| Input resistance              | 0.6 MΩ phase to phase<br>0.3 MΩ phase to neutral           |
| Voltage measurement tolerance | 2 % from the Nominal voltage                               |
| Overvoltage class             | III / 2 (EN61010)  |

## ***Binary inputs and outputs***

---

### **Binary inputs**

|  |          |
|--|----------|
| Number of inputs                                     | 7        |
| Input resistance                                     | 4,2 kΩ   |
| Input range  | 0-36 VDC |
| Switching voltage level for close contact indication | 0-2 V    |
| Max voltage level for open contact indication        | 8-36 V   |

### **Binary open collector outputs**

|                           |        |
|---------------------------|--------|
| Number of outputs         | 7      |
| Maximum current           | 0,5 A  |
| Maximum switching voltage | 36 VDC |

## ***Analog inputs***

---

|                            |                     |
|----------------------------|---------------------|
| Not electrically separated |                     |
| Number of inputs           | 3                   |
| Resolution                 | 10 bits             |
| Jumper selectable range    | V, Ohm(default), mA |
| Maximal resistance range   | 2500 Ω              |

|                                  |                                       |
|----------------------------------|---------------------------------------|
| Maximal voltage range            | 2.5 V                                 |
| Current range                    | 0 – 20 mA                             |
| Input impedance                  | 180 Ω for mA measuring                |
| Input impedance                  | > 100 kΩ for V measuring              |
| Resistance measurement tolerance | ± 2 % ± 2 Ω out of measured value     |
| Voltage measurement tolerance    | ± 1 % ± 1mV out of measured value     |
| Current measurement tolerance    | ± 2.5 % ± 0,5mA out of measured value |

### ***Speed pick-up input***

---

|                                 |  |
|---------------------------------|--|
| Type of sensor                  | magnetic pick-up (connection by shielded cable is recommended) |
| Minimum input voltage           | 2 Vpk-pk (from 4 Hz to 4 kHz)                                  |
| Maximum input voltage           | 50 Veff  |
| Minimum measured frequency      | 4 Hz   |
| Maximum measured frequency      | 10 kHz (min. input voltage 6Vpk-pk)                            |
| Frequency measurement tolerance | 0,2 %  |

### ***D+ Function***

---

|   |                       |
|---|-----------------------|
| Max. D+ output current                  | 300 mA                |
| Guaranteed level for signal Charging OK | 80% of supply voltage |

### ***\*CAN bus interface***

---

|                        |                         |
|------------------------|-------------------------|
| Galvanically separated |                         |
| Maximal CAN bus length | 200m                    |
| Speed                  | 250kBd                  |
| Nominal impedance      | 120Ω                    |
| Cable type             | twisted pair (shielded) |

Following dynamic cable parameters are important especially for maximal 200 meters CAN bus length and 32 iS-COM units connected:

|                                 |                           |
|---------------------------------|---------------------------|
| Nominal Velocity of Propagation | min. 75% (max. 4,4 ns/m)  |
| Wire crosscut                   | min. 0,25 mm <sup>2</sup> |
| Maximal attenuation (at 1 MHz)  | 2 dB / 100m               |

Recommended Industrial Automation & Process Control Cables:

BELDEN (see <http://www.belden.com>):

- 3082A DeviceBus for Allen-Bradley DeviceNet
- 3083A DeviceBus for Allen-Bradley DeviceNet
- 3086A DeviceBus for Honeywell SDS
- 3087A DeviceBus for Honeywell SDS
- 3084A DeviceBus for Allen-Bradley DeviceNet
- 3085A DeviceBus for Allen-Bradley DeviceNet
- 3105A Paired EIA Industrial RS485 cable

LAPP CABLE (see <http://www.lappcable.com>)

- Unitronic BUS DeviceNet Trunk Cable
- Unitronic BUS DeviceNet Drop Cable
- Unitronic BUS CAN
- Unitronic-FD BUS P CAN UL/CSA

## ***IL-NT RS232 interface (optional card)***

---

Plugs into IL-NT controller COMMUNICATIN MODULE port.

|                  |   |
|------------------|---|
| Maximal distance | 10m   |
| Maximum Speed    | Up to 57.6 kBd (DIRECT), 38.4kBd Analog modem, 9.6 kBd digital modem, 57.6 kBd (MODBUS) |

Recommend external converter:

ADVANTECH – ADAM 4520: RS232 to RS422/485 converter, DIN rail, automatic RS485 bus supervision, no external data flow control signals, galvanic isolated.

Recommended internal converter:

ADVANTECH – PCL-745B or PCL745S : Dual port RS422/485 Interface card, automatic RS485 bus supervision, no external data flow control signals, galvanic isolated

## ***IL-NT S-USB interface (optional card)***

---

Plugs into IL-NT controller COMMUNICATIN MODULE port.

|                  |   |
|------------------|---|
| Maximal distance | 5m  |
| Maximum Speed    | Up to 57.6 kBd (DIRECT), 38.4kBd Analog modem, 9.6 kBd digital modem, 57.6 kBd (MODBUS) |

Use only shielded A-B USB cables up to 5m length.

Recommend USB cable:

USBCABLE – ComAp A-B USB cable.

## ***IL-NT AOUT8 interface (optional card)***

---

Plugs into IL-NT controller EXTENSION MODULE port.

|                           |         |
|---------------------------|---------|
| Number of PWM outputs     | 8       |
| PWM frequency             | 250Hz   |
| Maximum current           | 0.5 A   |
| Maximum switching voltage | 36 VDC  |
| Output resistance         | 1Ω      |
| Resolution                | 10 bits |

## ***IGS-PTM***

---

|                           |  |
|---------------------------|--|
| Voltage supply            | 8-36V DC                                   |
| Consumption               | 0,1A depend on supply voltage              |
| Mechanical dimensions:    | 40 x 95 x 45 mm , DIN rail (35 mm) mounted |
| Interface to controller   | CAN  |
| Binary inputs and outputs | see IG-IOM                                 |
| Analog output             | see IG-IOM                                 |

### **Analog inputs**

Not electrically separated

|                          |            |
|--------------------------|------------|
| Number of inputs         | 4          |
| Resolution               | 10 bits    |
| Maximal resistance range | 0 – 250 Ω  |
| Maximal voltage range    | 0 – 100 mV |

|                                  |                                    |
|----------------------------------|------------------------------------|
| Maximal current range            | 0 – 20 mA                          |
| Resistance measurement tolerance | 1 % ± 2 Ω out of measured value    |
| Voltage measurement tolerance    | 1,5 % ± 1mV out of measured value  |
| Current measurement tolerance    | 2,5 % ±0,5mA out of measured value |

## ***IGL-RA15***

---

### **Power supply**

|                |   |
|----------------|---|
| Voltage supply | 8-36V DC  |
| Consumption    | 0,35-0,1A (+1A max horn output)<br>Depend on supply voltage |

### **Operating conditions**

|                        |            |
|------------------------|------------|
| Operating temperature  | -20..+70°C |
| Storage temperature    | -40..+80°C |
| Protection front panel | IP65       |

### **Dimensions and weight**

|            |              |
|------------|--------------|
| Dimensions | 180x120x55mm |
| Weight     | 950g         |

### **Horn output**

|                           |        |
|---------------------------|--------|
| Maximum current           | 1 A    |
| Maximum switching voltage | 36 VDC |

## ***IG-IB***

---

|                         |  |
|-------------------------|--|
| Voltage supply          | 8-36V DC                                   |
| Consumption             | 0,1A depend on supply voltage              |
| Mechanical dimensions:  | 95 x 96 x 43 mm , DIN rail (35 mm) mounted |
| Interface to controller | RS232                                      |
| Interface to modem      | RS232                                      |
| Interface to Ethernet   | RJ45 (10baseT)                             |
| Operating temperature   | -30..+70°C                                 |
| Storage temperature     | -30..+70°C                                 |